 




Eat N Rest Highchair

 
 
 
 
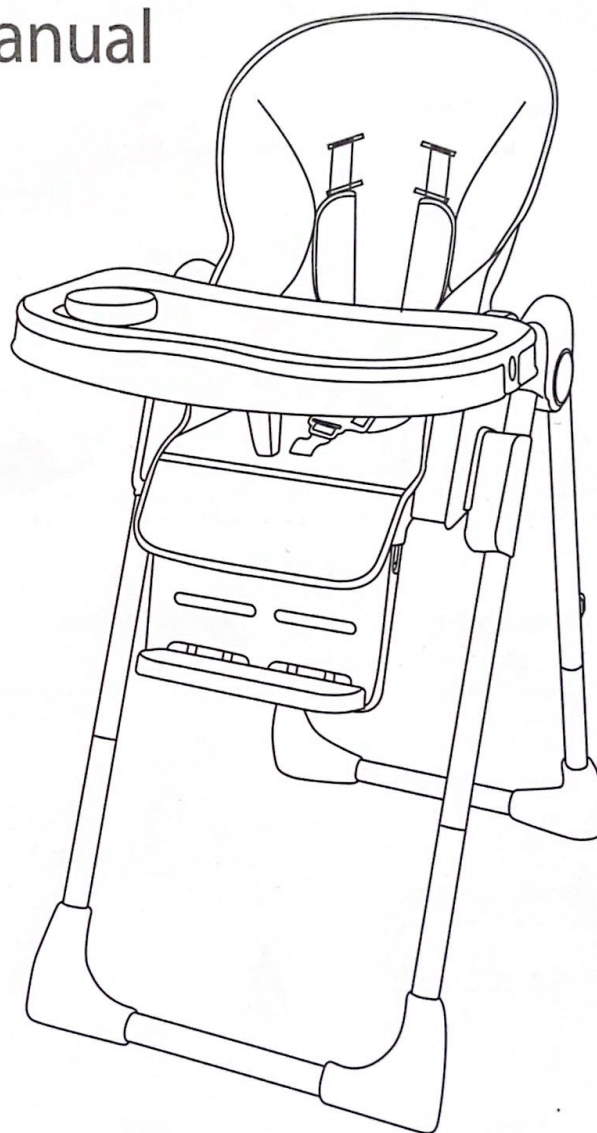 



Instruction Manual



**IMPORTANT:
READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE**

030622

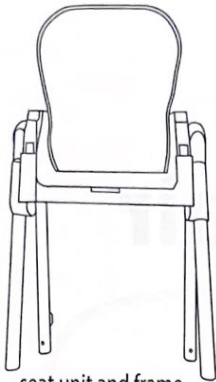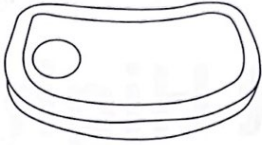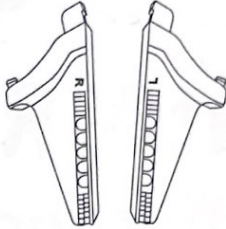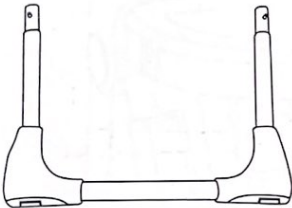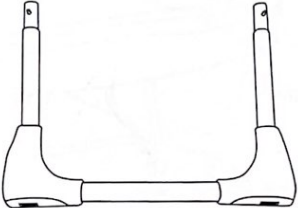Parts List
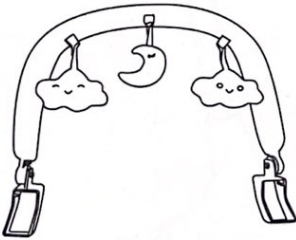 
<p>A</p>  <p>seat unit and frame x1</p>	<p>B</p>  <p>tray x1</p>	<p>C</p>  <p>armrest x2</p>
<p>D</p>  <p>front feet with stoppers x1</p>	<p>E</p>  <p>rear feet with wheels x1</p>	<p>F</p>  <p>leg rest x1</p>
<p>G</p>  <p>footrest x1</p>	<p>H</p>  <p>toy bar (sold separately)</p>	

 
 
 
Assembly

1. Assemble the feet (D) and (E) to the seat and frame (A).

NOTE: Ensure the feet with the feeding tray storage pegs are assembled to the rear of the highchair.

Each leg has a spring loaded pin. Line up one of the feet so that the small holes in the tops of the foot align with the spring pins.

Push firmly on the foot at either end until each of the 2 spring pins "click" into place. Repeat for the other foot.

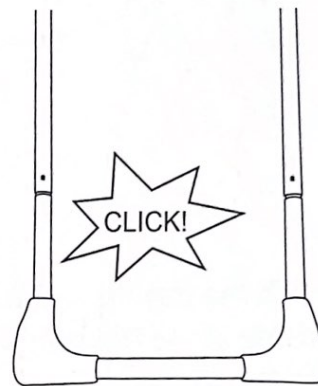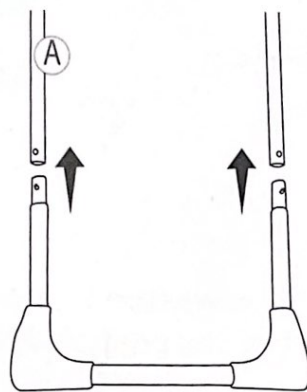
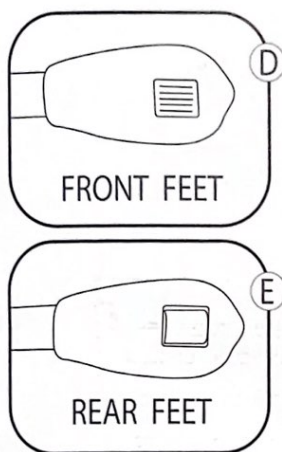


2. Open the seat unit and frame.

Press and hold the folding button and pull the rear legs out.


Release the button. A "click" will signal when secure.

  WARNING! WHEN UNFOLDING THE HIGHCHAIR, ALWAYS CHECK TO ENSURE LEGS ARE FULLY OPEN AND THE LOCK IS ENGAGED BEFORE USE.

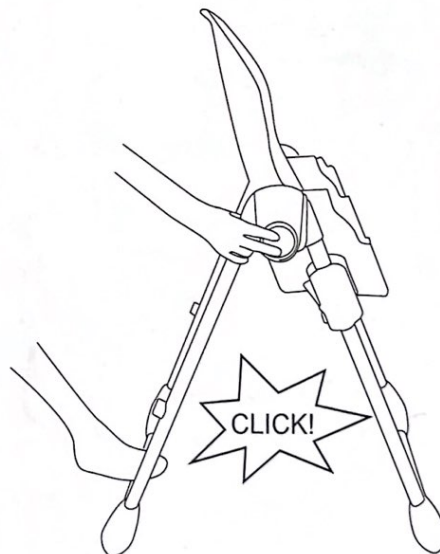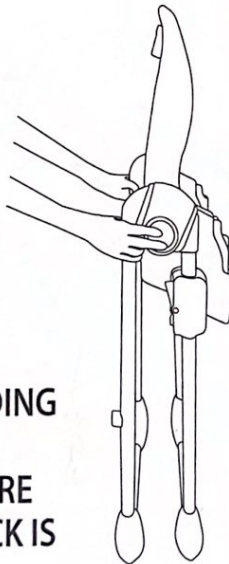


Assembly

 3. Locate the armrests (C) and note their orientation. For assembly, the flat side should be facing inside the seat. Align the armrests with the seat and press down firmly. A "click" will signal when secure.

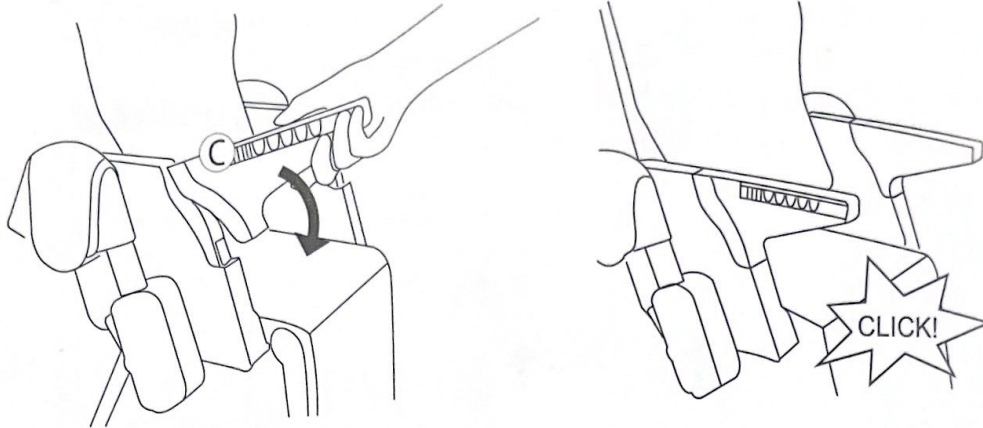


4. Attach the tray (B) to the seat. Pull outward on the levers found on the underside of the tray and slide the tray into position. Release the levers to lock the tray in place.

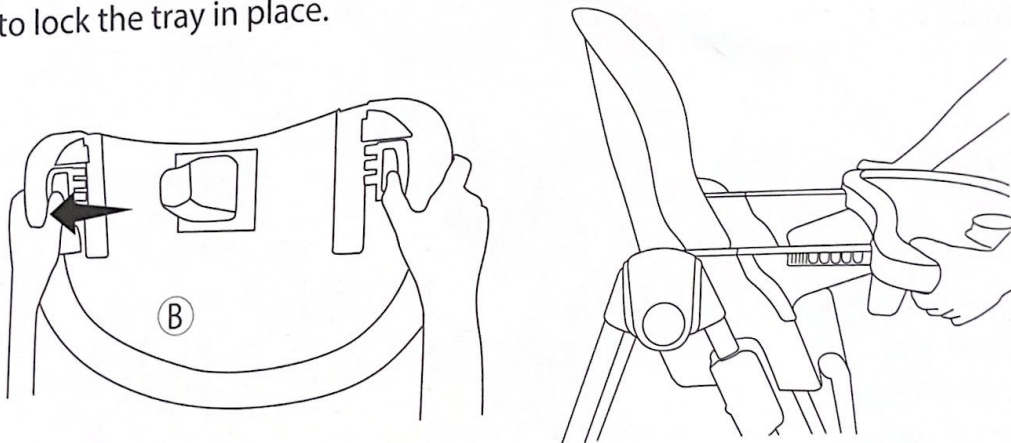 


Assembly

 5. Insert the leg rest (F) into the holes as illustrated.

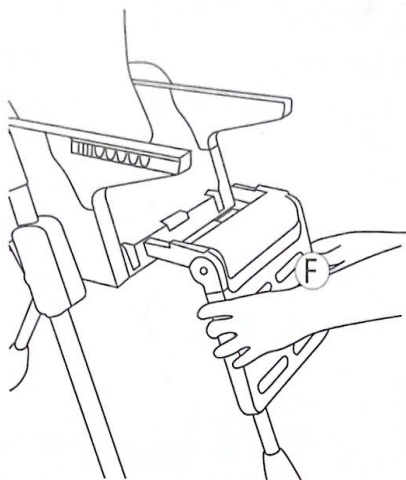

6. Attach the footrest (G) to the leg rest.

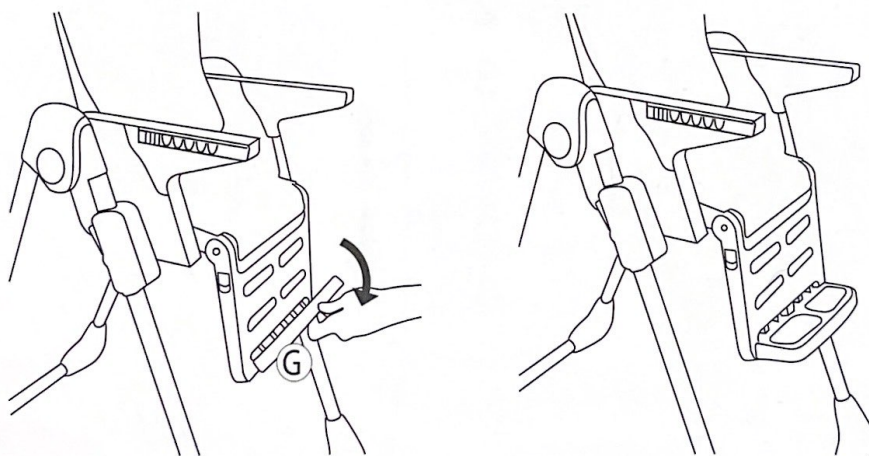 


Height Adjustment

WARNING! DO NOT ADJUST THE SEAT HEIGHT WHEN THE CHILD IS IN THE HIGHCHAIR.


The highchair has 6 height positions.

 Simultaneously press in both height adjustment buttons to raise or lower the seat. Release both of the locks at the required height.

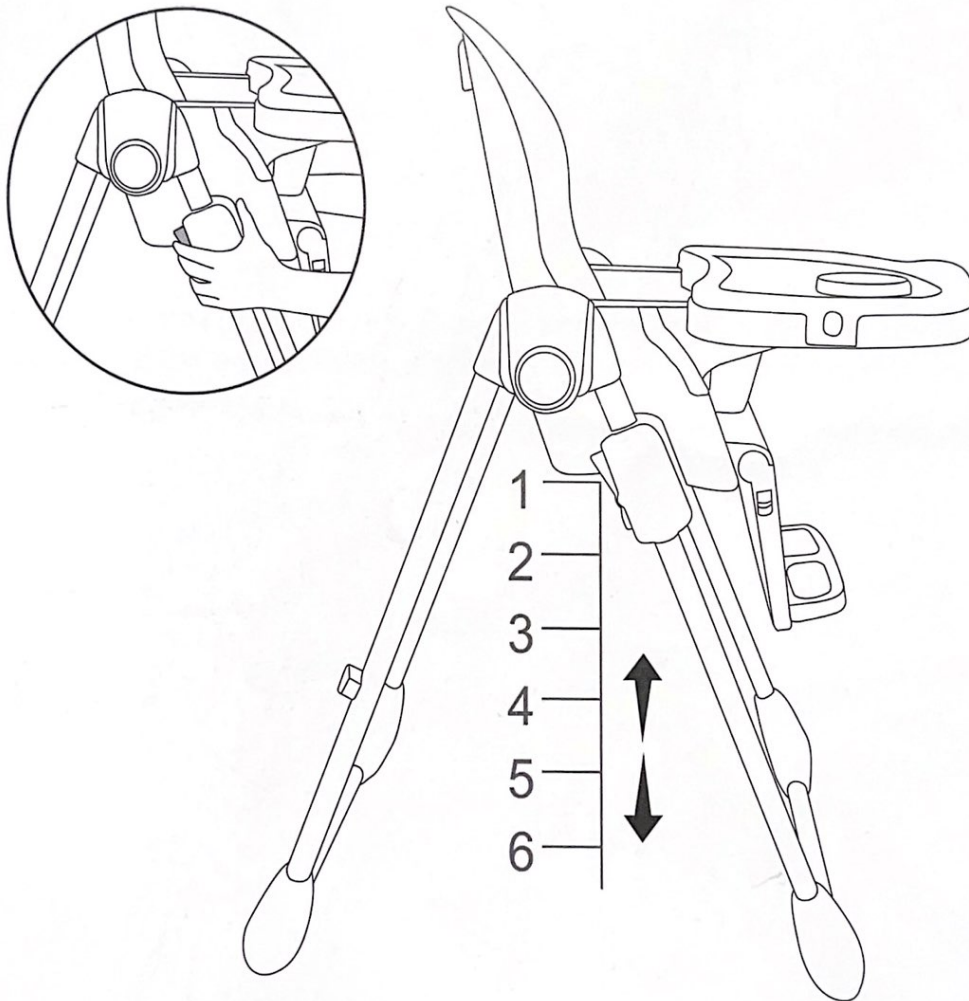



Backrest Adjustment

 The highchair has 3 backrest positions.
Pull up on the plastic lever found on the back of the seat and position the backrest as required. Release the mechanism to secure into place.

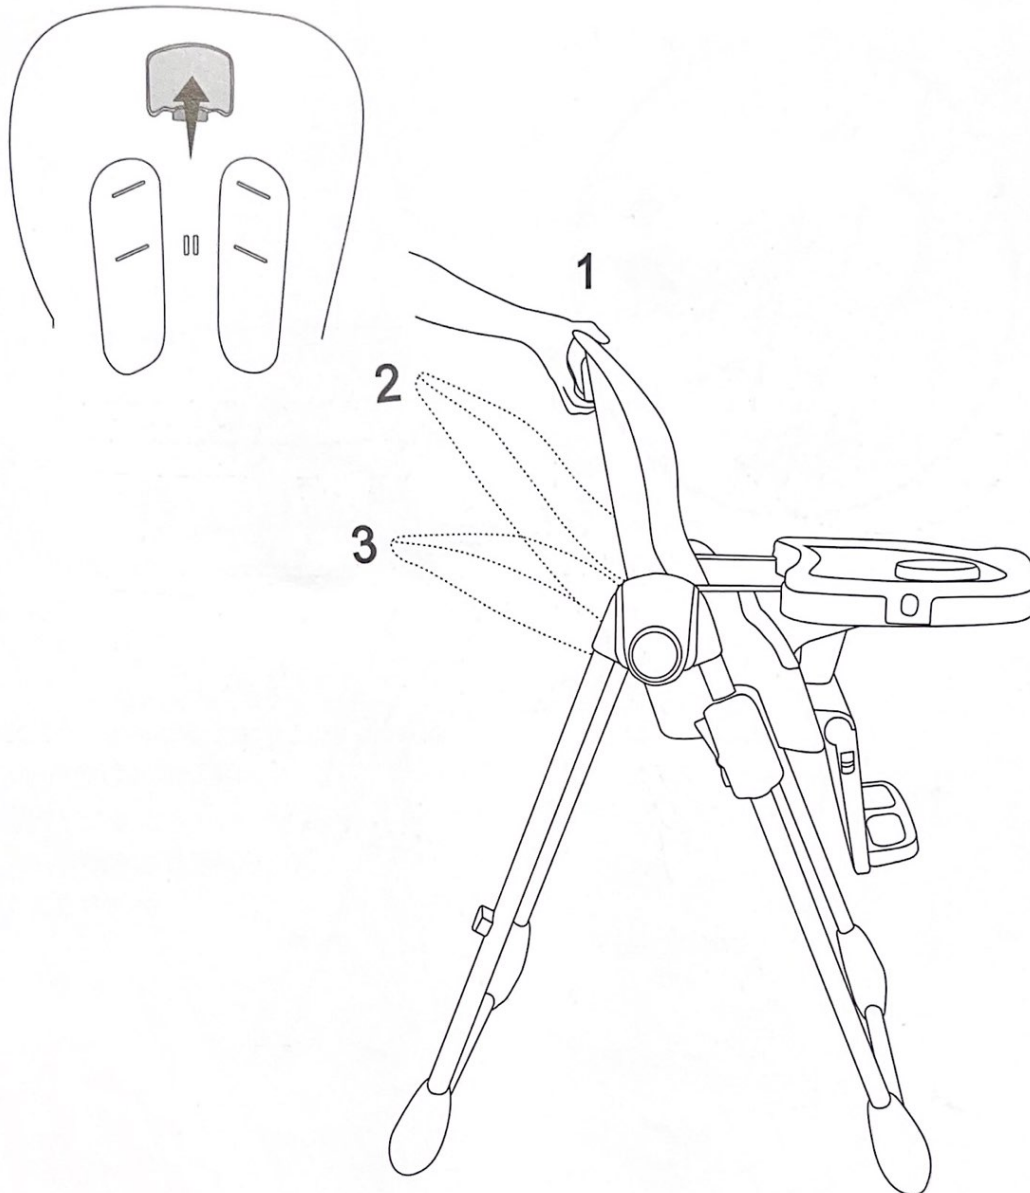


Footrest Adjustment

  The highchair has 3 leg rest positions.
Simultaneously push down on the buttons found on both sides of the leg rest and position the leg rest as required. Release the buttons to secure into place.

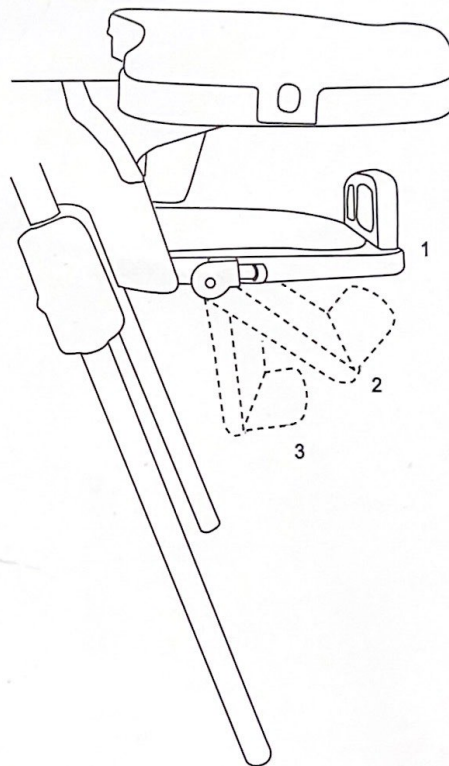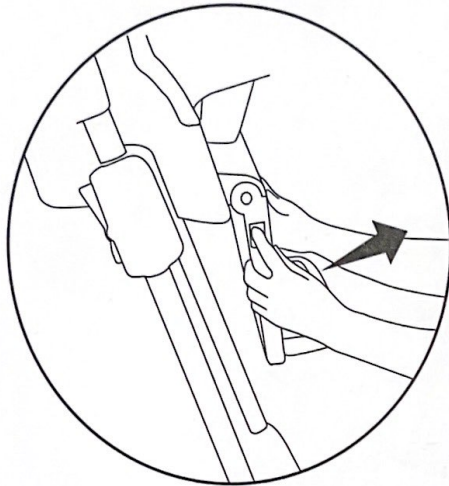


Tray

 1. The tray has 3-positions. It will “click” when secured in desired position. The tray also has an inner snack tray. Pull up at the sides to remove snack tray from tray.

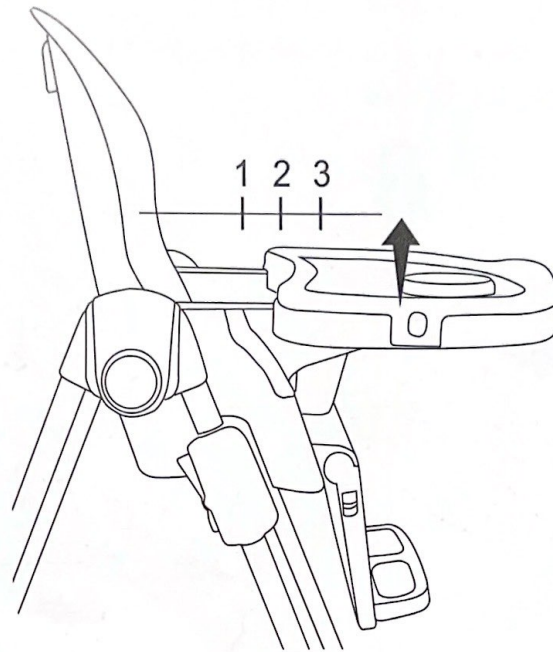

 
2. The tray can be stored on the rear of the highchair. Slide the tray connectors onto rear leg pegs and push down.

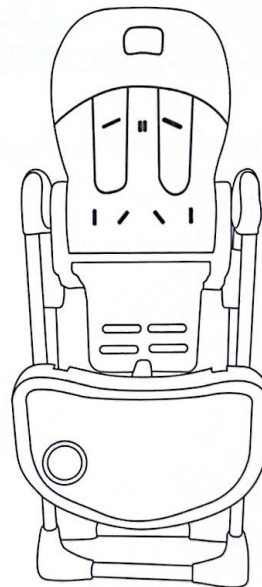

Harness Adjustment


WARNING! ALWAYS USE THE HARNESS AND ENSURE IT IS CORRECTLY AND SECURELY FITTED WHILE CHILD IS IN THE SEAT.

 A 5-point safety harness is provided to restrain your child and should always be worn. To fasten the harness, push the prongs into the buckle housing. Listen for the “click” sound. To release, press the centre button and remove prongs from the buckle.

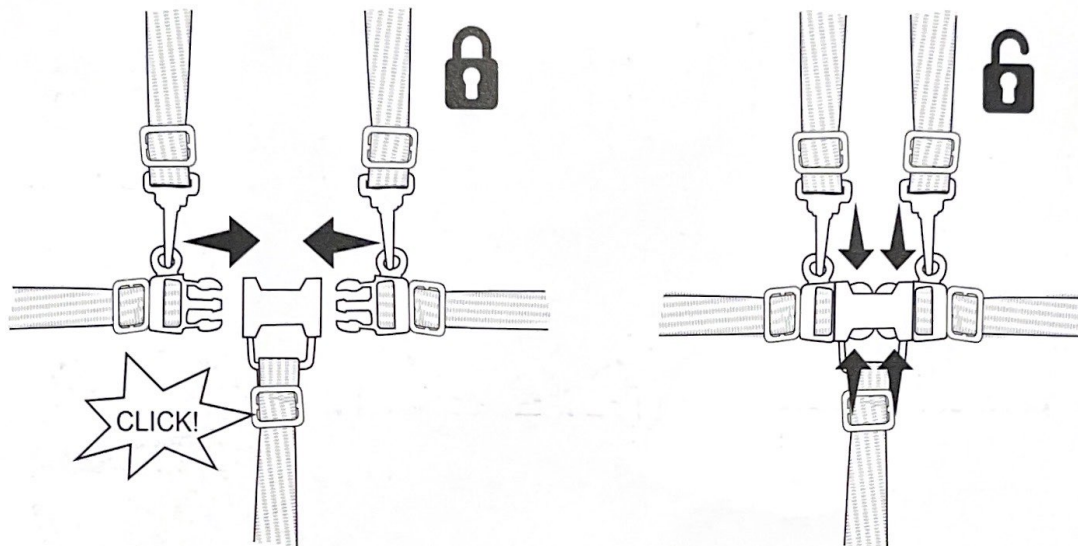


WARNING! ALWAYS ADJUST THE HARNESS TO FIT YOUR CHILD CORRECTLY FOR THEIR COMFORT AND SAFETY. A LOOSE FITTING HARNESS CAN BE VERY DANGEROUS.

 Sliding adjusters are fitted and should be carefully adjusted so the harness fits your child comfortably.

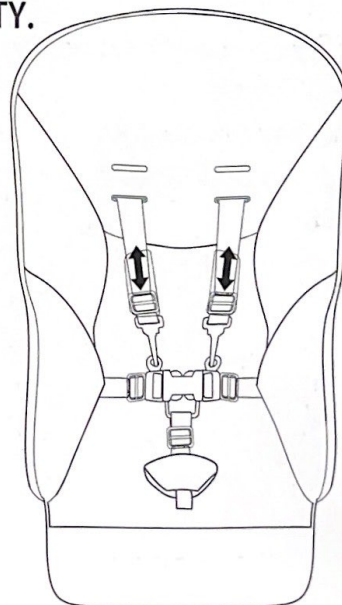


Harness Adjustment

 The highchair has 2 shoulder height positions.
To adjust the shoulder height position, pass the plastic ends of the harness through the horizontal slots in the backrest.

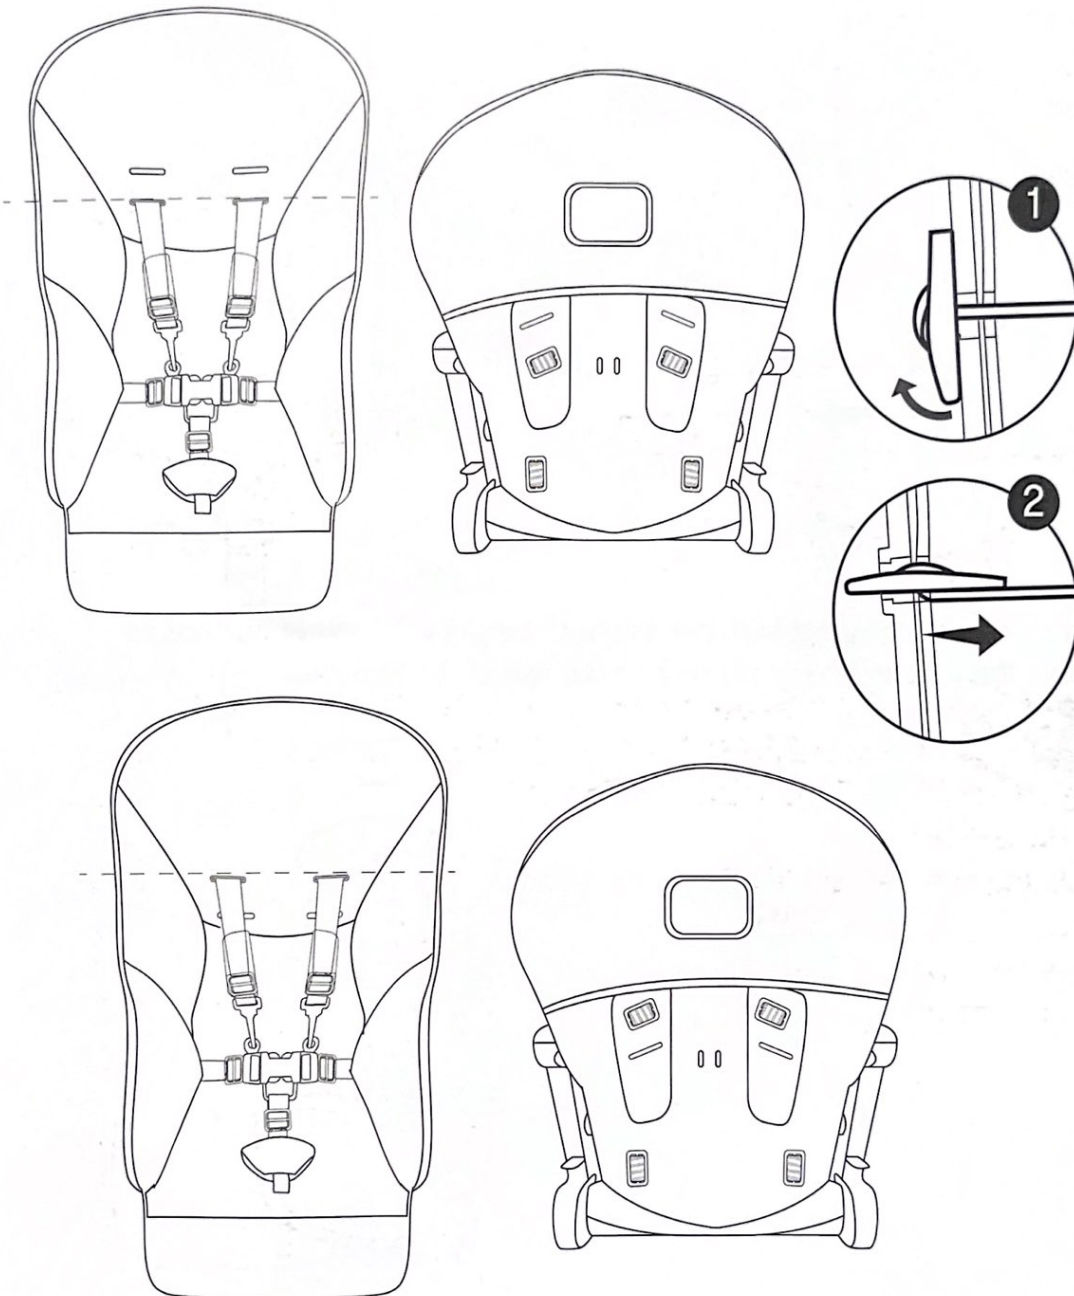


Folding

 1. Press and hold the folding button and push the rear legs in with your feet.

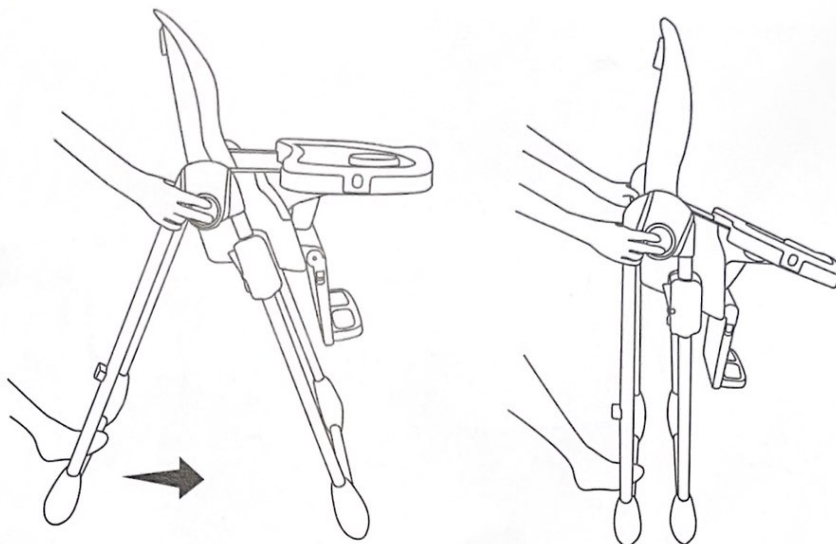


 2. For a more compact fold, press in both height adjustment buttons to lower the seat and hang the tray on the rear of the high chair.

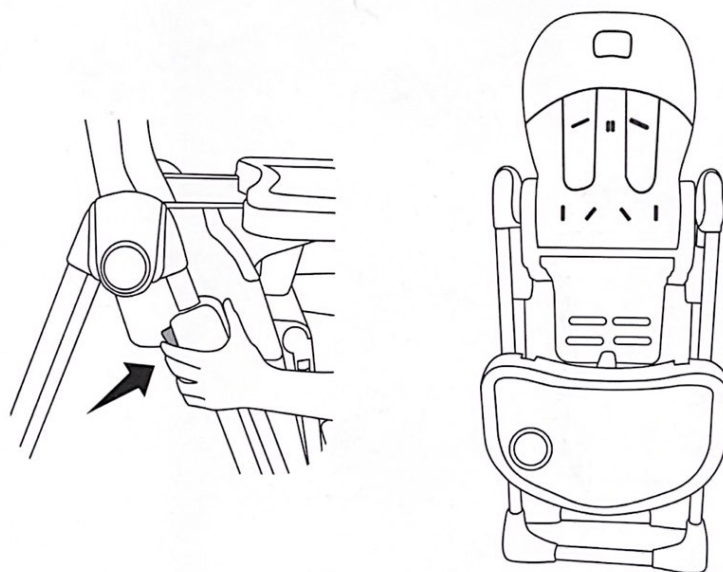


Toy Bar (sold separately)

 1. To attach slide the toy bar connectors along the armrest aligning with the armrest grooves. Check it is secured.

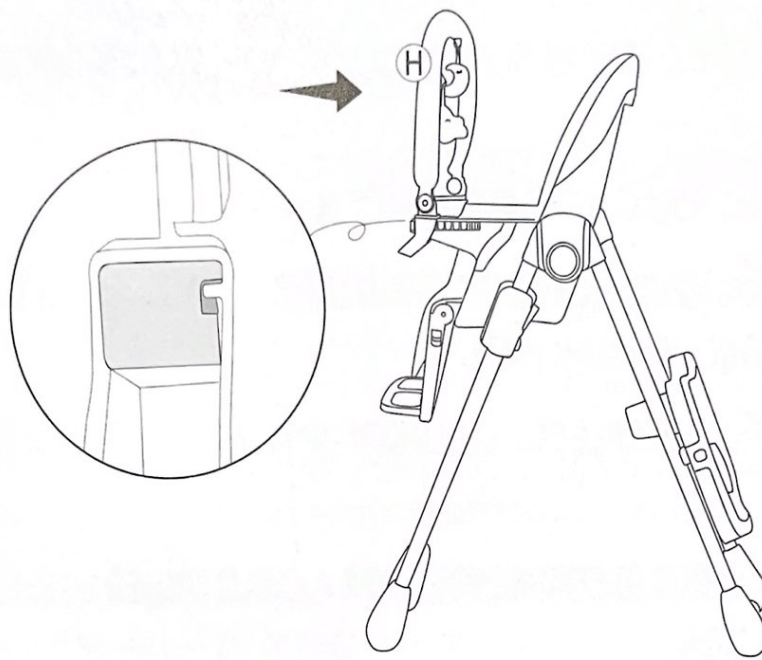

2. Attach the tray.

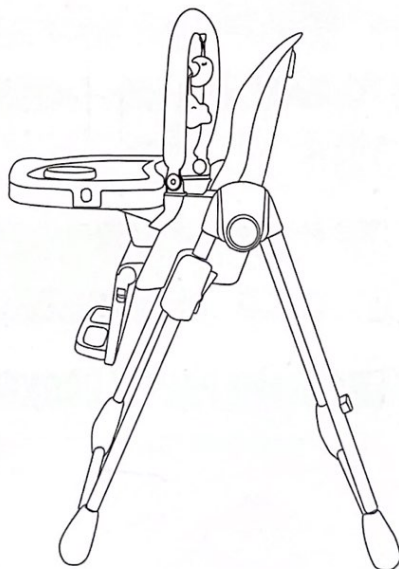 

Safety

⚠ WARNING: TO AVOID INJURY OR DEATH READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

⚠ WARNING: FOLLOW THE MANUFACTURERS INSTRUCTIONS.

⚠ WARNING: NEVER LEAVE THE CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN HIGHCHAIR.

⚠ WARNING: SUITABLE FOR CHILDREN UP TO A MAXIMUM WEIGHT OF 15KG.

⚠ WARNING: NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS IN UPRIGHT POSITION.

⚠ WARNING: THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED. MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.

⚠ WARNING: POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.

⚠ WARNING: DO NOT USE THE HIGHCHAIR UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.

⚠ WARNING: DO NOT USE IF ANY PART IS BROKEN, TORN OR MISSING.

Safety

⚠ WARNING: BE AWARE OF THE RISK OF OPEN FIRE AND OTHER SOURCES OF STRONG HEAT, SUCH AS ELECTRIC BAR FIRES, GAS FIRES ETC. IN THE VICINITY OF THE HIGHCHAIR

⚠ WARNING: DO NOT MOVE OR CARRY THE HIGHCHAIR WITH YOUR CHILD INSIDE.

- Position the highchair on a flat, even and horizontal floor and do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords and electrical cords and position the highchair away from furniture when the child is not being used at a table with the tray removed.
- This product in upright position is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.
- The lowest seat backrest position is for use only by a child from birth to maximum 6 months or 9kg, the rest of the seat recline positions are for a child who is 6 months +.
- Do not use the lowest seat recline position once your child can sit unaided.
- To avoid injury keep children away when unfolding and folding the product.
- This product is suitable from birth in reclined position only.
- The highchair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- This product does not replace a cot or cot bed. Should your child need to sleep, then it should be placed in a suitable cot or cot bed.
- This product is not a sleeping device, never use the highchair for the child to sleep.
- Position the highchair on a flat, even and horizontal floor and do not elevate the highchair on any structure or table.

Safety

- **FALLING HAZARD:** Prevent your child from climbing on the product.
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
- **DO NOT** allow anyone to climb or stand on or inside of this highchair. It is not a step stool or ladder.
- Your child **MUST ALWAYS** be secured with the harness.
- Do not use the highchair if any part is broken, torn or missing. If any part of the highchair is not working correctly, repairs are recommended.
- Regularly check all connections to ensure they are tight.
- Keep the plastic packaging away from children to avoid danger of suffocation.
- Complies with EN 14988:2017 and AS4684-2009 and EN 12790:2009

Care

Maintenance

- Wipe metals and plastics clean with a damp cloth.
- Clean by sponging with warm water and a mild detergent. A mild disinfectant may be used. Stubborn marks may be removed with a non-abrasive cream cleaner.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Do not use abrasive pads, bleach or strong household cleaners.
- Dry thoroughly before re-use or storage.

Cleaning

- This product requires regular maintenance to keep it in good working order. Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.
- Before use, always check for any missing parts, torn material or if it is broken or damaged.
- NEVER USE if parts are missing or damaged.
- Use only parts and accessories approved by the manufacturer.

Due to variation in style and design the illustrations used in this instruction manual are generic.
Variation in design may occur in the images shown.



Supplied by Baby Factory NZ. Ltd.
58 Stonedon Drive
East Tamaki
Auckland
New Zealand
www.babyfactory.co.nz