

Assembly

babylo[®]

Robin Stroller

Instruction Manual



**IMPORTANT:
READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE**

Parts List

A



stroller
x1

B



 
front wheel
x2

C



rear wheel
x2

D



bumper bar
x1

E




cupholder
x1

Assembly

1. Release the stroller (A) from the locked position by lifting the locking catch from over the locking rivet on the stroller frame.


HINT. You may have to squeeze the stroller legs and handles together first so as to release the tension on the rivet.

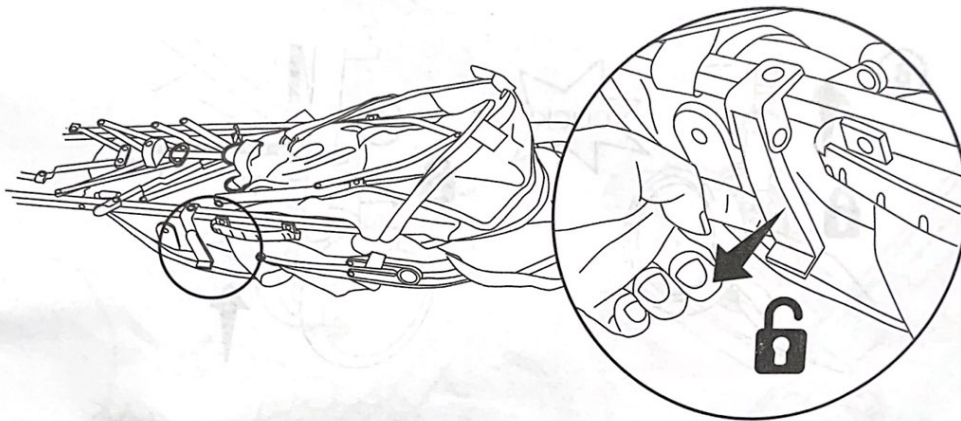


2a. Standing behind the stroller and holding it by the handles, allow the wheel pins to fall forward.

2b. With your foot, press down on the locking bar until the entire frame 'clicks' into the open position signaling that it is locked.

(a)

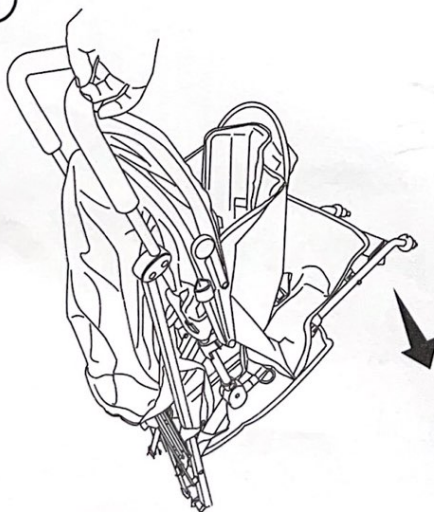


(b)

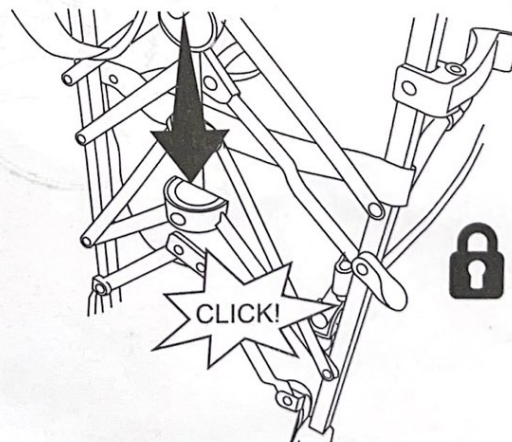


Assembly

Assembly

3. Insert each front wheel (B) pins into the each centre front leg tube.
A "click" will be heard, indicating that it is locked correctly into position.
Give each wheel a firm tug to ensure they're securely attached.
Repeat this action for rear wheels (C).

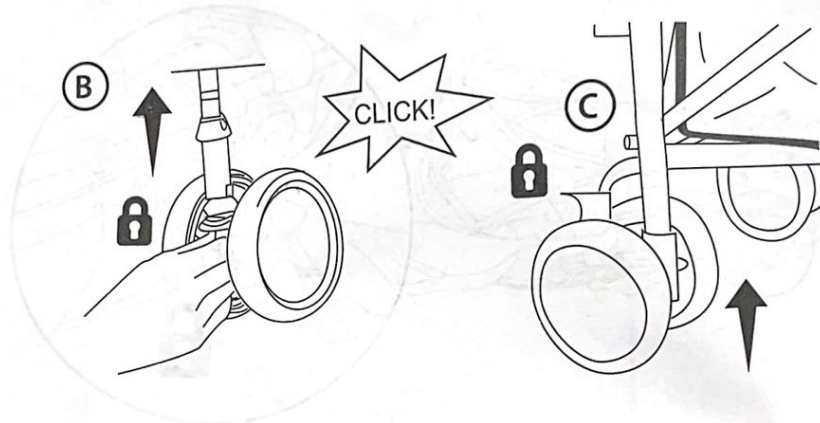


4. To remove wheels, locate the spring positioned between the wheels and squeeze to release.

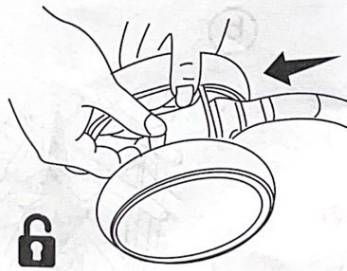

Assembly

5. Insert the bumper bar (D) into the corresponding slots on the frame, push until you hear a "click". Give the bumper bar a tug to ensure it's securely in place.


To remove the bumper bar, simply press the release buttons on both sides and lift off.

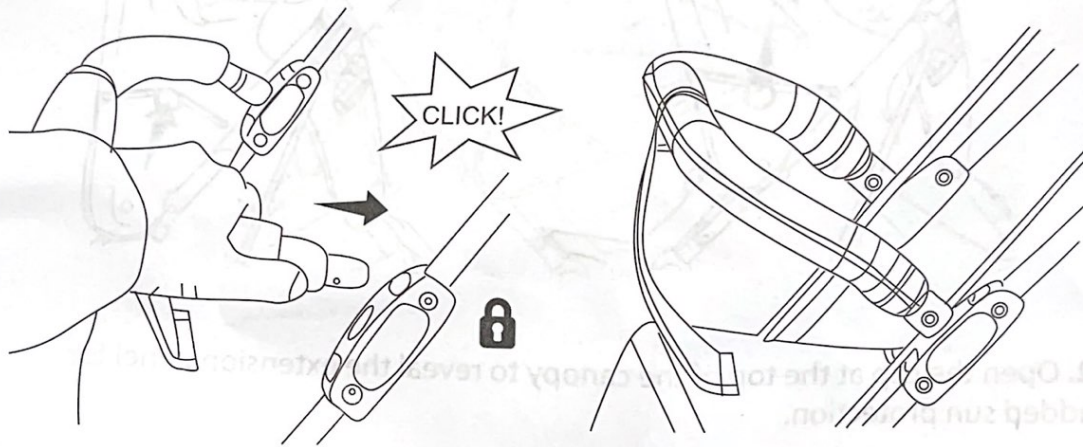


Canopy

Assembly

1. The canopy can be opened or closed by lowering or raising the canopy hinge.

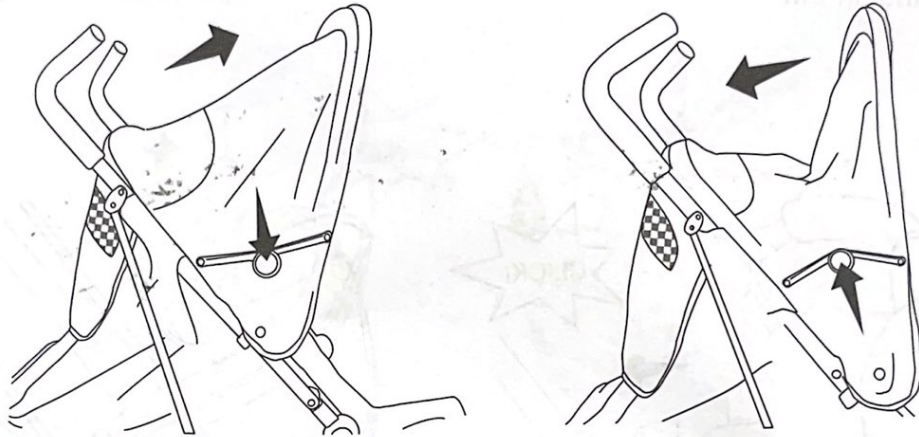

2. Open the clip at the top of the canopy to reveal the extension panel for added sun protection.

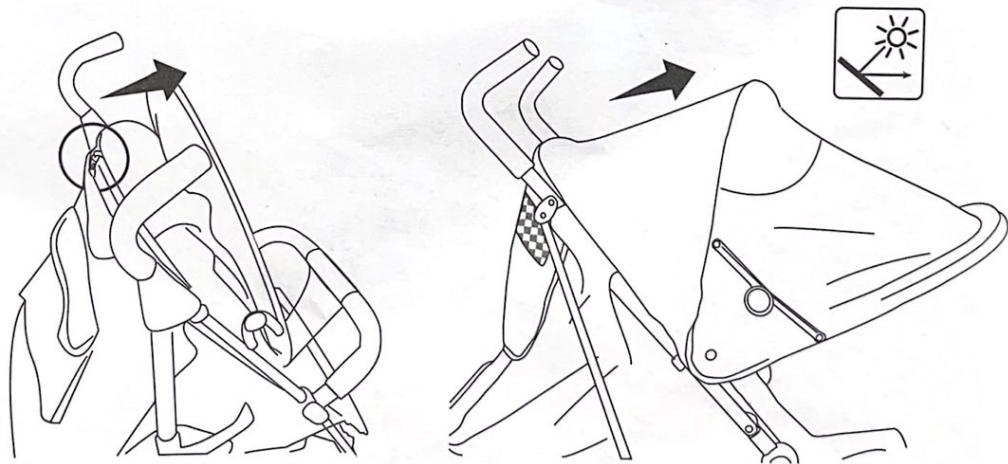



Canopy

3. There is a mesh air vent under the canopy flap.
Open flap for extra ventilation.





Swivel Wheels

When travelling along straight surfaces or uneven terrain, the front wheels may spin.
To lock the front wheels, push down on the lever located at the front of the wheels. To go back to 360° swivel mode, push lever upwards.

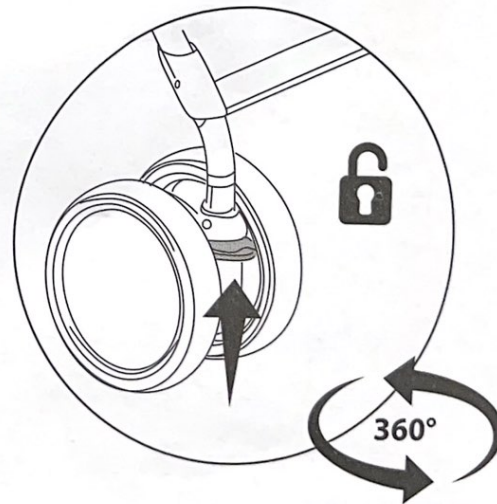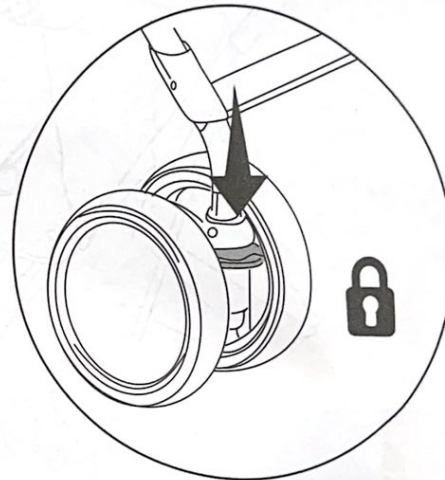


Calf-Rest Adjustment

Locate the adjustment buttons either side of the calf-rest. Push to adjust to the required position. Listen for the "click" signalling that the calf-rest is locked into position.

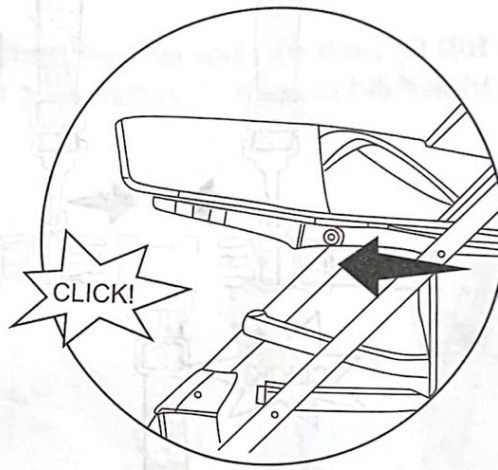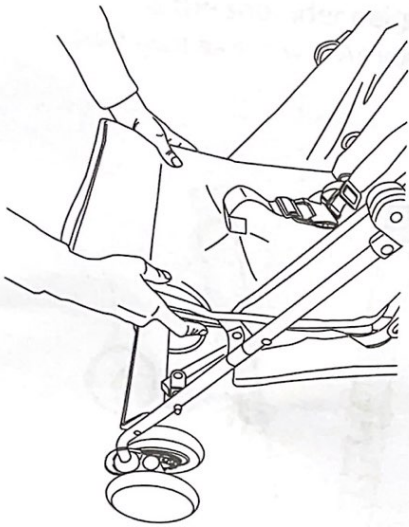


Harness Adjustment

1. To fasten the harness, push the prongs into the buckle housing. Listen for the "click" sound.

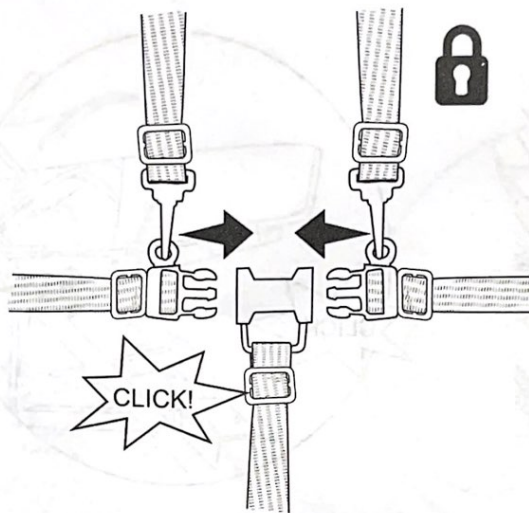

2. To release, press the centre button and remove prongs from the buckle.

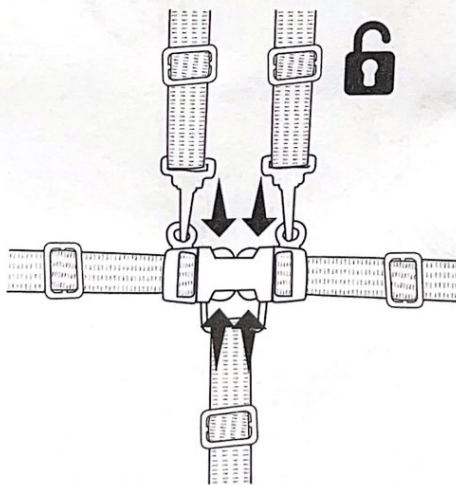

Harness Adjustment


4. To adjust the harness, move the slides as shown.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

5. The stroller has 3 shoulder height positions.


WARNING! Always adjust the shoulder harness length according to baby height.

To adjust the shoulder height position, feed harness tabs through slot (a) in seat unit as shown. As your child grows release harness to full height (b).

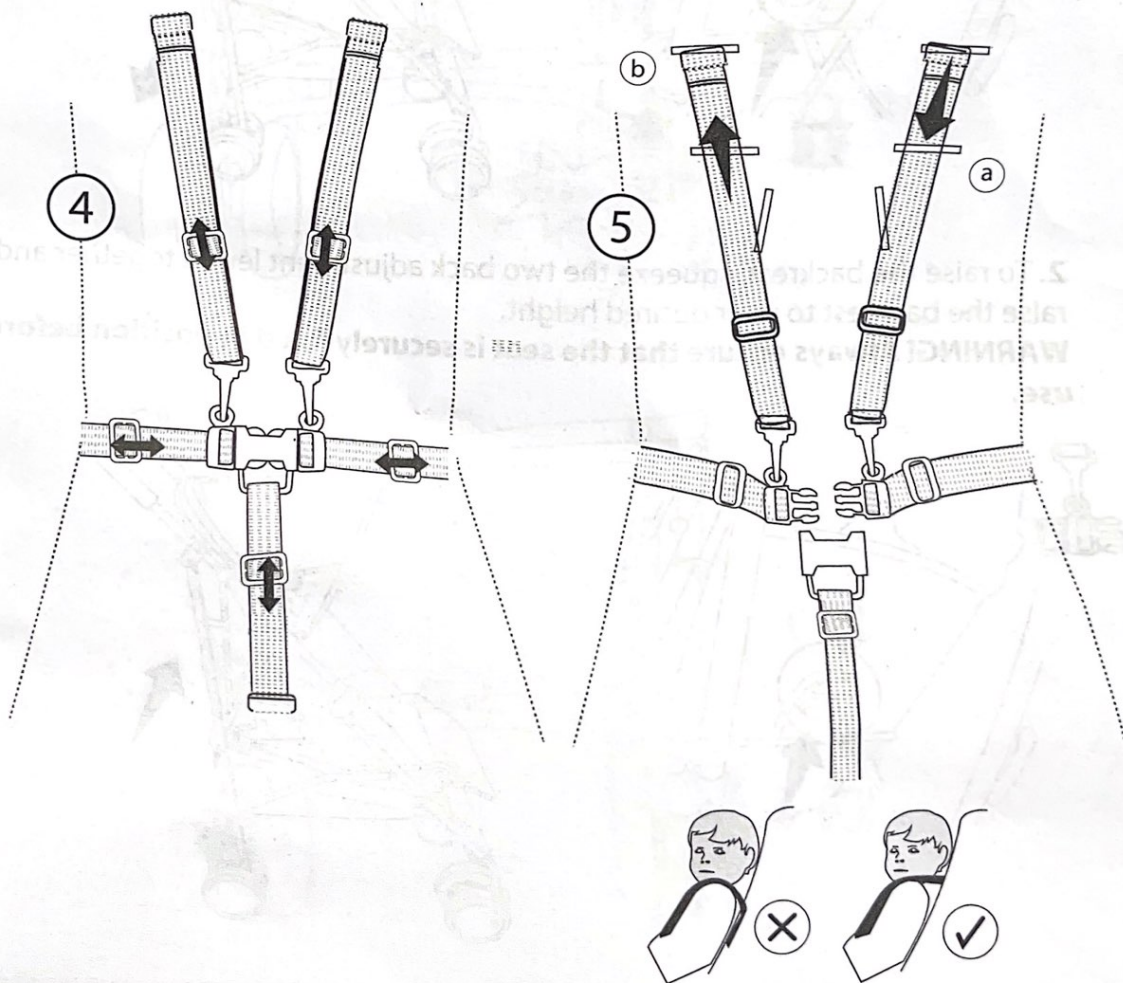


Backrest Adjustment

1. Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the two adjustment levers on the reclining harness and gently lower the backrest.

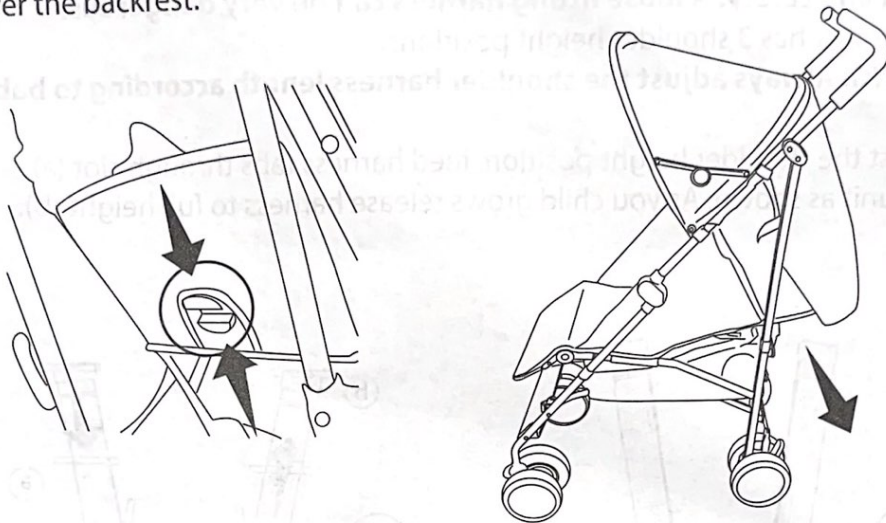

2. To raise the backrest, squeeze the two back adjustment levers together and raise the backrest to your desired height.

WARNING! Always ensure that the seat is securely fixed in position before use.


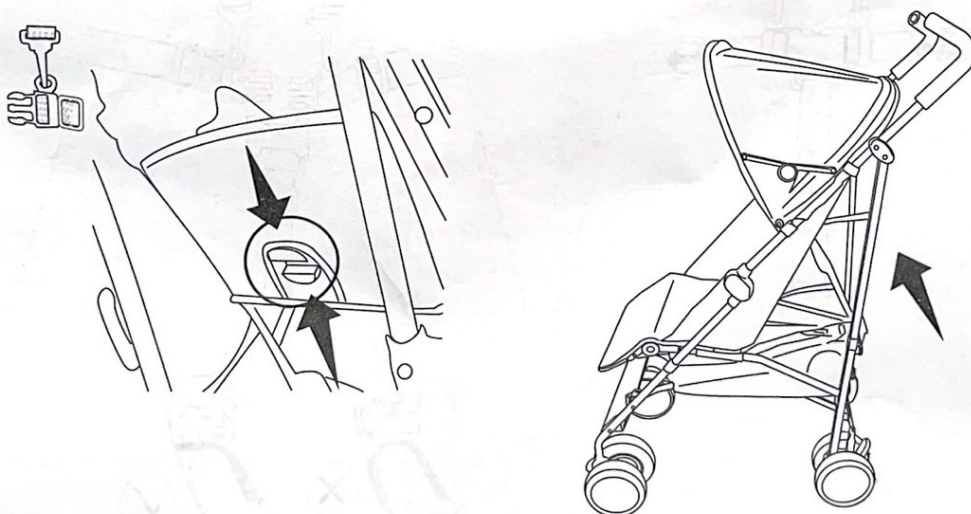


Brakes

1a. Press down on either brake pedal to engage the brake. Listen for the "click" signalling that the brake is locked.


1b. Push the brake pedal upwards to disengage the brake.

WARNING! Always engage wheel brakes when the stroller is not moving.

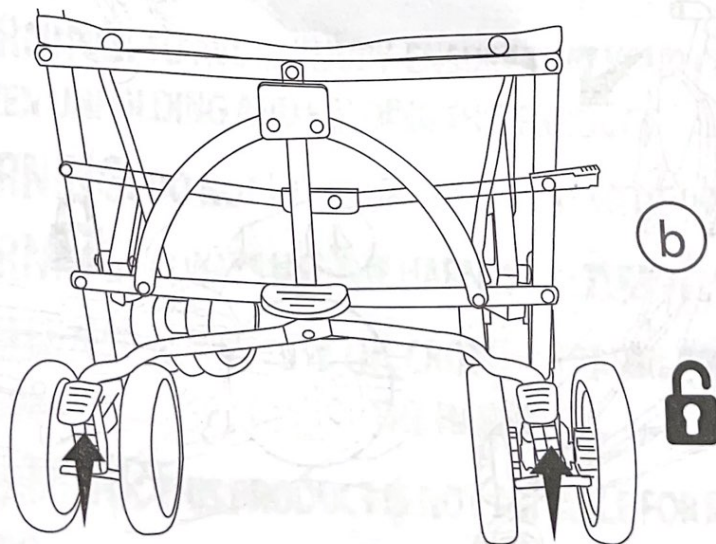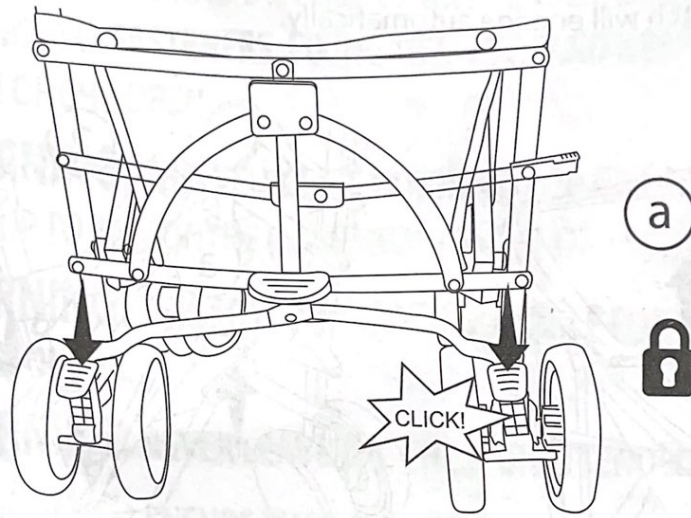

Folding

1. Always close your canopy before folding the stroller. Lift the canopy hinge on both sides to close or open the canopy.
2. Lift the pedal upwards (a) and push down on the second pedal lock (b) with your foot.
3. Push the handles over to close.
4. The locking catch will engage automatically.

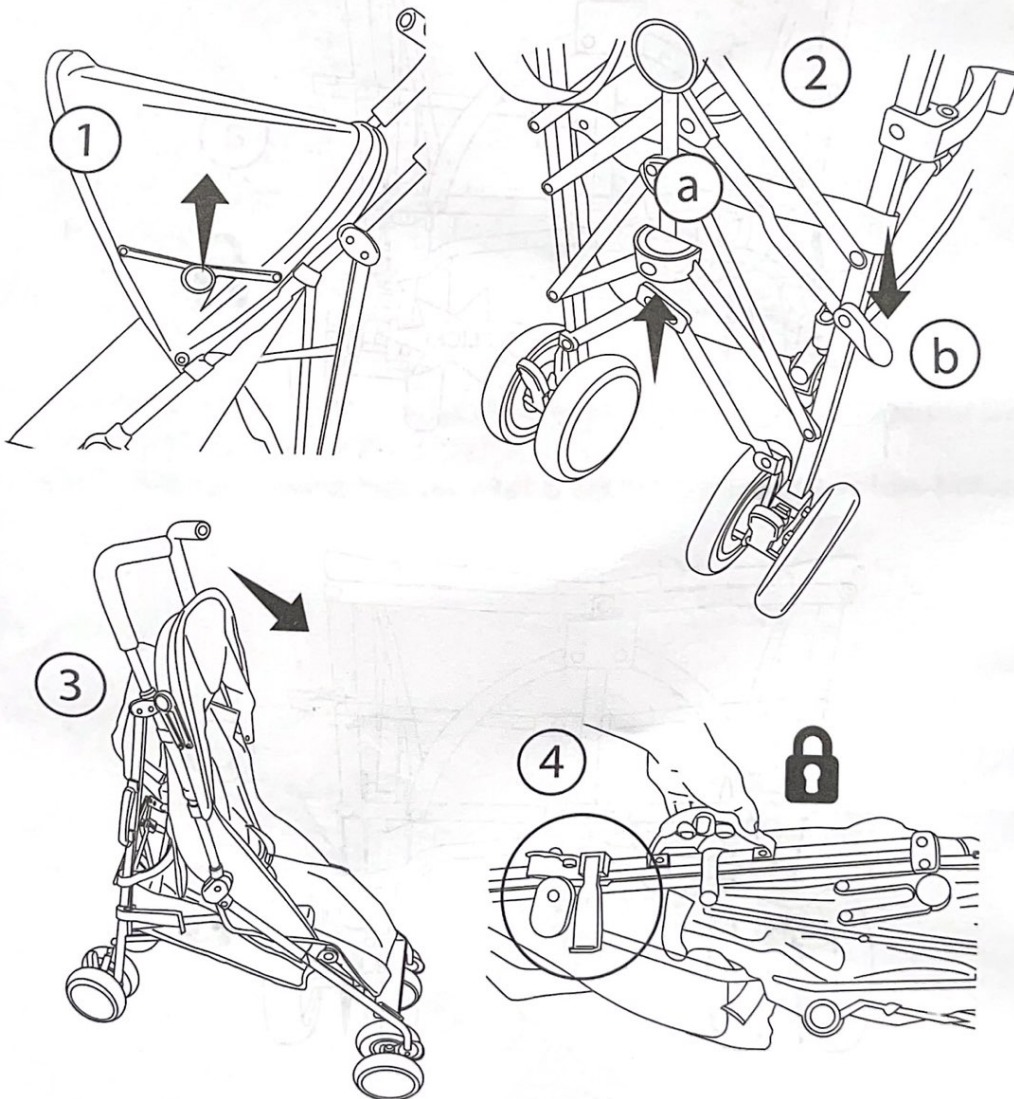

Safety and Maintenance

READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE. KEEP FOR FUTURE REFERENCE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

BEFORE USE REMOVE AND DISPOSE OF ANY PLASTIC BAGS AND OTHER PACKAGING (E.G. FASTENERS, FIXING TIES, ETC.) AND KEEP THEM OUT OF REACH OF CHILDREN.

⚠ WARNING: THIS VEHICLE IS INTENDED FOR ONE CHILD FROM 6 MONTHS UP TO 36 MONTHS (MAXIMUM WEIGHT OF 15KG).

⚠ WARNING: THIS SEAT UNIT IS NOT SUITABLE FOR CHILDREN UNDER 6 MONTHS.

⚠ WARNING: NEVER LEAVE THE CHILD UNATTENDED.

⚠ WARNING: ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.

⚠ WARNING: TO AVOID INJURY, ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN UNFOLDING AND FOLDING THIS PRODUCT.

⚠ WARNING: DO NOT LET YOUR CHILD PLAY WITH THIS PRODUCT.

⚠ WARNING: ALWAYS USE THE HARNESS RESTRAINT SYSTEM.

⚠ WARNING: ALWAYS USE THE CROTCH STRAP IN COMBINATION WITH THE WAIST BELT SECTION OF THE HARNESS.

⚠ WARNING: THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING.

Safety

WARNING: ANY LOAD ATTACHED TO THE HANDLES AFFECTS THE STABILITY OF THE STROLLER.

- A basket is provided for the carriage of 2kg of items evenly distributed.
- The maximum weight capacity for the cupholder is 0.5kg.
- YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY
- Do not let children play with or hang on the stroller.
- Do not overload this stroller with additional children, goods or accessories.
- Bags and other items should not be hung from the handle as this can affect the stability of the stroller.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this stroller.
- Do not use parts or accessories which are not approved by the manufacturer.
- Always apply the parking brake when the stroller is stationary.
- Ensure the parking brake is engaged during the loading and unloading of children.
- Do not allow your child to climb into the stroller.
- Never leave a raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- Be careful when going up or down kerbs.
- Remove your child and fold the stroller when going up or down escalators.
- If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- Do not place anything on top of a raincover.
- To prevent your child overheating, always fold or remove a raincover when indoors or in warm environments.
- This product conforms to EN 1888-1:2018.

Care and Maintenance

- This product requires regular maintenance to ensure correct and safe performance.
- All assembly fittings are to be tightened properly.
- Always check your stroller for loose screws, worn parts, torn material or stitching.
- Replace or adjust parts as needed.
- Lubricate moving parts regularly, especially the wheels.
- Wipe metals and plastics clean with a damp cloth.
- Sponge clean fabrics with warm soapy water. Rinse well with clean water to avoid staining. Dry in shade.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Do not use abrasive pads, bleach or strong household cleaners.

Due to variation in style and design the illustrations used in this instruction manual are generic.
Variation in design may occur in the images shown.



Supplied by Baby Factory NZ. Ltd.
58 Stonedon Drive
East Tamaki
Auckland
New Zealand
www.babyfactory.co.nz