


# **BABYCO FLAIR HIGHCHAIR**

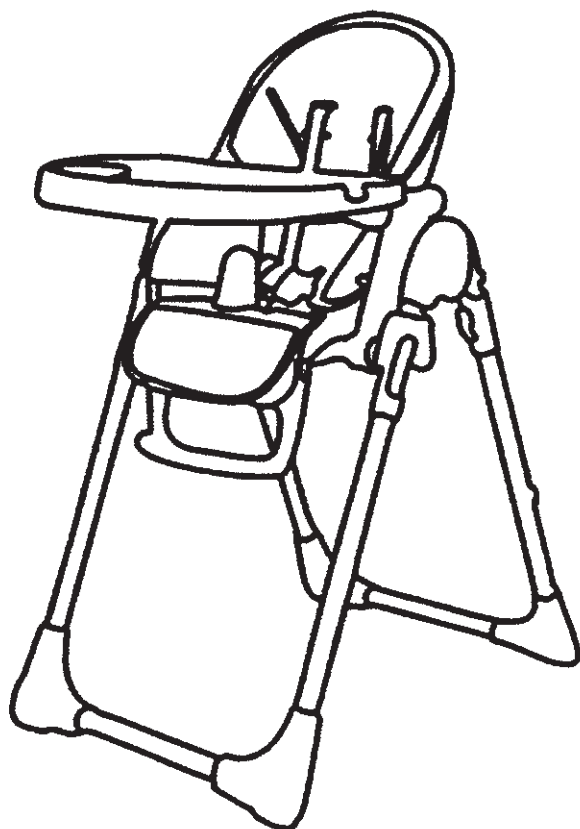

———— DIRECTIONS FOR USE ————



**IMPORTANT! KEEP FOR FUTURE REFERENCE**



## **WARNING**

- Follow the manufacturer's instructions.
- Do not leave child unattended.
- Always check harness is correctly fitted.
- Do not use the highchair unless all components are correctly fitted & adjusted.
- Be aware of the risk of fire & other sources of heat, such as heaters, gas fires in the vicinity.
- Do not use the highchair until the child can sit unaided.
- Do not use the highchair if any part is broken, torn, or missing.
- Position the highchair away from solid structures & benches to avoid injuries caused by falls or access to dangerous items.
- Use the highchair on a flat, even surface. Do not elevate the Highchair on any structure or table.
- Always use the restraints in either the upright or reclining position to prevent falls or the child sliding out.
- The tray is not designed to hold the child in the chair.
- It is recommended the highchair be used in the upright position if the child is capable of sitting upright unassisted.
- It is suitable for children 6 – 36mths.
- The highchair should open/close easily. Do not use force.
- Regularly check all parts for wear & tear.
- Do not let baby climb, play, or hang on the highchair.
- To avoid danger of suffocation, remove plastic cover before using the highchair.
- To avoid injury, keep children away when opening & closing the highchair.

## Parts

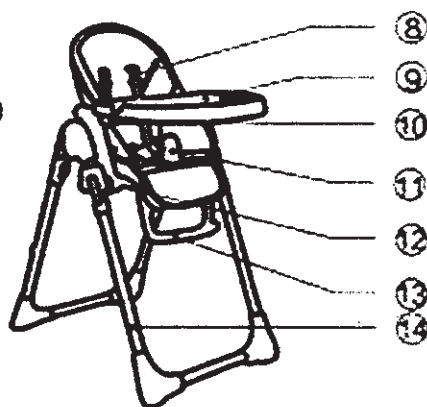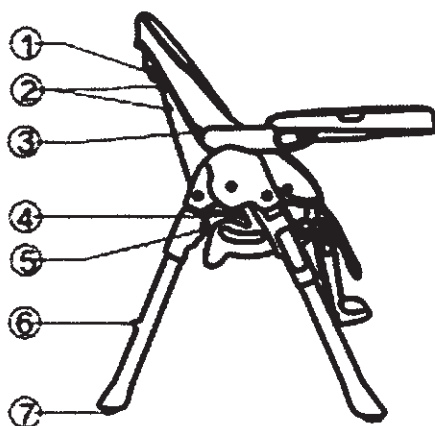


1. Seat angle adjustment lever
2. Harness anchorage holes
3. Seat cover retention hooks
4. Seat height adjustment
5. Frame folding buttons
6. Tray hooks
7. Wheels

8. Five point harness
9. Tray
10. Tray adjustment lever
11. Seat adjustment column
12. Foot rest adjustment
13. Foot rest
14. Legs


## Assembly and use

### Opening and Seat Height

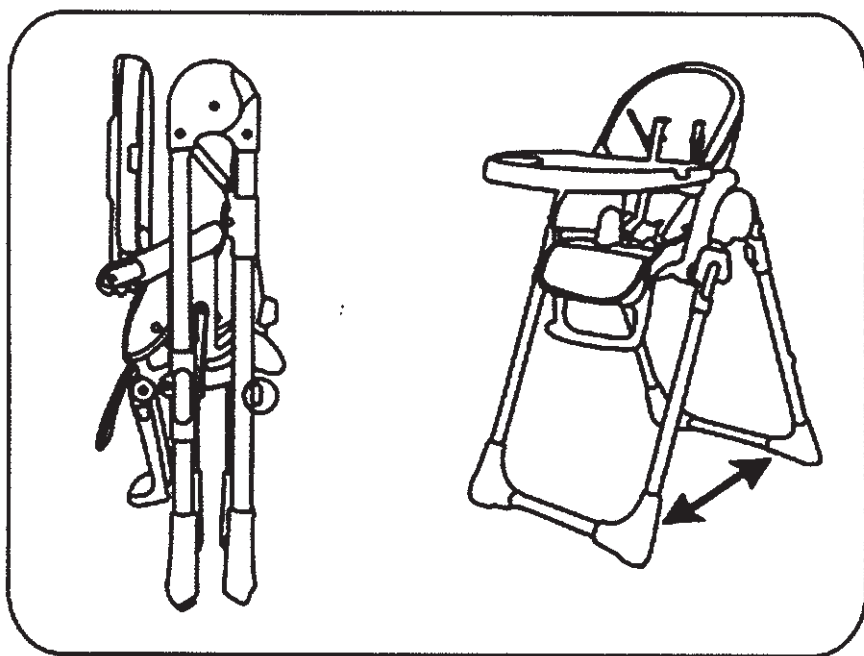


1. Carefully remove from the box holding by the seat height adjustment handles. Safely dispose of plastic bags.
2. Pulling the seat levers, hold down the legs to adjust the seat height. There are 7 height settings. Release the levers and check the seat is locked into position. Pressing the side buttons, open the highchair.

## Footrest

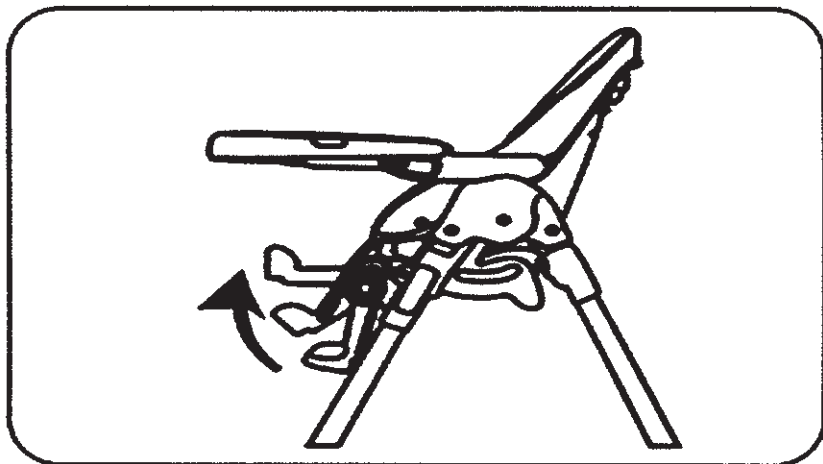


1. The footrest can be set in 3 positions. It can be lifted to the desired position. To lower, press the buttons and lower the footrest.

## Harness

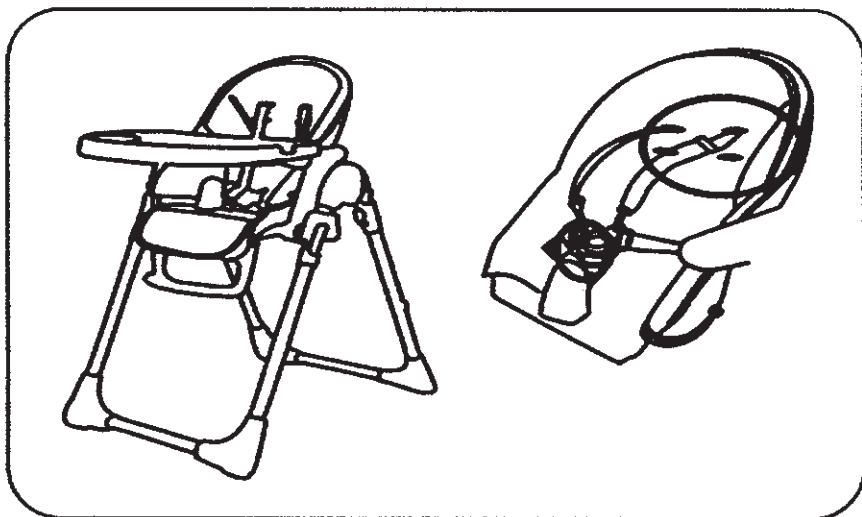


1. To close, insert the 2 waist straps with shoulder straps attached into the sides of the crotch buckle until you hear it "click".
2. To release, press the centre button and the latches will automatically pop out.
3. The harness has 2 height options. To adjust the shoulder straps, push the strap through the slot in the seat back and the seat cover and insert through the other slot.
4. **ALWAYS HAVE BABY STRAPPED IN WHEN IN THE HIGHCHAIR.**

## Recline

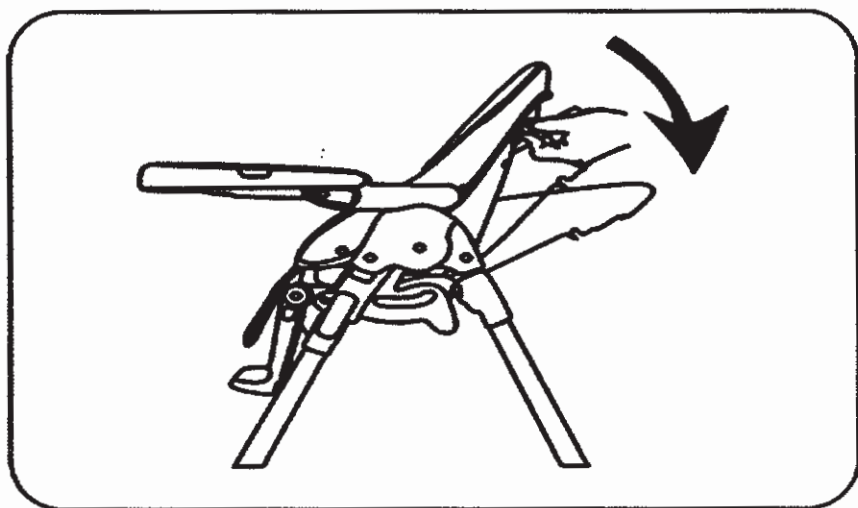

1. When used as a recliner, this product is designed for children up to a weight of 9kg
2. Do not use the recliner once your child can sit unaided
3. This highchair is not intended for sleep. It should not be used as a substitute for a cot.
4. Danger of strangulation. Never leave the child in the recliner if the harness is loose or undone.

## Installing Tray

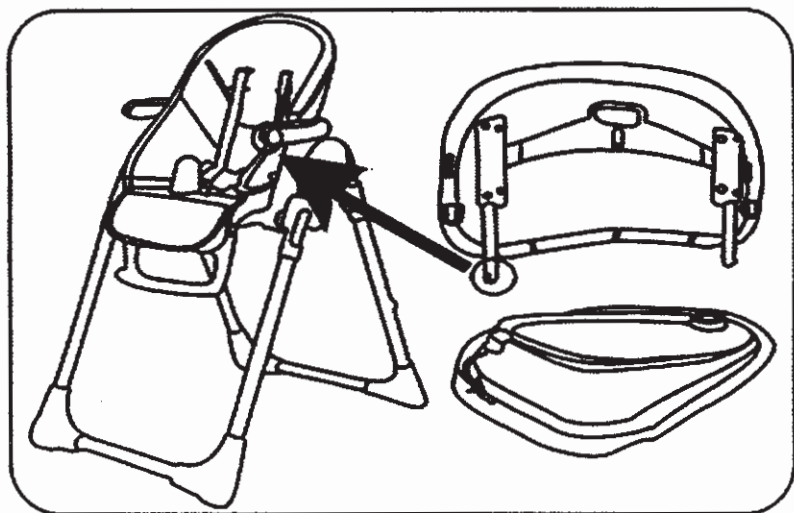

1. To fit the tray, pull the central lever underneath it towards you while at the same time pushing it all the way into the armrests (See Arrow)
2. To extend or remove the tray, pull the central lever underneath it towards you. Adjust the tray to the desired position. To remove the tray, pull the central lever and pull the tray towards you until removed.
3. Tray can be stored on brackets provided on the rear legs.
4. The highchair has a double tray. The top tray can be easily washed with non-abrasive detergent.

## Maintenance

- Before use, check highchair for loose, broken, or torn parts.
- Always keep the seat cover clean.
- Keep the wheels clean to avoid them jamming.
- Protect from weather. Bright sunlight can cause discolouring over time. Exposure to water can cause rust on the metal parts.
- Clean the highchair periodically with a damp cloth.
- Lubricate moving parts and keep them free of dust to ensure smooth operation of the highchair.

Description	Highchair	Specification	82x55x120cm
Part No		QTY	1 Set
Model	Flair	Material	Steel,PP,PU
G.W	10 kgs	Standard	EN1 4988 2017
N.W	8 kgs	Age	6-36 Months

### **THE BABY FACTORY NZ Ltd**

58 Stonedon Dr

East Tamaki. Auckland. 2013

New Zealand

[www.babyfactory.co.nz](http://www.babyfactory.co.nz)

Made in China