

WARNINGS

REMEMBER...YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY

WARNING: Prevent serious injury or death from falls or sliding out."

- The harness must always be used and correctly fitted - most injuries from highchairs are caused by falls.
- Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.
- Do not leave child unattended.

WARNING: The child should be secured in the high chair at all times by the restraining system. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used only by children capable of sitting upright unassisted.

- Be sure that all parts are securely locked into place before use.
- Always use the harness provided when your child is in the high Chair.
- Never leave your child unattended.
- This high chair is intended only for a child weighing less than 17 kg.
- Check all parts before use for breakage or fatigue. Discontinue use immediately if any part is found to be damaged or broken.
- Only use the highchair on a flat level surface and never elevate the highchair on any structure or table.
- Be careful to keep your high chair away from hazards such as heaters, stoves, campfires & hot surfaces, liquids etc. and any hanging window or electrical cords.
- Being in a high chair may give your child access to areas with hazardous materials or utensils otherwise out of the way. Always ensure such items are out of your child's reach.
- You High Chair is intended for domestic use only. It is not intended for commercial use.
- Never carry your high chair with baby in it.

Your High Chair may be cleaned, using a damp cloth and ordinary, mild soap. Do not use abrasives or bleach.

Should you experience any difficulties with your product your local retailer or manufacture is in the best position to help. They will make all the necessary arrangements to ensure that your product is functioning correctly.

Babyco Jungle Highchair



IMPORTANT: Please read the following instructions carefully before assembling your product, then retain for future reference.

Supplied by: The Babyfactory.Co.NZ
58 Stonedon Drive,
East Tamaki,Auckland,NZ
www.babyfactory.co.nz

Babyco Australia
www.babyco.com.au

Made in China

 
 
Model: **4006217**

To Assemble your Highchair


Identify Parts of highchair : 1 x Seat Frame, 1 x Tray
1 x Rear Frame Leg, 1 x Front Frame Leg

Your highchair now needs to be assembled, legs fitted and side brace locks fully engaged before use.

1. Open the highchair seat frame outwards in the direction of the arrows, until the slide lock bar under the seat locks into place.
2. Insert the front and rear leg frames (A) into tubes (B). Make sure frame pins engage through inside of each leg. Test by pulling downwards.
3. Now push down each side brace lock (C) to safely secure the highchair ready for use.

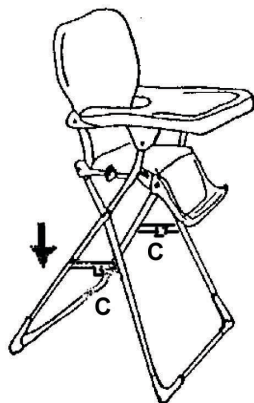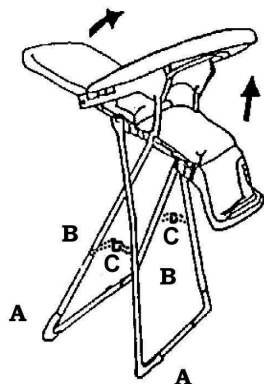

3. After assembly test highchair is stable & fully locked in place, by pressing down on seat.


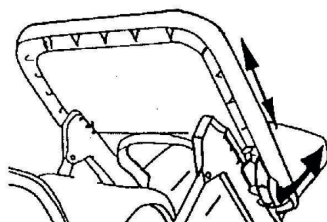


To Fit Tray

1. To insert your tray, simultaneously lift the side latches and place the track in the underside of the tray over the high chair arms.
2. With the latches disengaged, pull or push the tray to the desired position. Always ensure that the latches have locked into place when finished adjusting.


To Fold Your high Chair

1. Slide both shoulder straps off the seatback.
2. Lift footrest into uppermost position.
3. Release both side brace locks by pulling upwards. Only a small amount of upward movement is necessary to release these.
4. Place fingers under front edge of seat pad and lift seat upwards and hold up. This will release the auto seat lock. at the same time gently push seatback rearwards until frame starts to fold.
5. Continue pushing until folded, ready for easy storage.

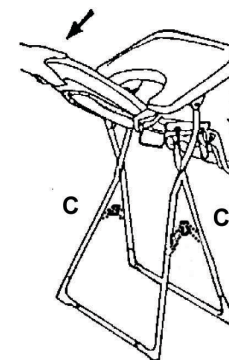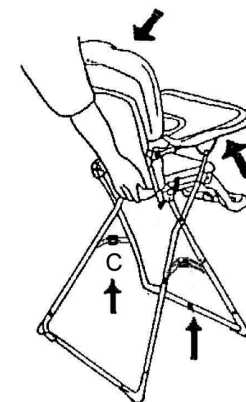

To Fit Harness

1. To secure your child in the harness, insert buckles (a) & (b) into either side of the buckle housing (c) until they click into place.
2. Carefully adjust the harness to snugly fit your child's waist using the sliders (d).

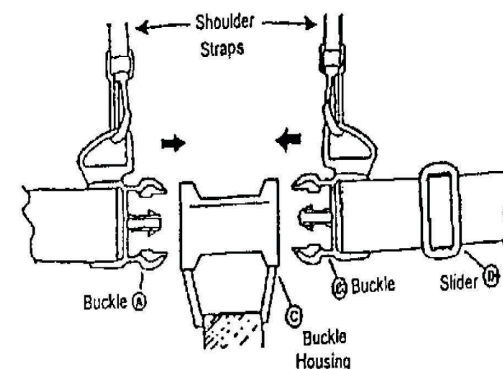

4. To release the prongs, squeeze simultaneously on the top and bottom prongs and pull from the buckle housing.