


babyco

# TROPICAL

## ACTIVITY CENTER

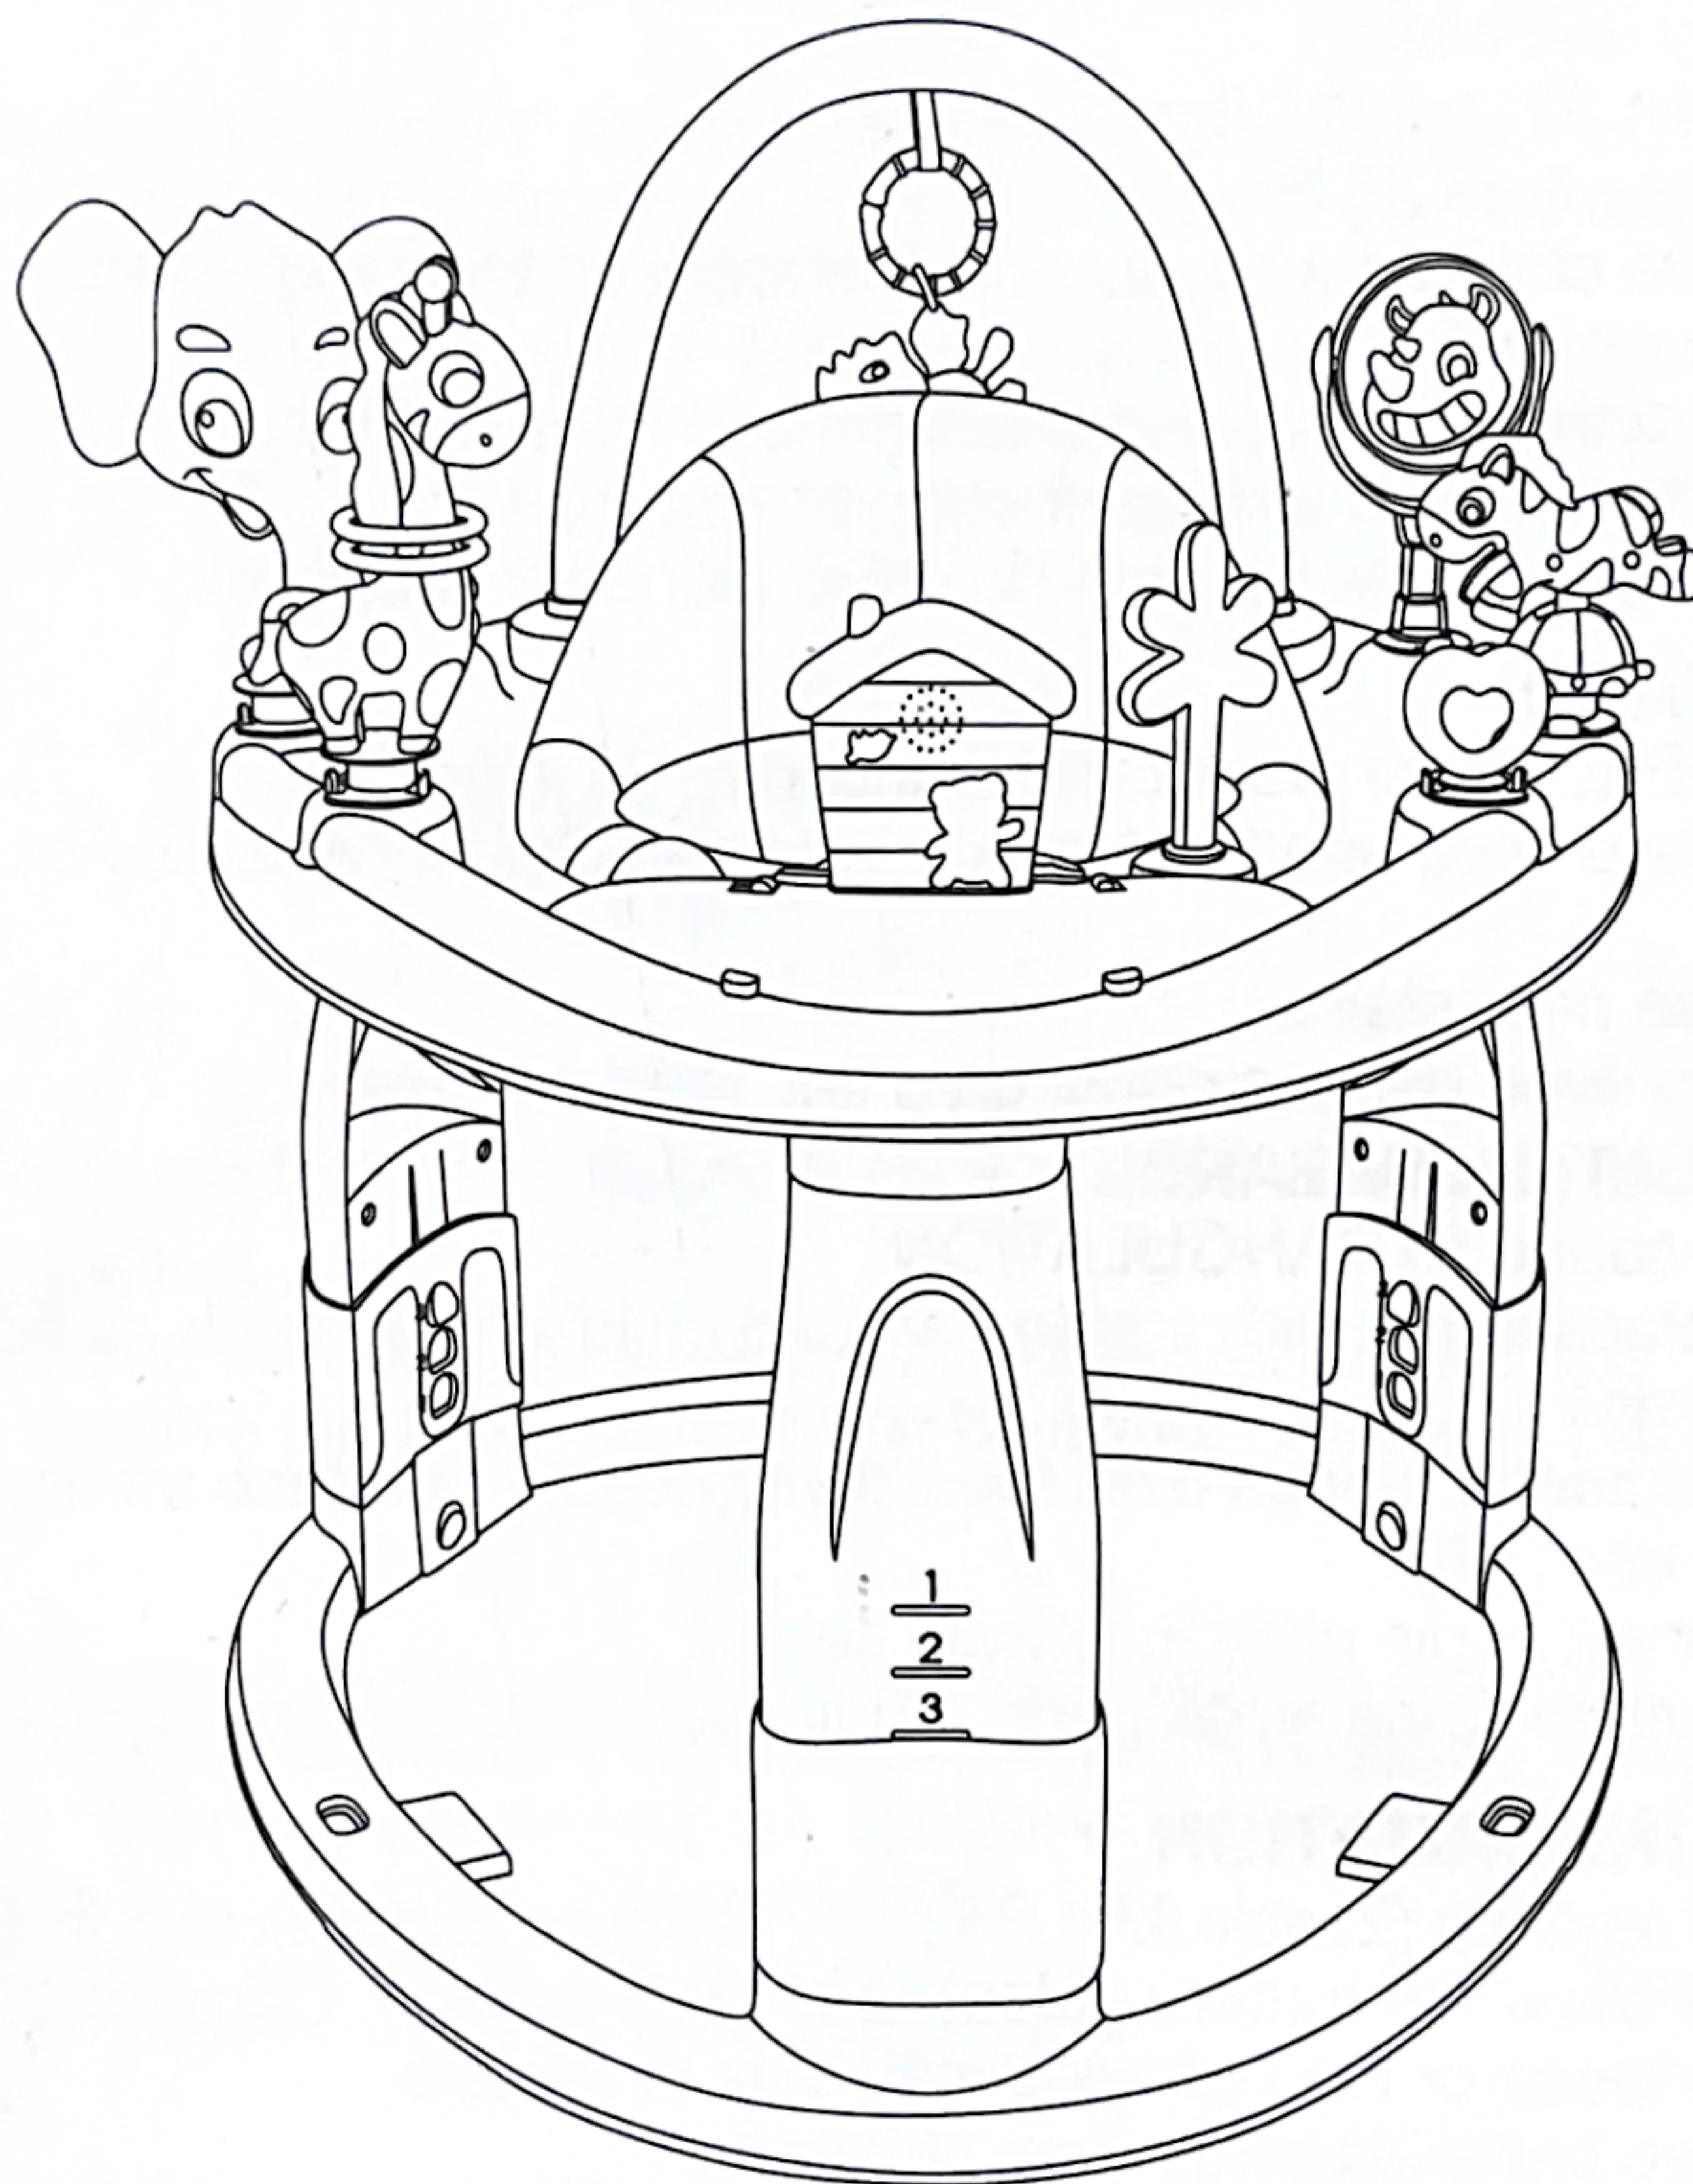

Supplied by  
Baby Factory (NZ) Ltd.  
[www.babyfactory.co.nz](http://www.babyfactory.co.nz)



# **WARNING**

Please read all instructions before assembly and use of the activity center. The child may be hurt if you do not follow these instructions.

- Care should be taken in unpacking and assembly.
- Examine product frequently for damaged, missing, or loose parts.
- Do not use activity center if damaged or broken.
- Keep instructions for future reference.

## **IMPORTANT SAFETY INFORMATION**

- Use the activity center **ONLY** if the child meets **ALL** of the requirements below:
  1. Is at least 6 months of age.
  2. Can sit up unassisted.
  3. Is less than 32" tall (81.2cm).
  4. Weighs less than 25 lbs. (11kg).
- Do not allow children who can stand or walk on their own to sit in the seat of the activity center.
- Never move the activity jumper while the child is in the seat.
- Do not add additional strings or straps to product.
- Do not use any hardware or parts other than that supplied.

## **FALL HAZARD!**

Babies can **FALL** from product resulting in head injuries.

- **NEVER** leave child unattended. Always keep child in view while in the activity center.
- **NEVER** use near stairs.
- To avoid tip over, place product on a flat, level surface.

## **STRANGULATION HAZARD!**

Strings can cause **STRANGULATION**.

- **DO NOT** place items with a string around child's neck, such as hood strings or pacifier cords.
  - **DO NOT** suspend strings over the activity center. or attach strings to toys.
- For indoor use only.
- Do not swing or spin child in activity center.
  - This product contains small parts. Adult assembly required. Colors may vary.

## **BATTERY INFORMATION**

This product requires (2) size AA/LR6 (1.5V) alkaline batteries (not included).

**CAUTION:** Follow the battery guidelines in this section. Otherwise, battery life may be shortened or the batteries may leak or rupture.

- Always keep batteries away from children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.



- Install the batteries so that the polarity of each one matches the markings in the battery compartment.
  - Do not short-circuit the batteries.
  - Do not store batteries in areas that have extreme temperatures (such as attics, garages, or automobiles).
  - Remove exhausted batteries from the battery compartment.
  - Never attempt to recharge a battery unless it is specifically marked "rechargeable."
  - Rechargeable batteries are to be removed from the toy before being charged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Do not use rechargeable alkaline batteries in a Ni-Cad or Ni-MH battery charger.
  - Please use the correct disposal method for batteries.
  - Remove batteries before putting the product into storage for a prolonged period of time.
  - Weak batteries cause erratic product operation, including distorted sound. Because each electrical component requires a different operating voltage, replace the batteries when any function fails to operate.
  - Keep liquids away from the product. Spillage could affect the sound or operation.
  - Do not dispose of product or batteries in fire, batteries may explode or leak.
- This symbol indicates that the product is not to be disposed of in household waste health. Contact local authority for recycling & collection information.

#### **SEAT PAD:**

Use mild soap or upholstery shampoo.

Hand wash separately in cold water.

Do not bleach.

Do not soak.

Do not tumble dry.

Do not dry clean. ☒

Dry flat in the shade thoroughly before reuse and avoid direct heat and sunlight.

#### **ACTIVITY CENTRE:**

Wipe with a damp cloth and dry immediately with a soft clean cloth.

Do not use abrasive pads, bleach or strong household cleaners. Damage may result.

#### **Maintenance**

- The correct use and maintenance of this activity centre is essential.
- This product requires regular maintenance to keep it in good working order.
- All assembly fittings are to be properly tightened. Inspect regularly. Do not use if any components are broken, torn or missing.
- Use only spares provided by the manufacturer.
- This product is not intended for commercial use.


#### **Disposal**

Electrical and electronic equipment should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.


Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

The cardboard and paper packaging from this product can be recycled.



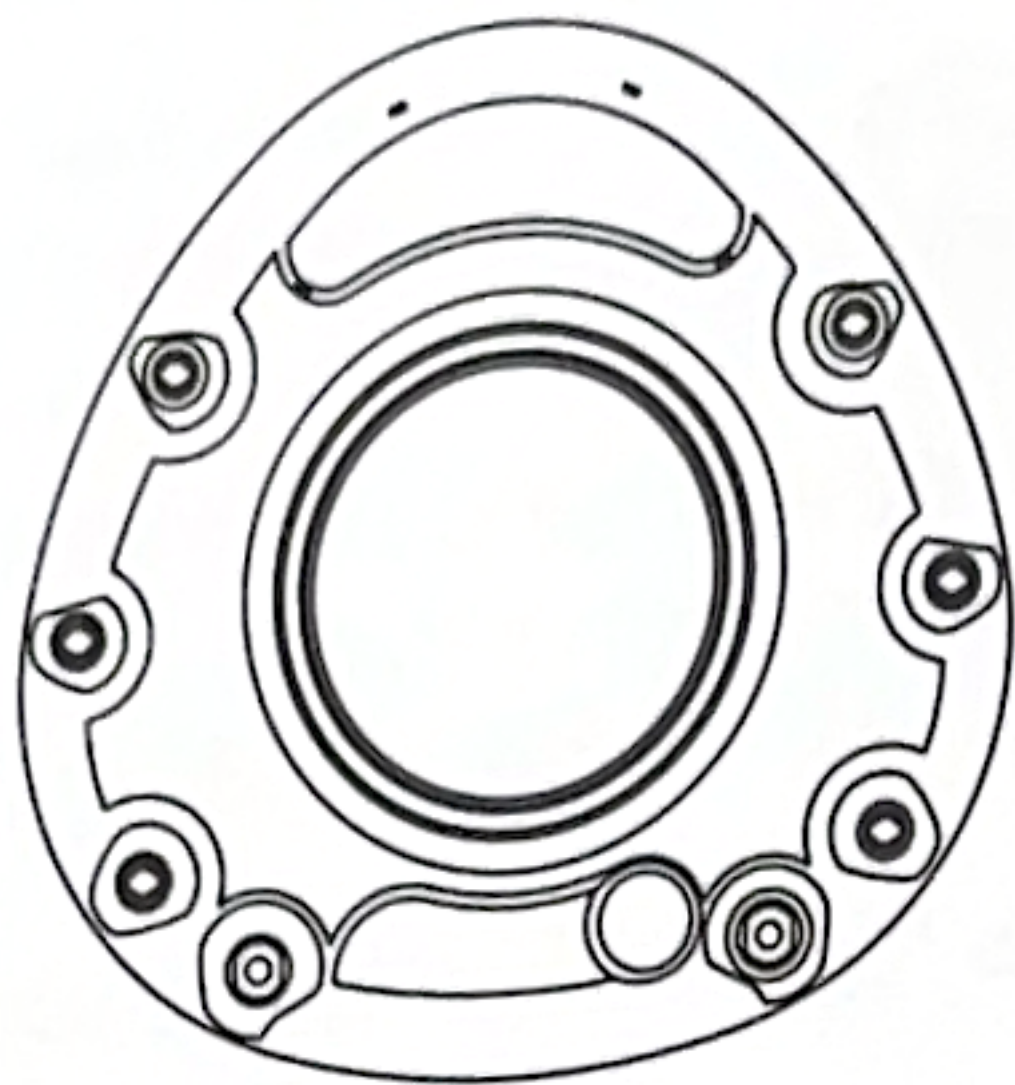

**A. x1**

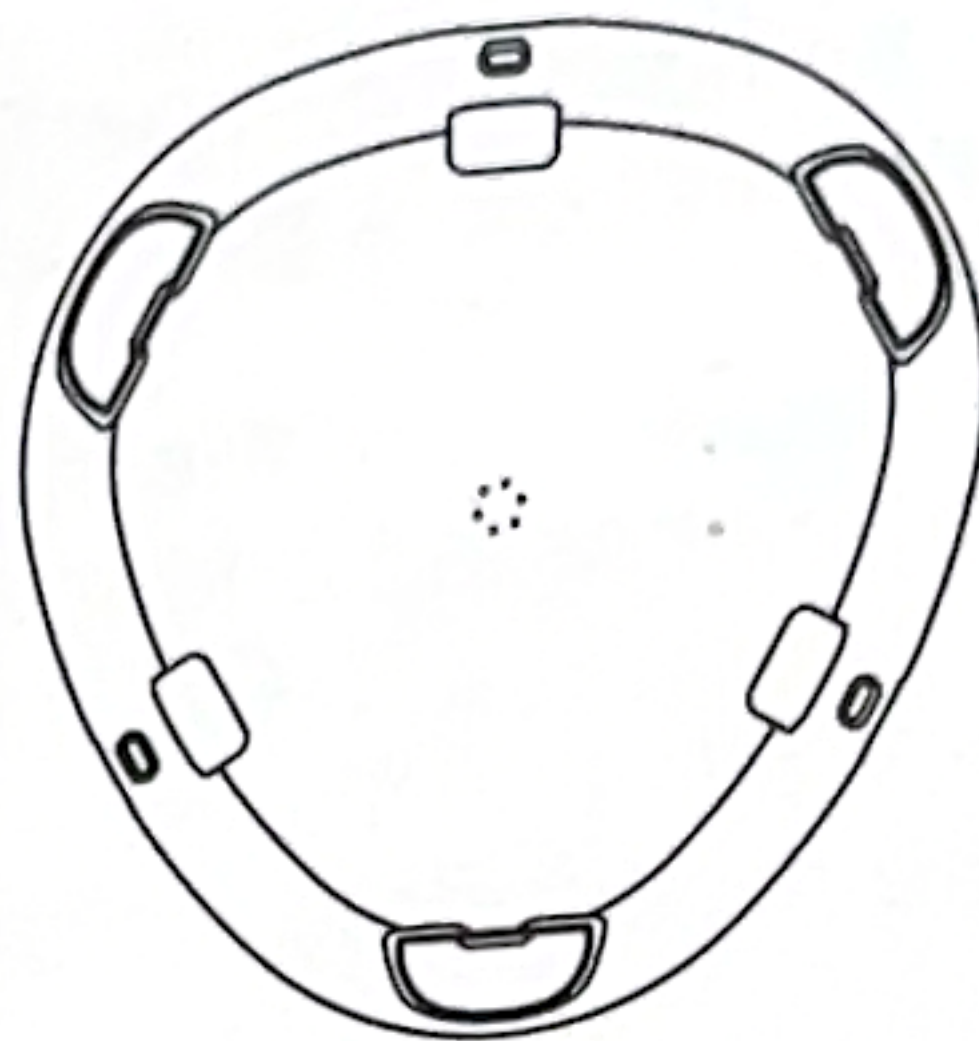


**B. x1**




**C. x1**



**D. x3**

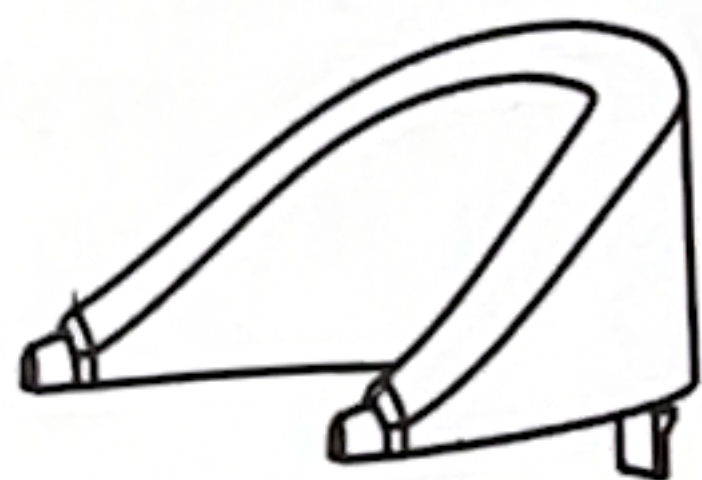


**E. x1**

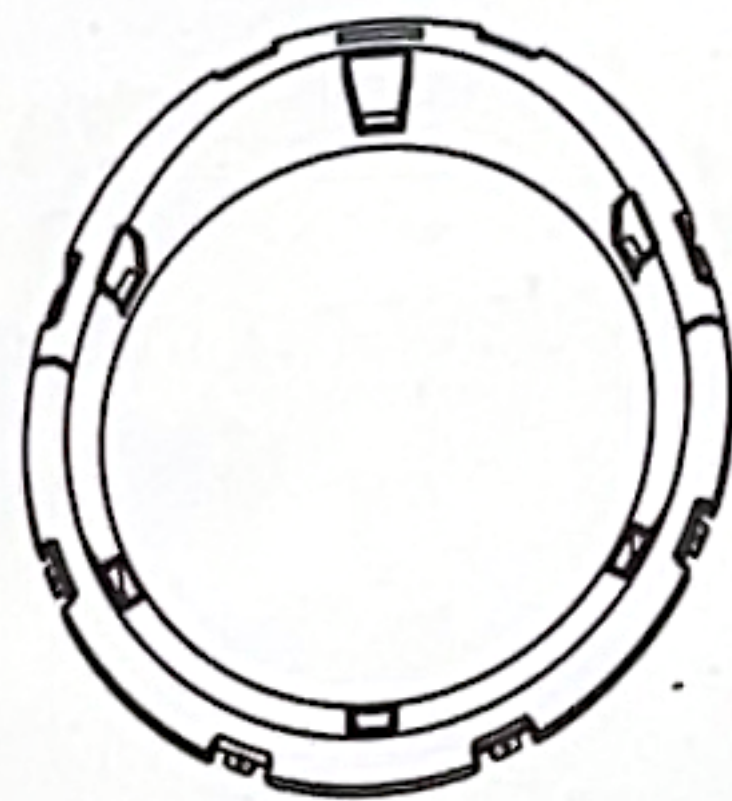


**F. x1**



**G. x1**

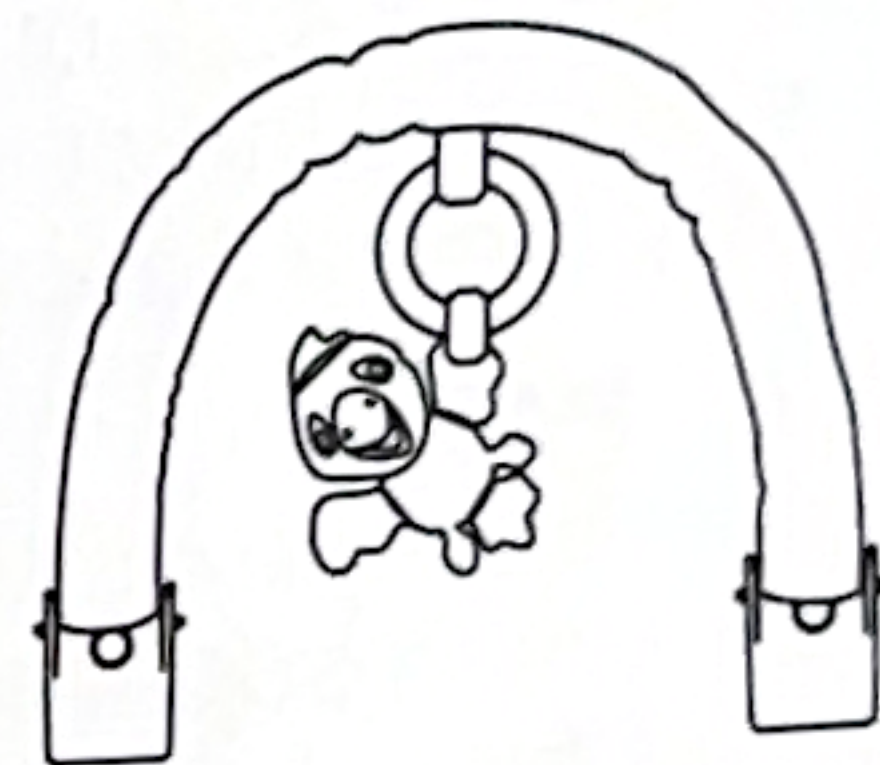

**H. x1**

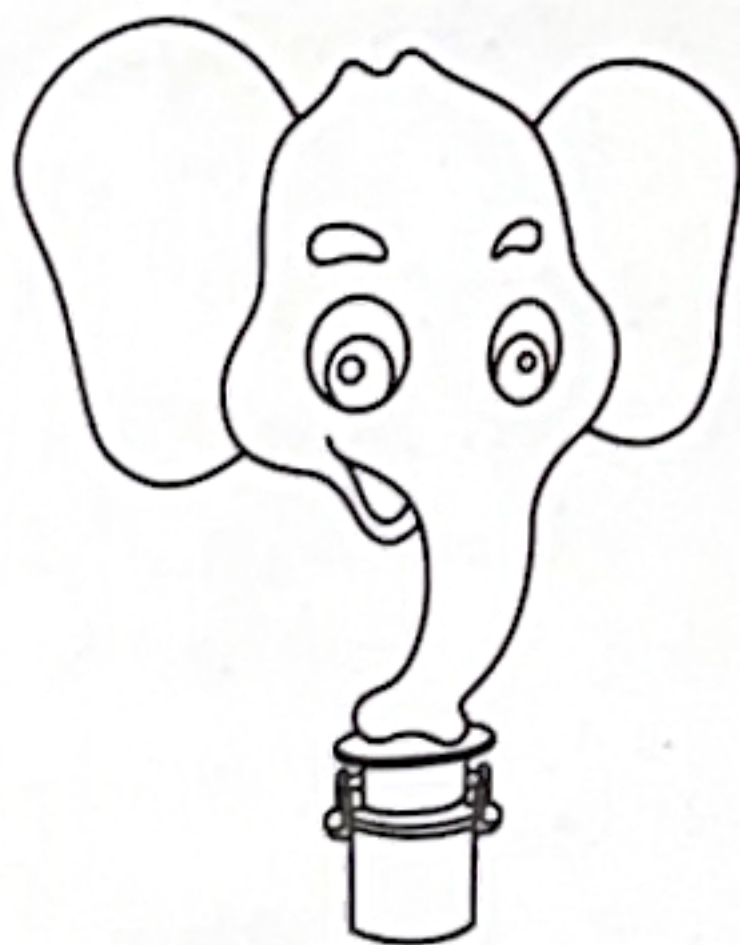

**I. x1**




**J. x1**



**K. x1**



**L. x1**

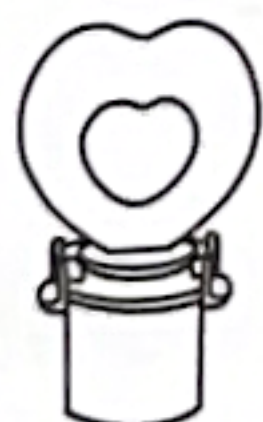

**M. x1**







**N. x1**



**TOOL NEEDED:** Phillips Screwdriver (Not Provided)




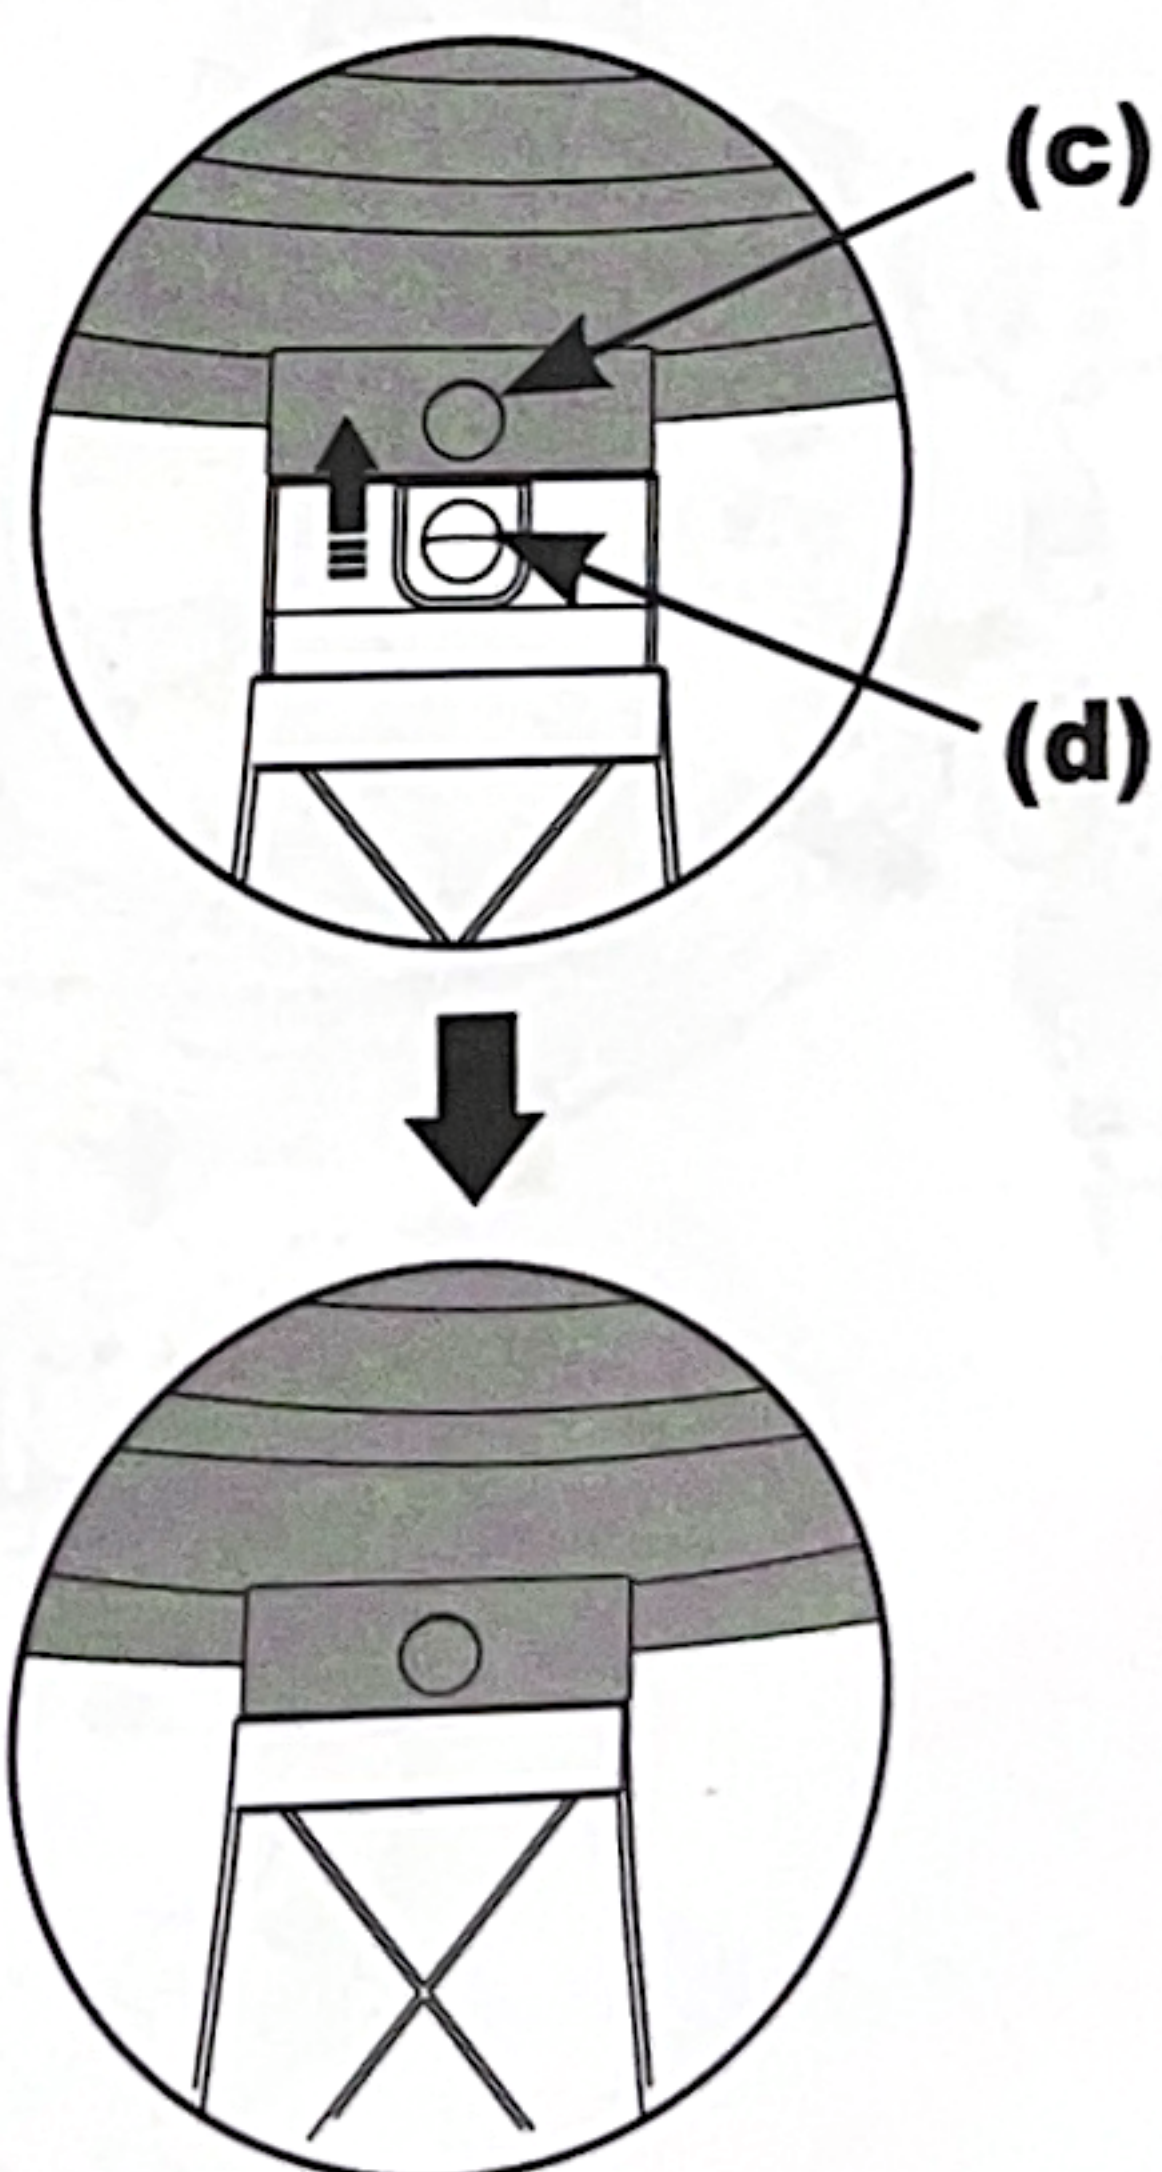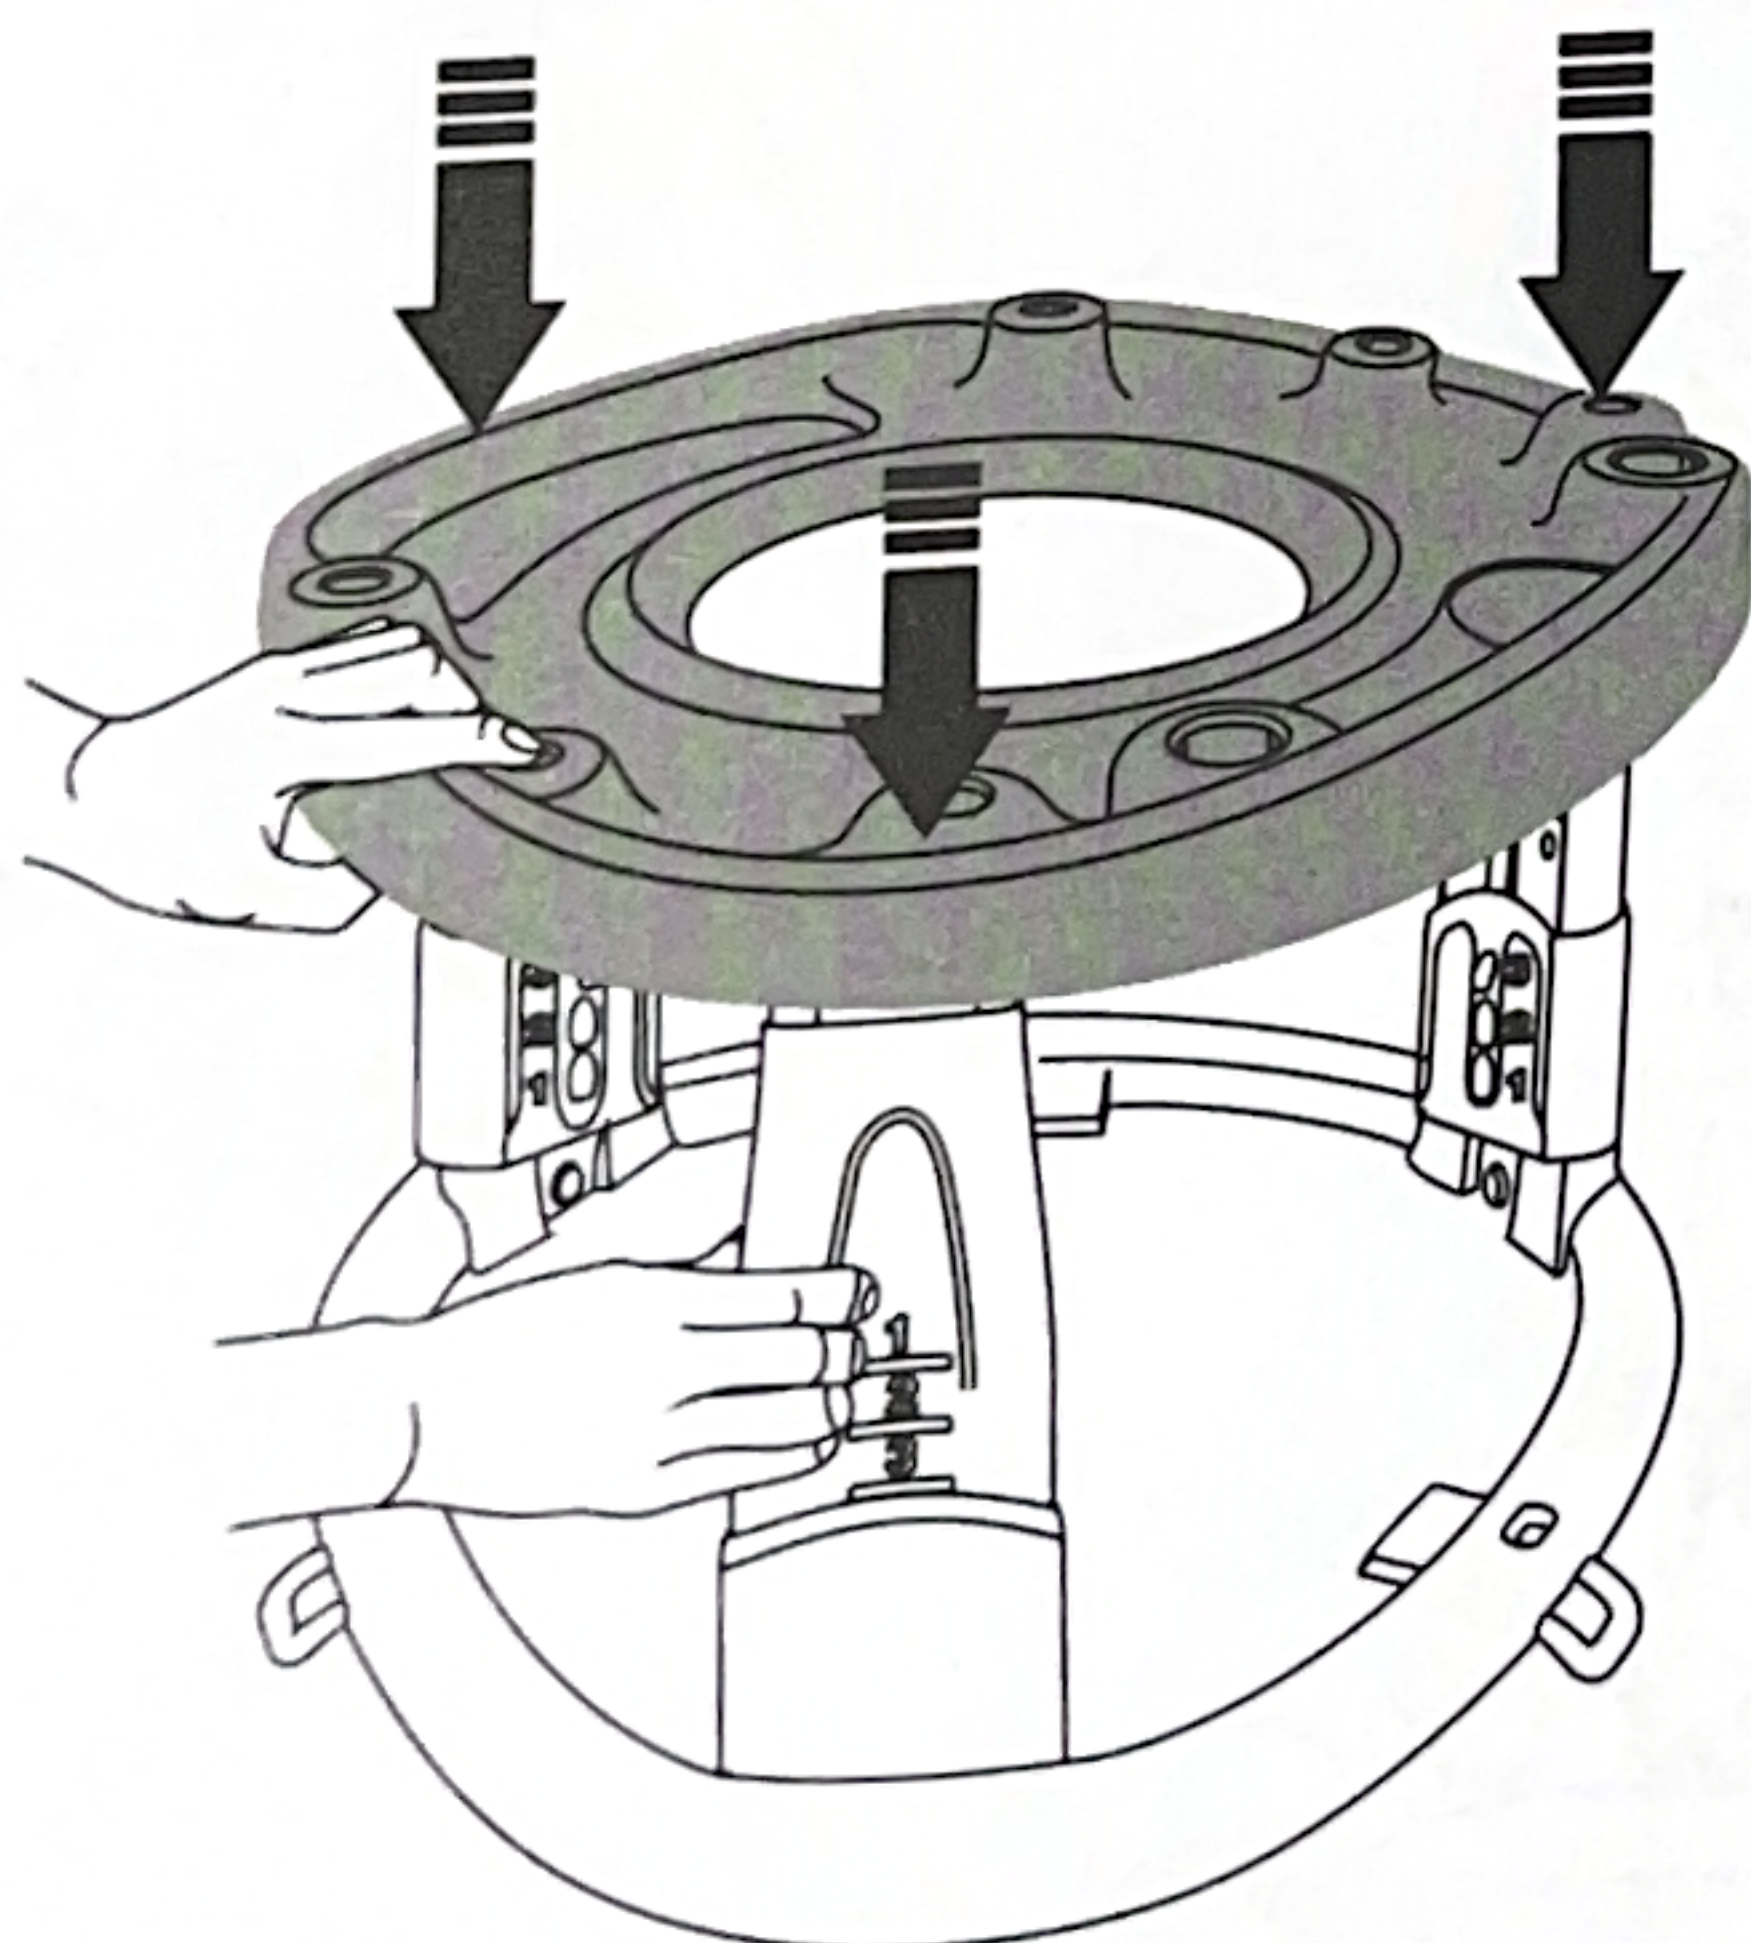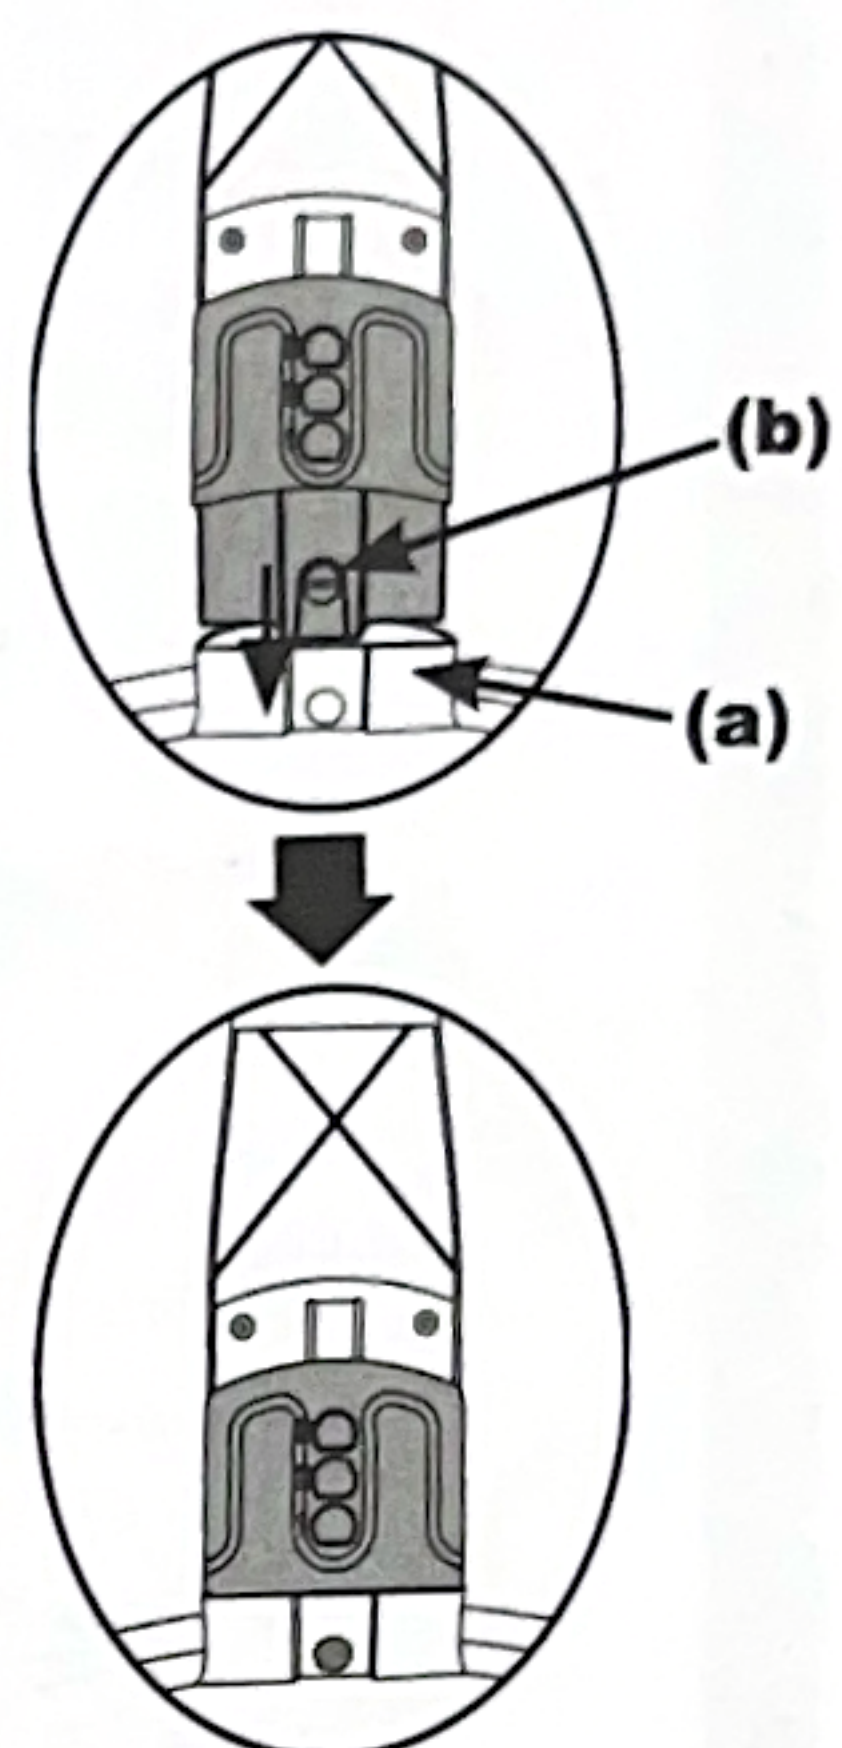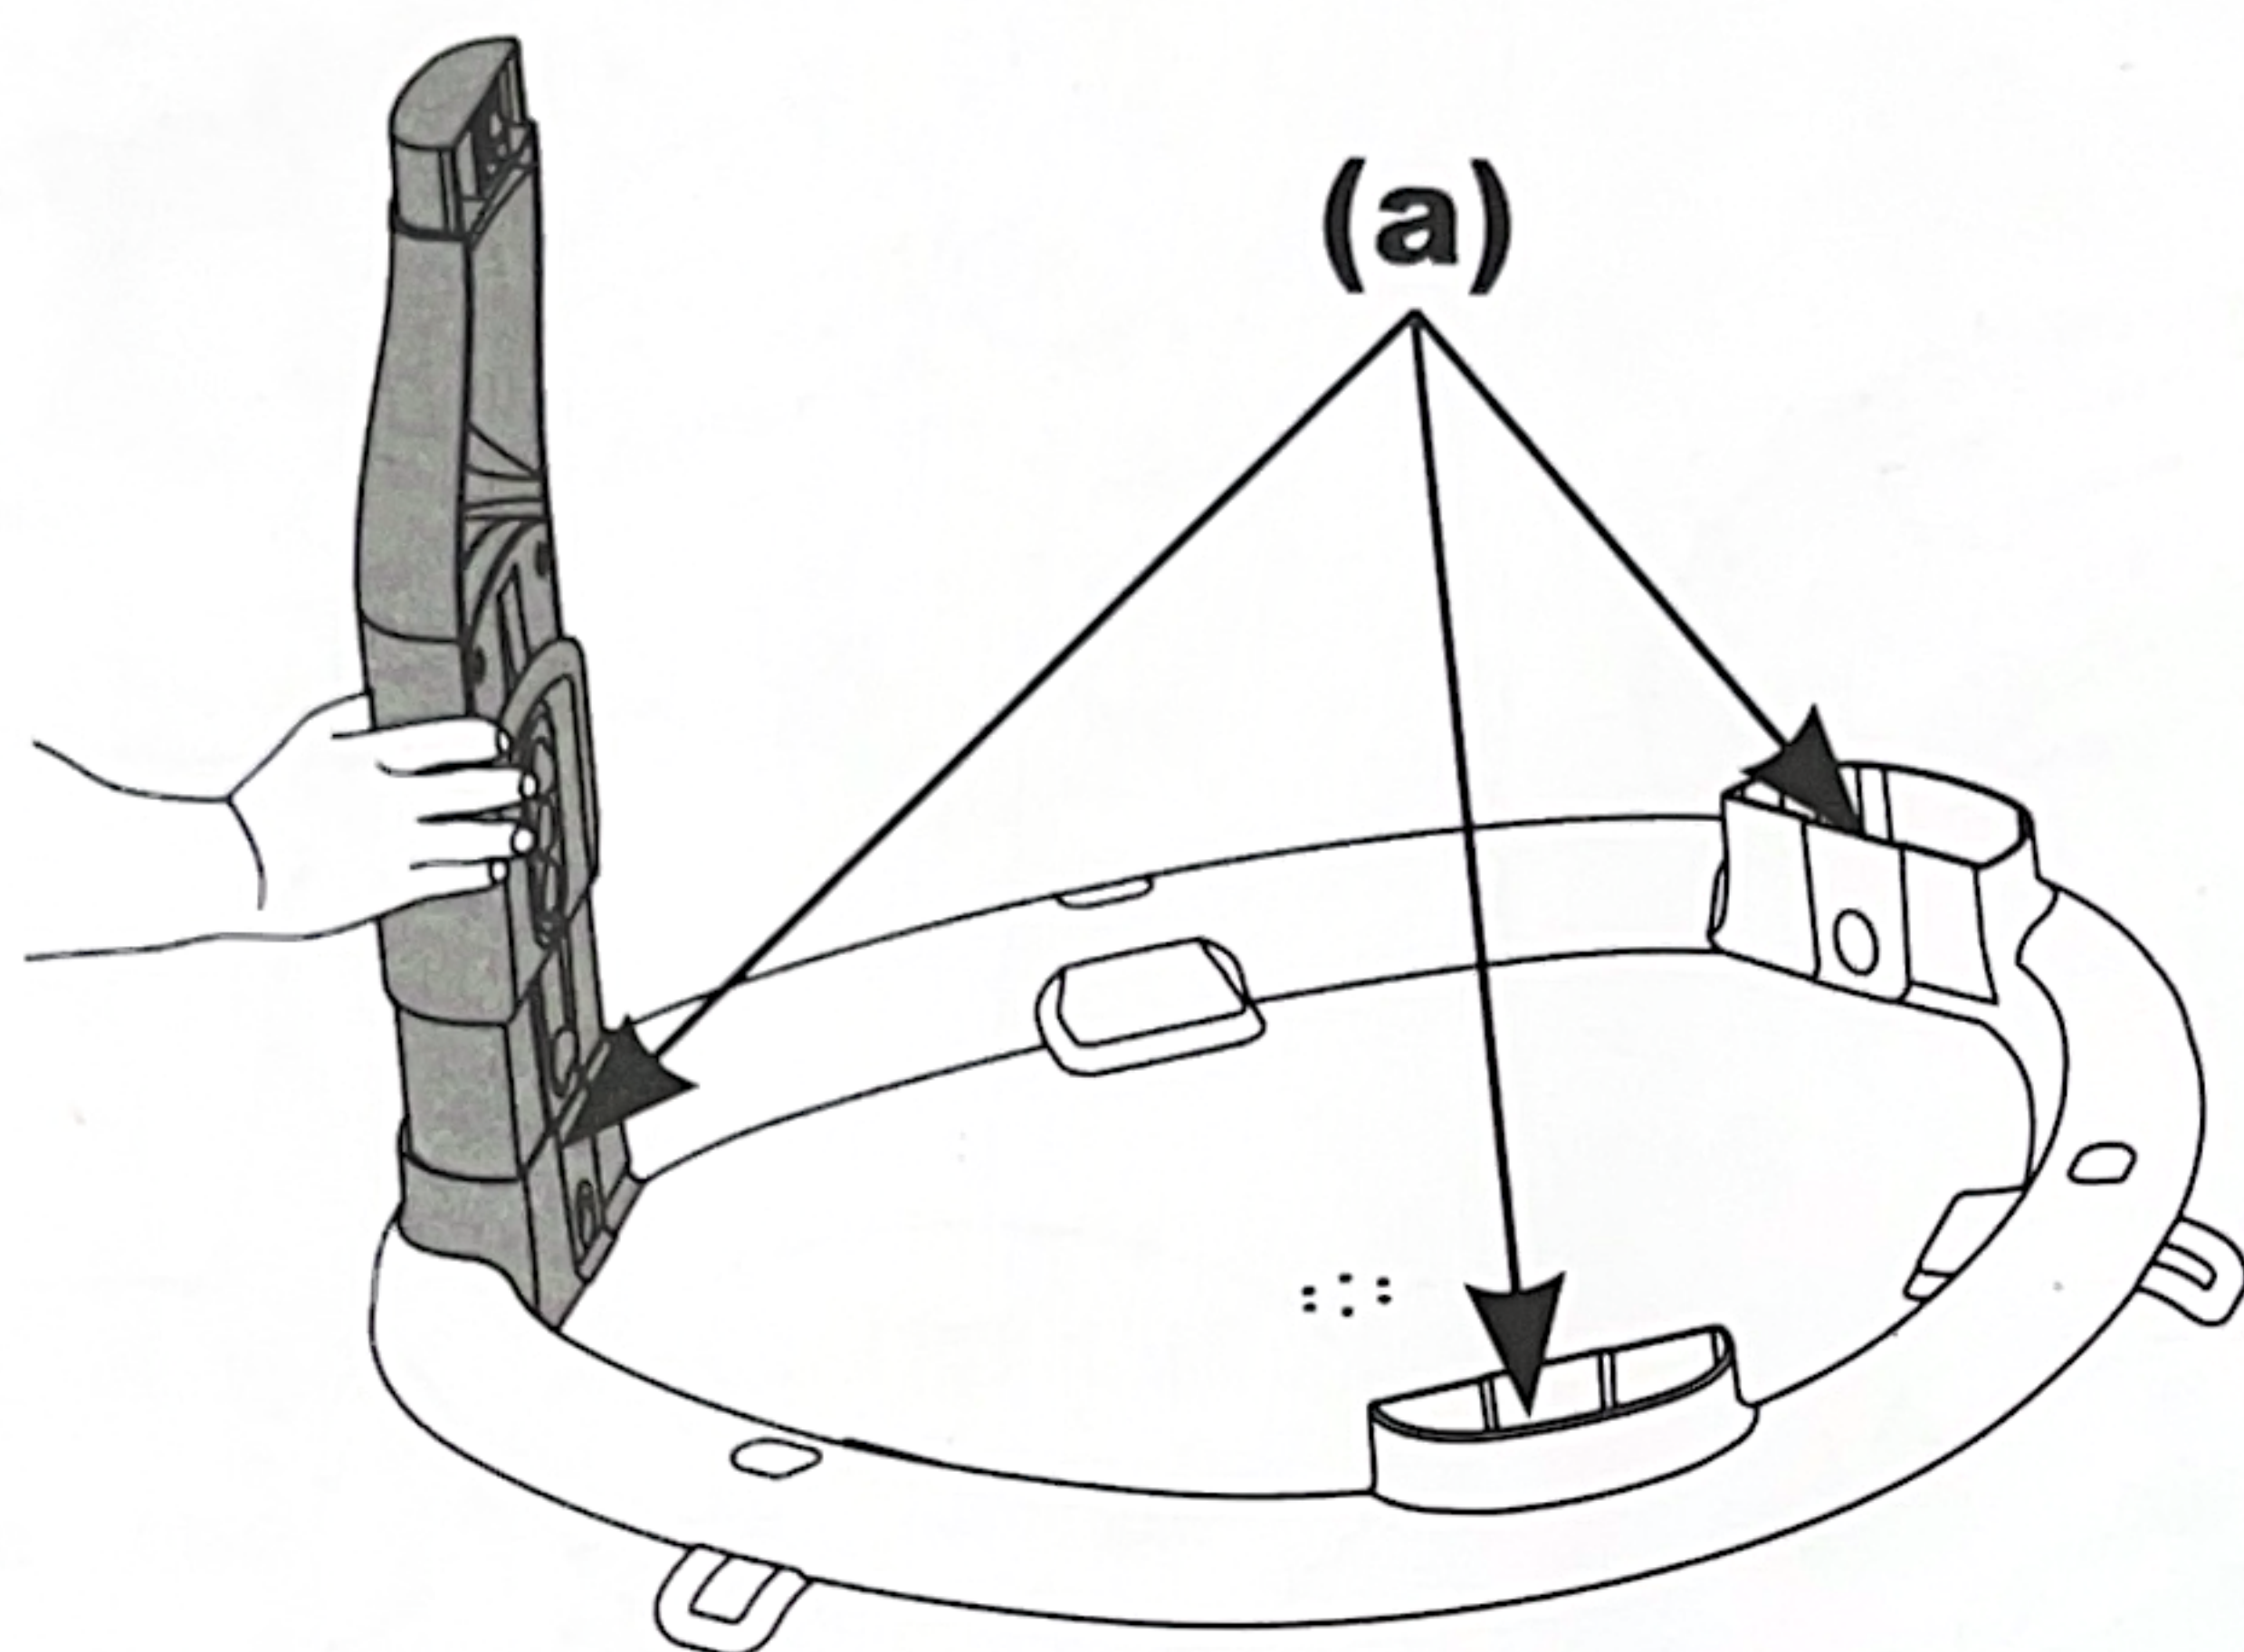




STEP 3



1

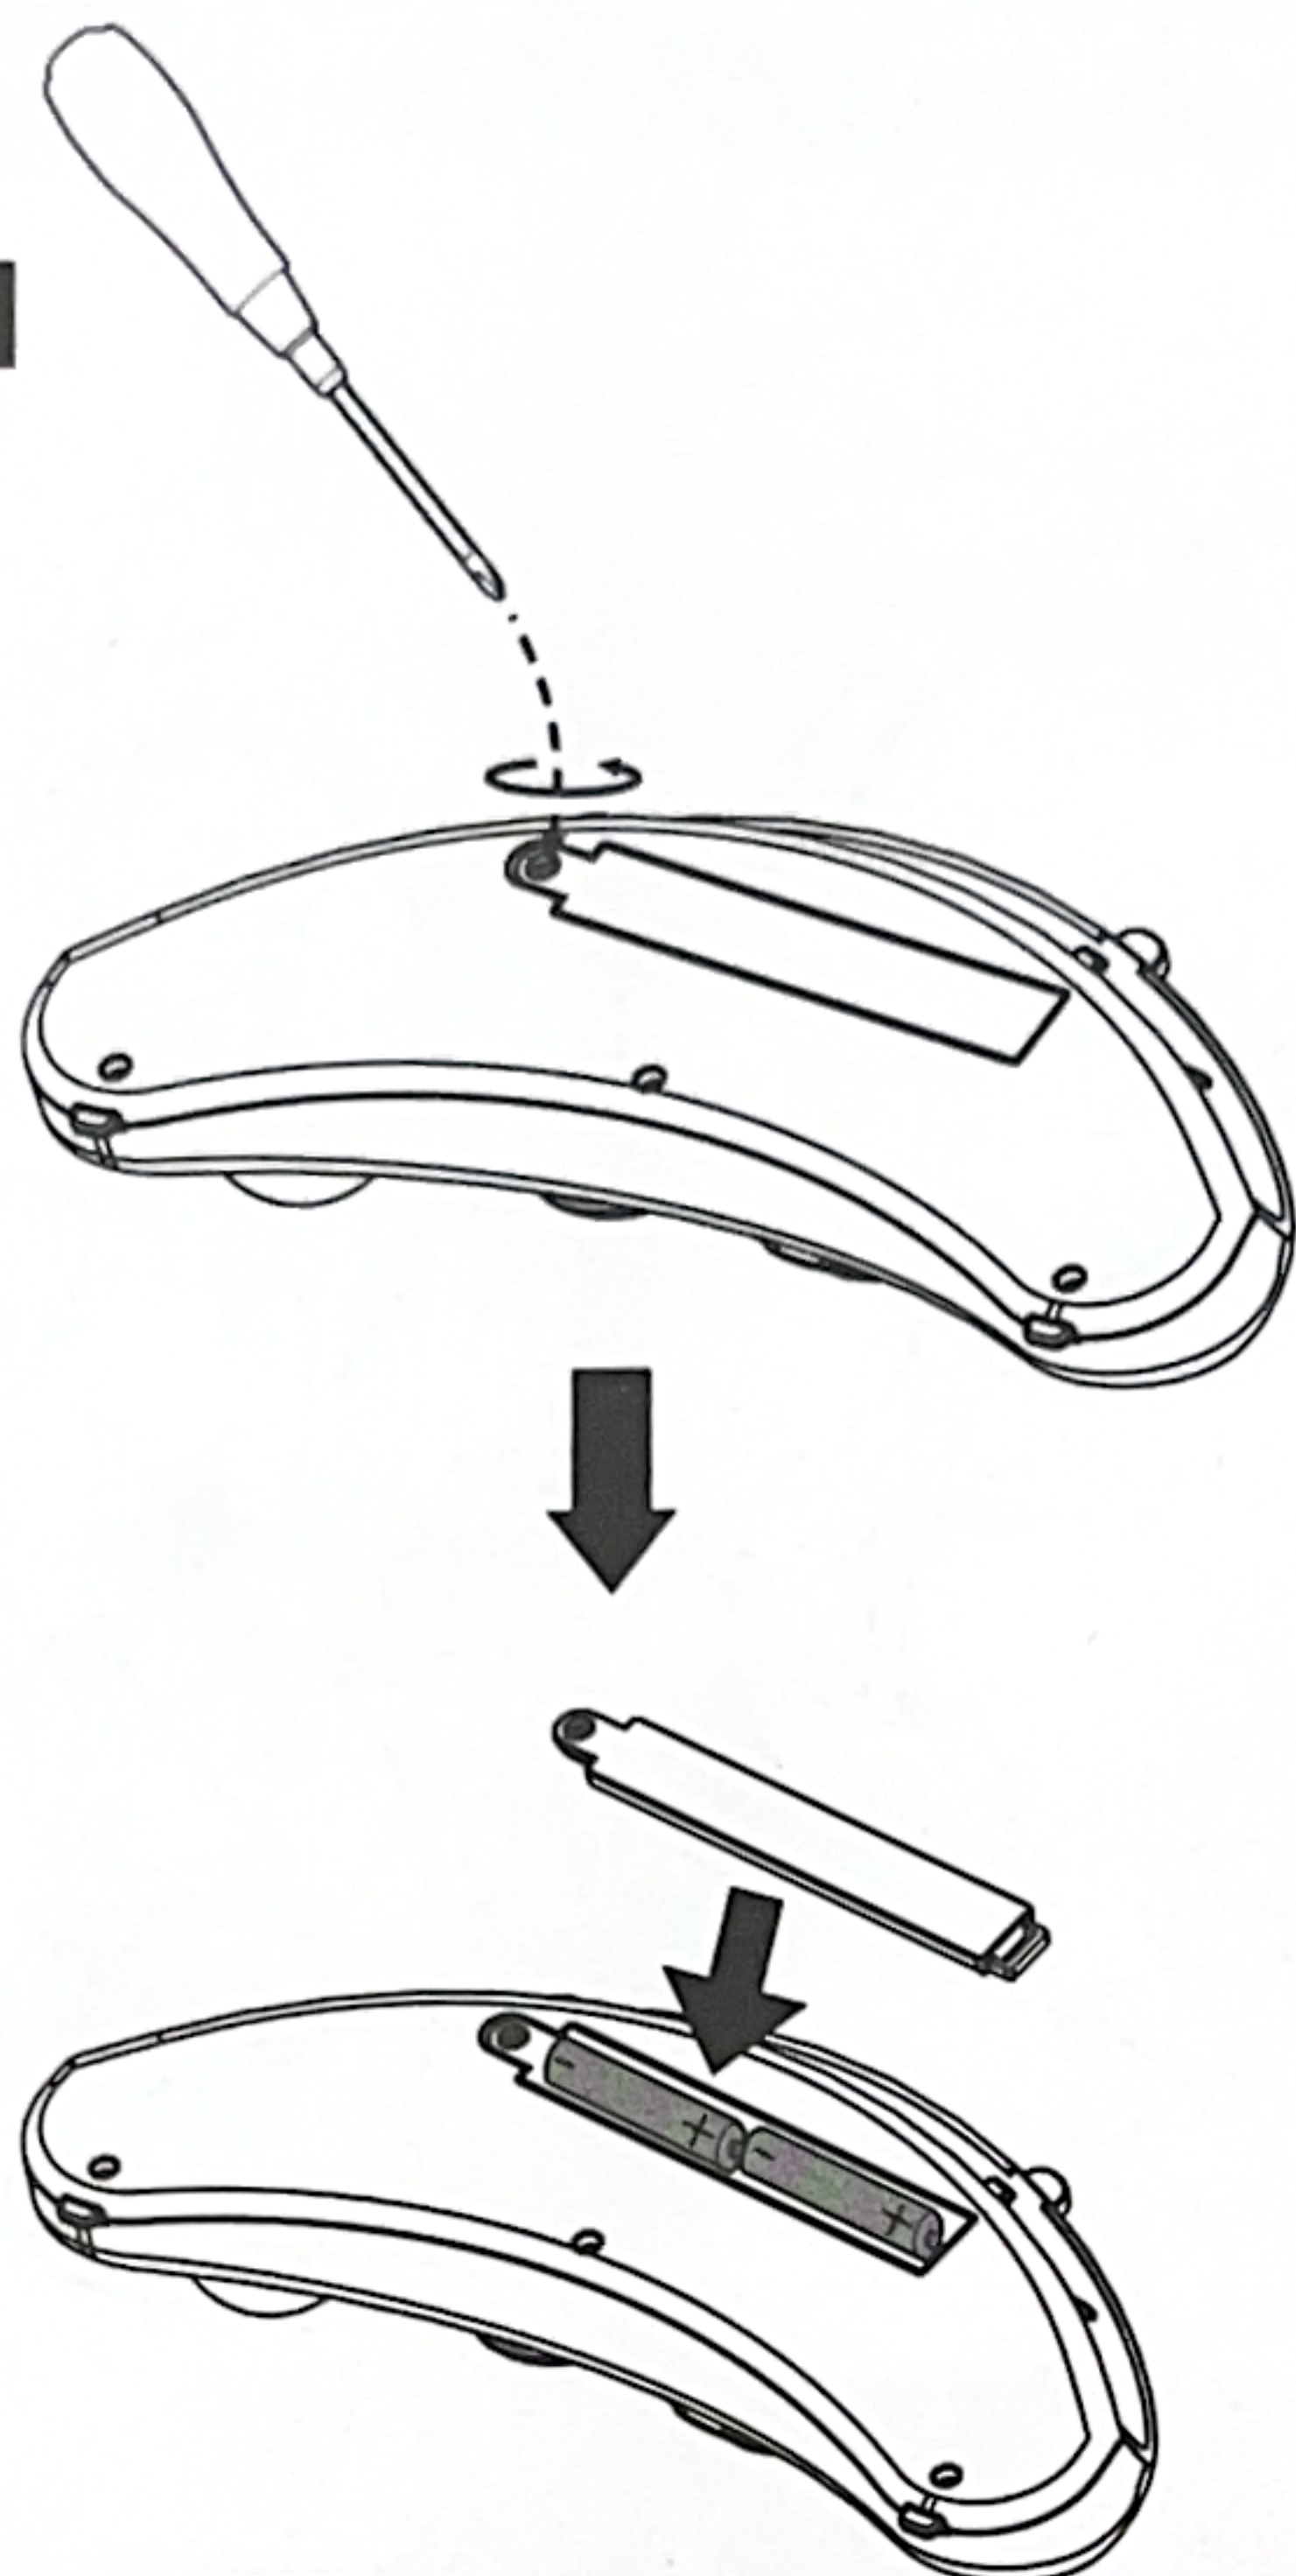

2

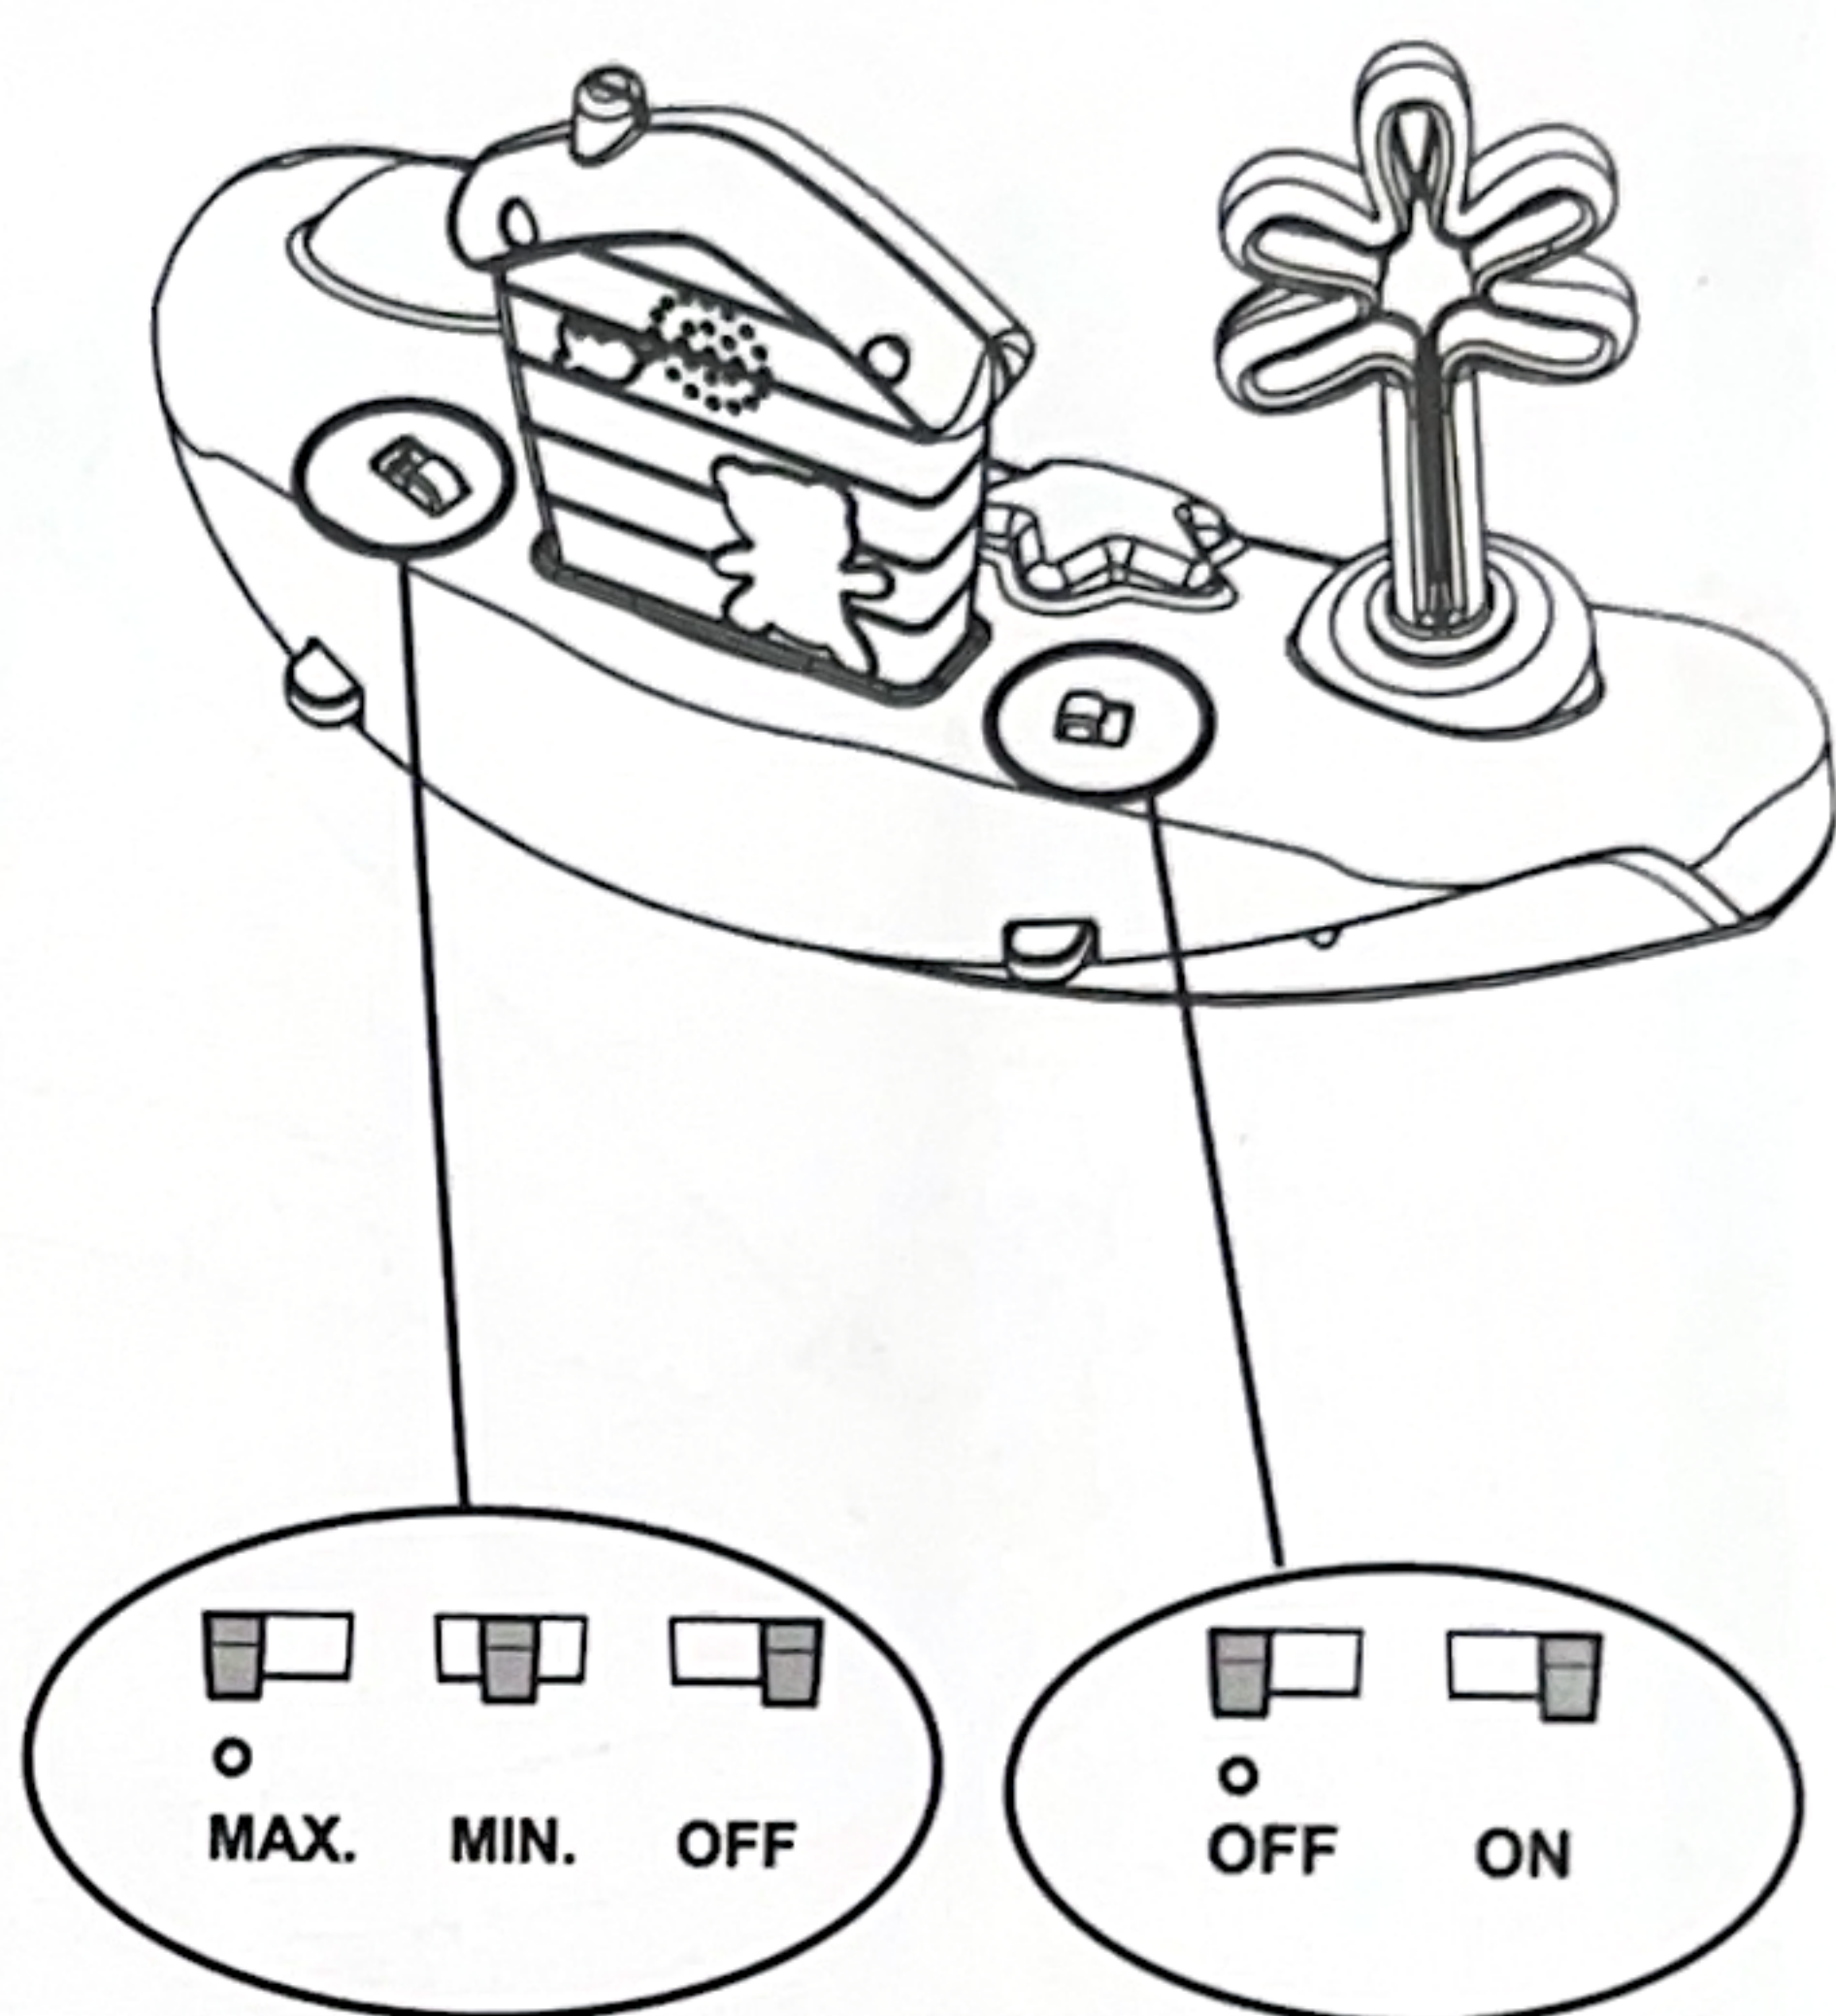

STEP 4

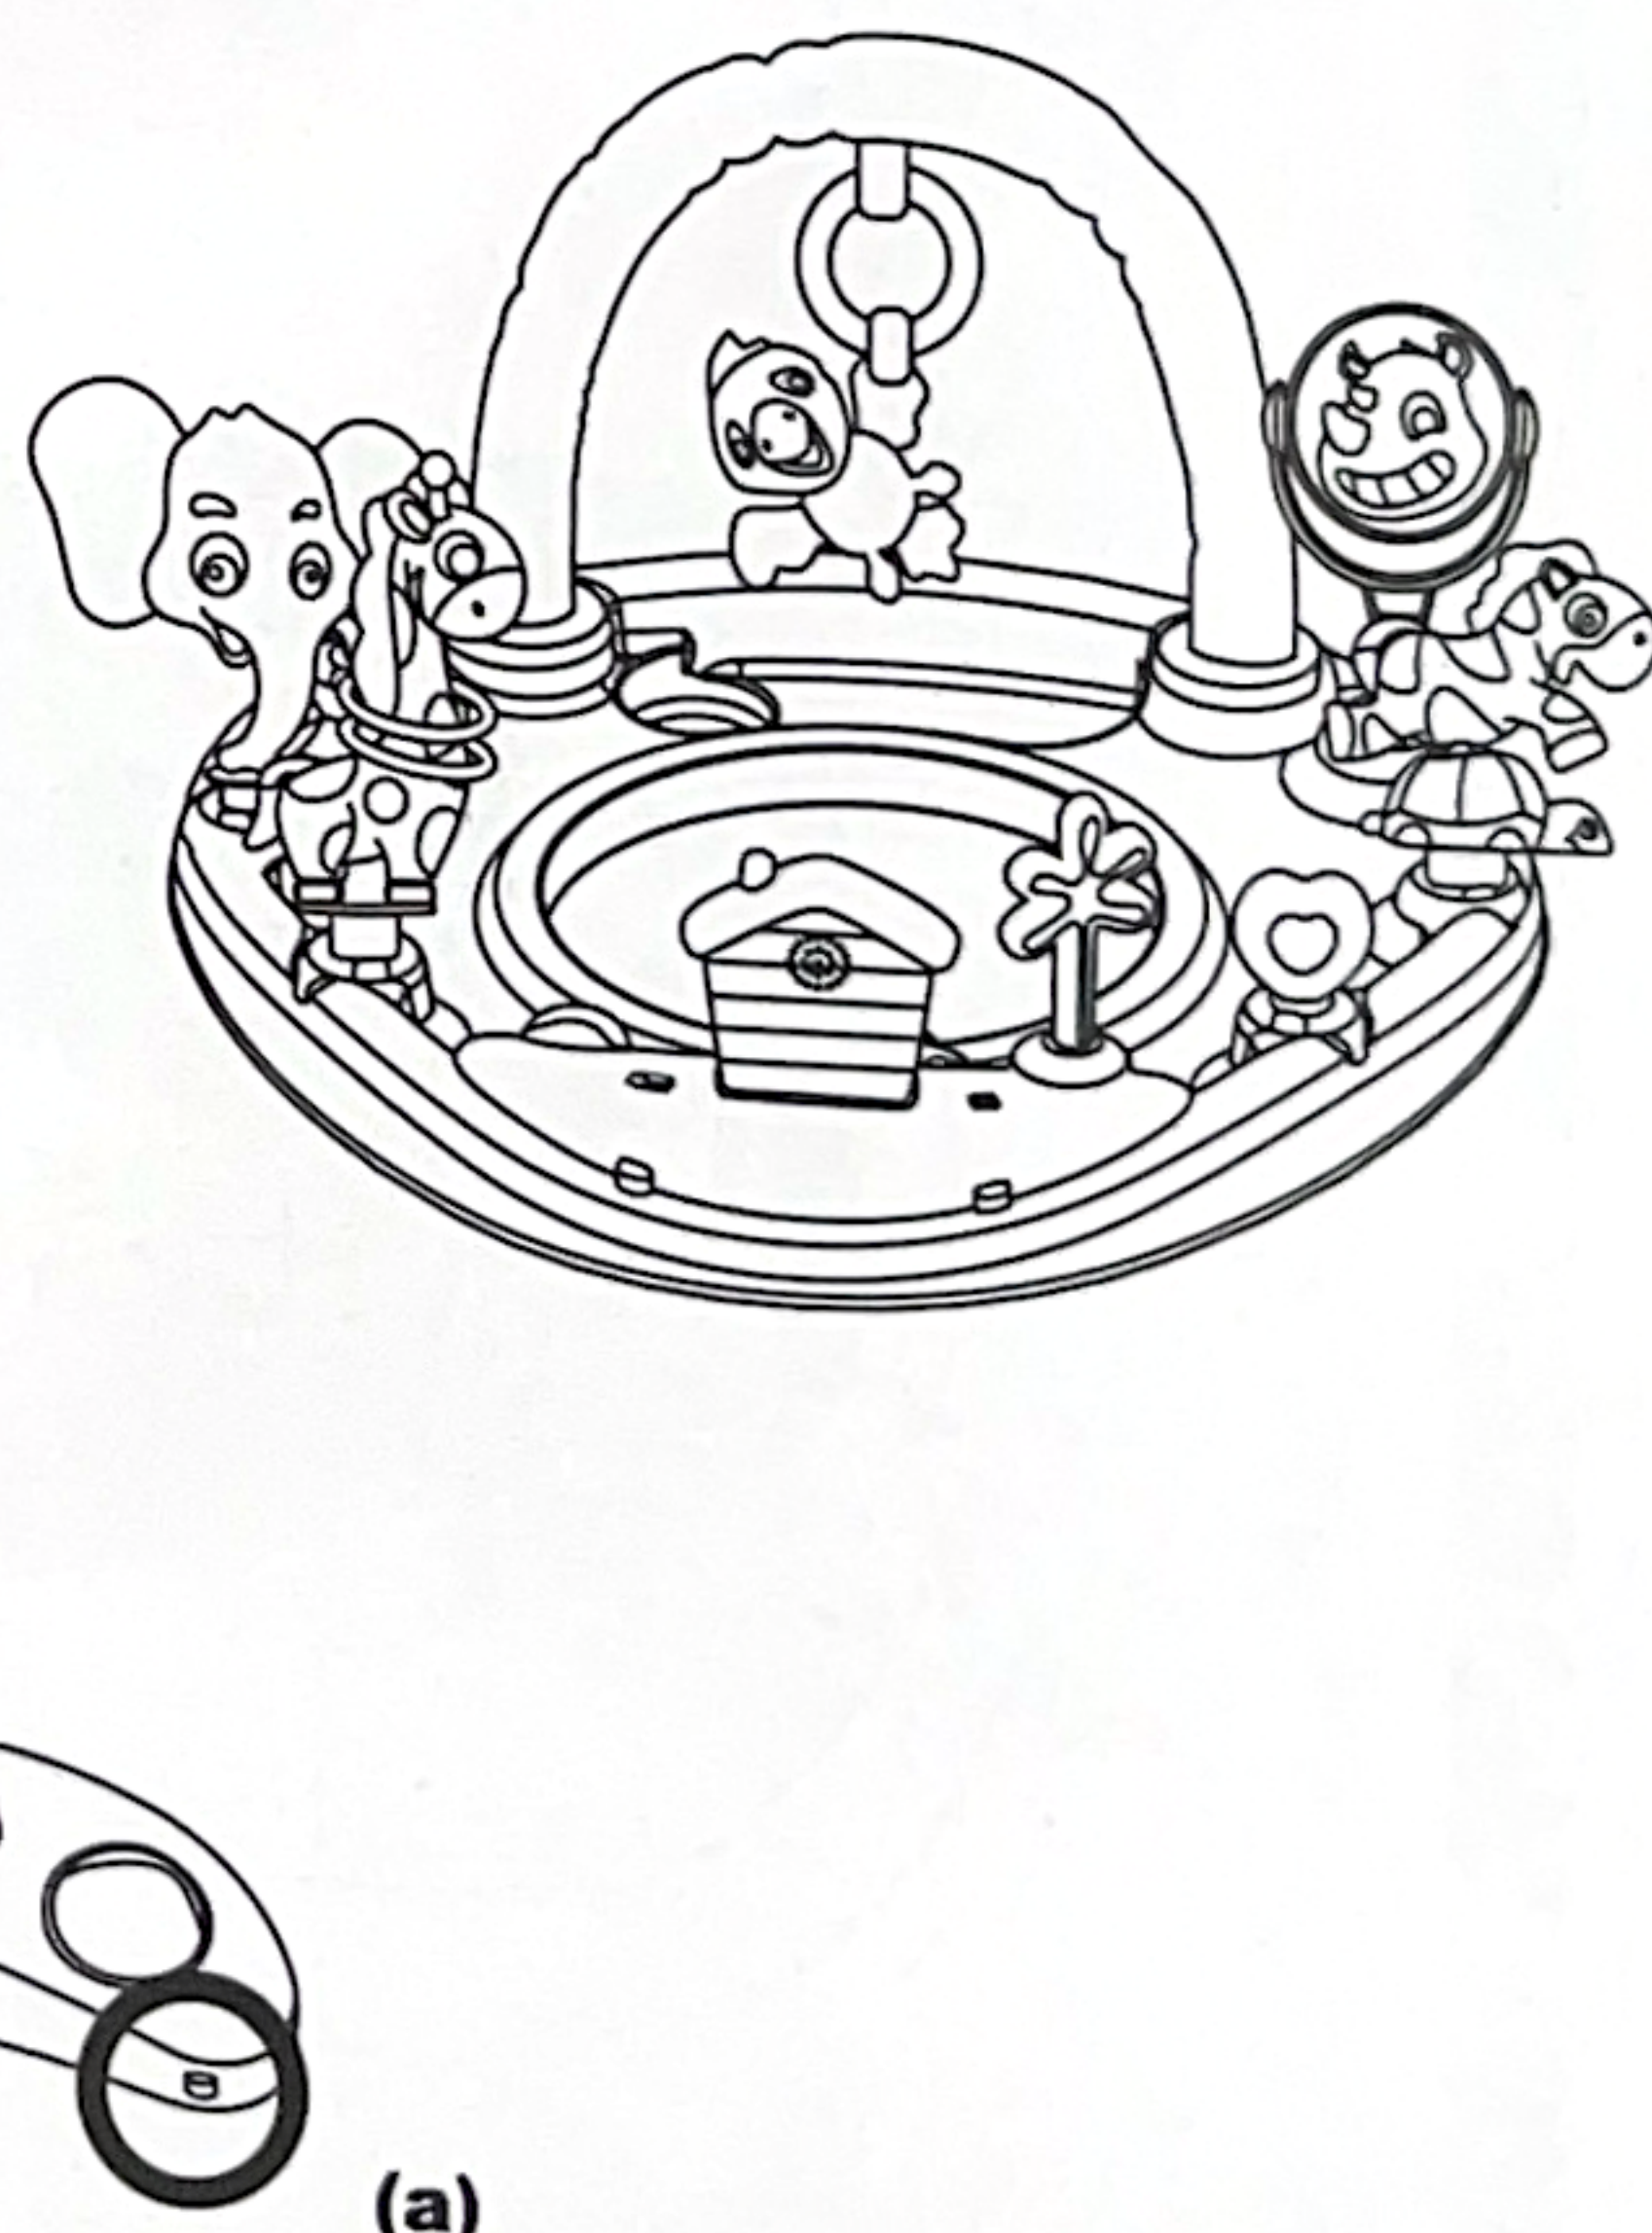
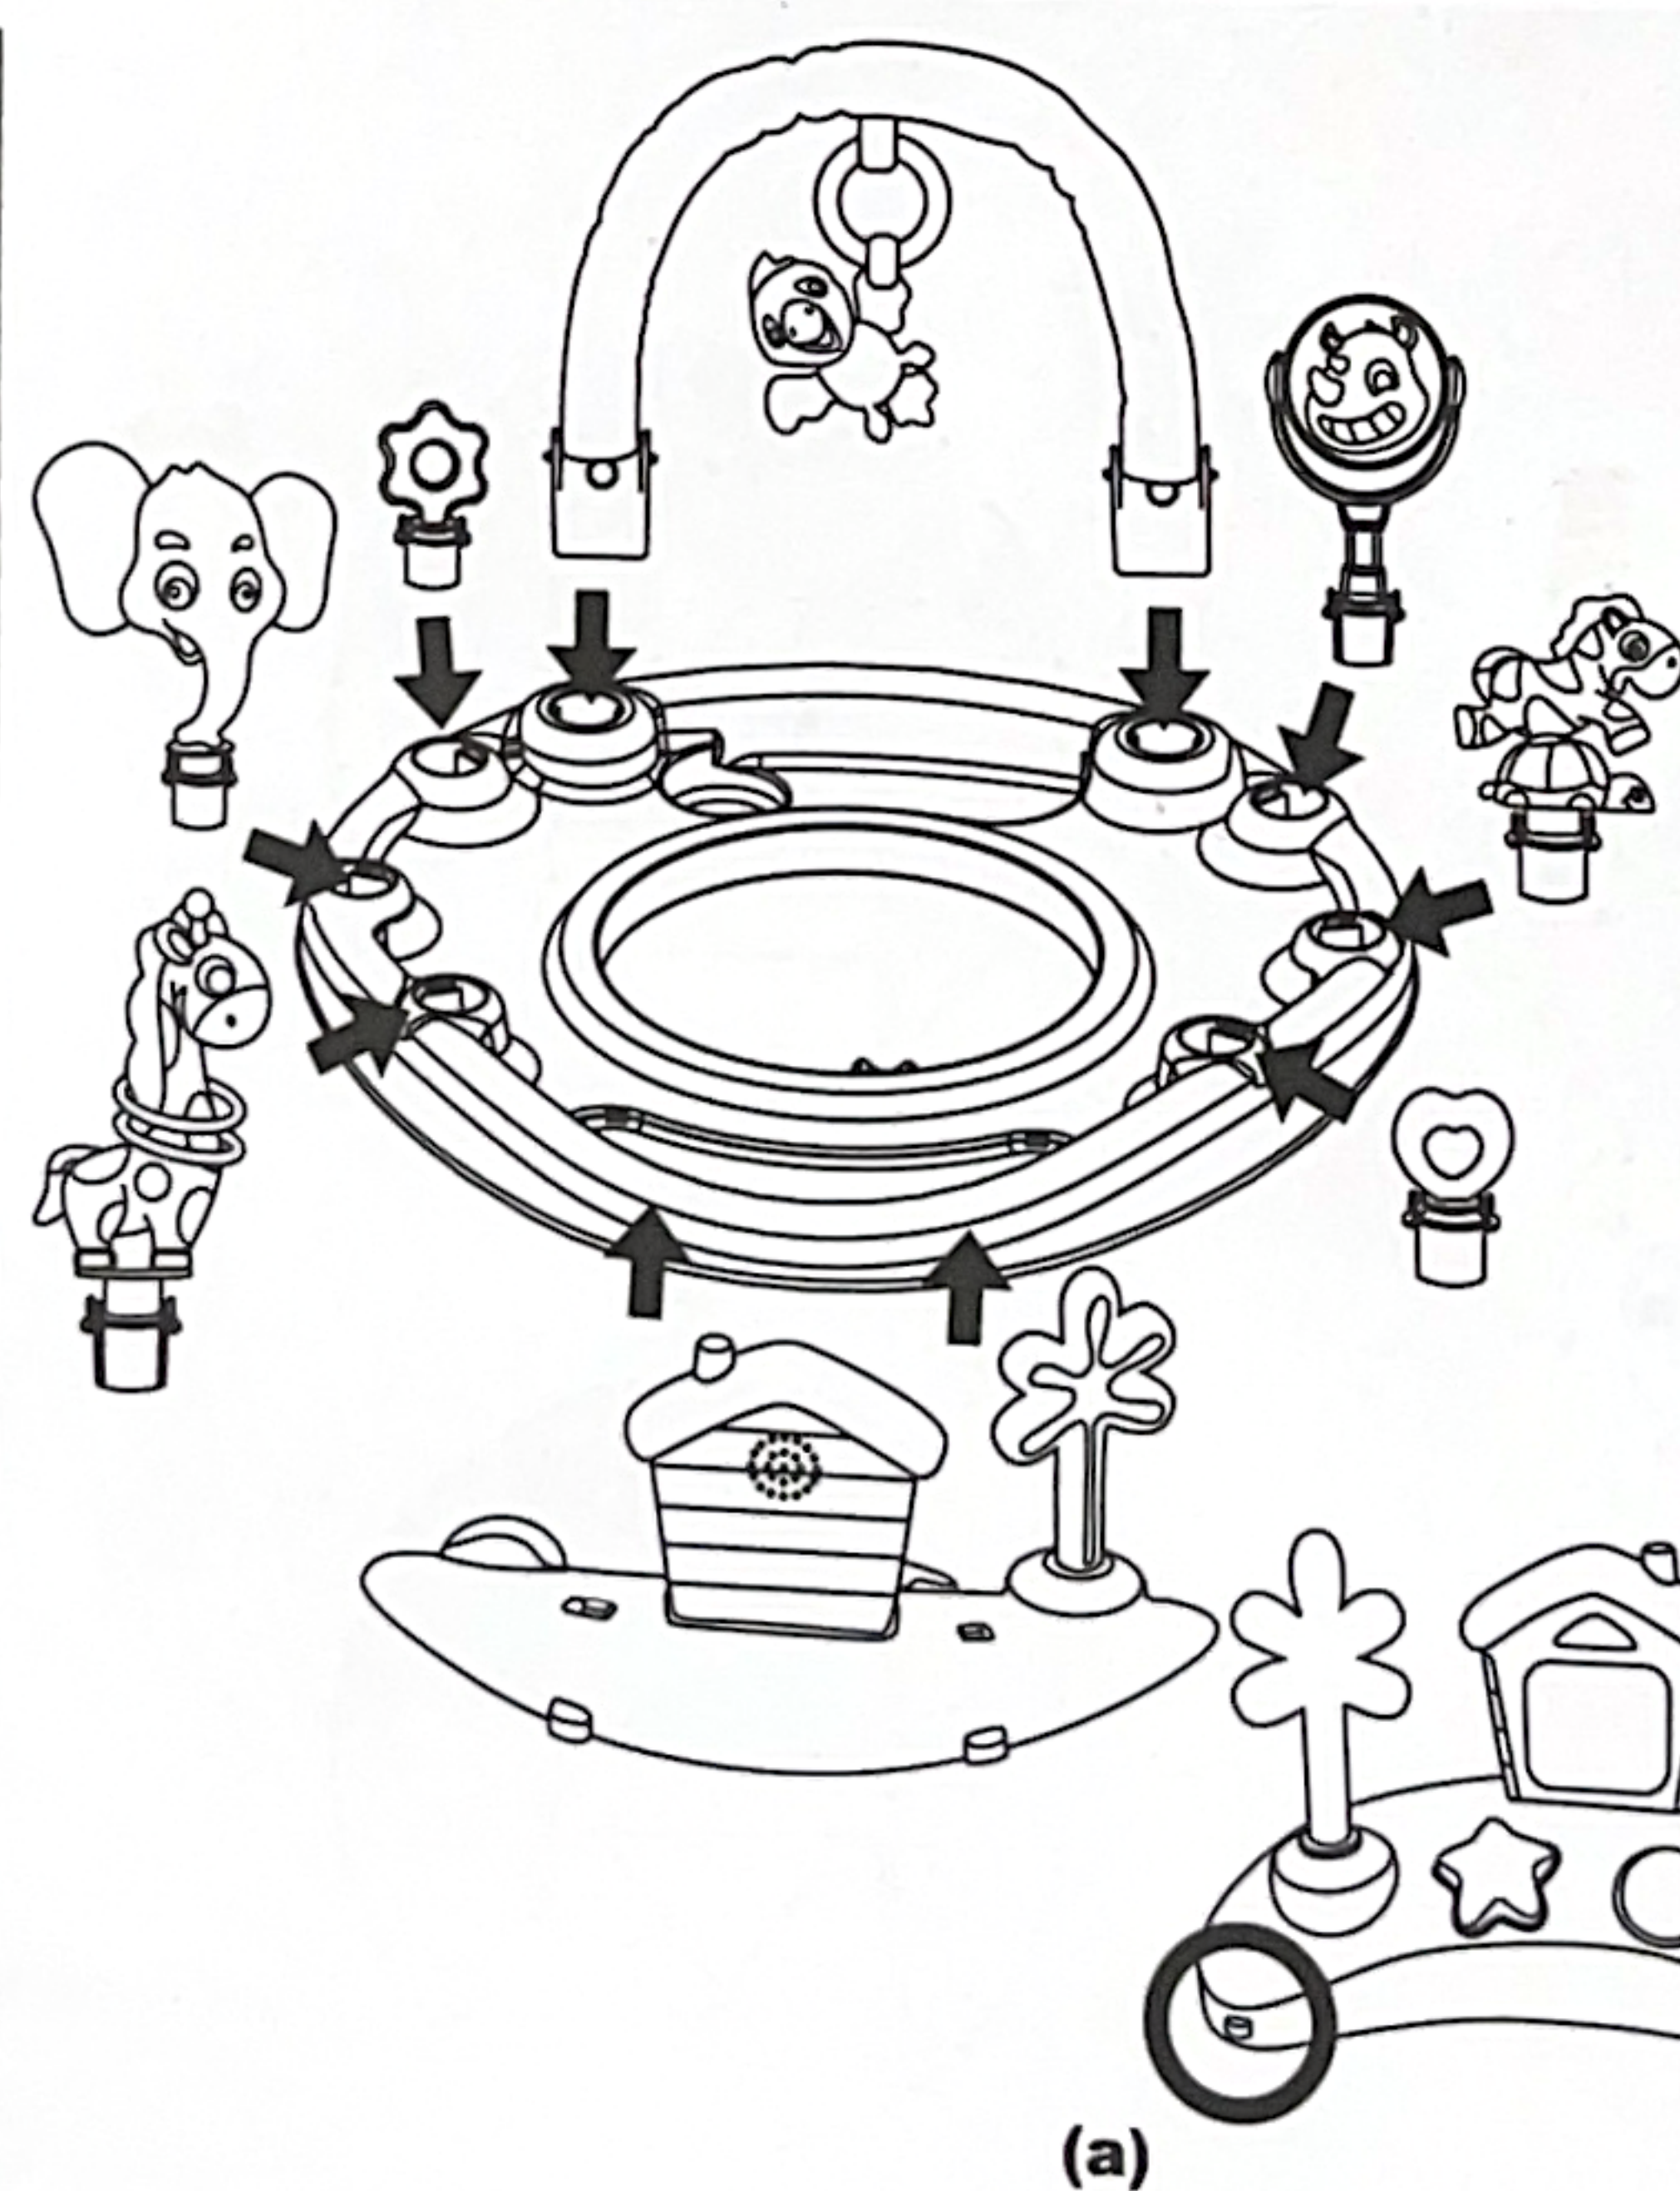





1



2


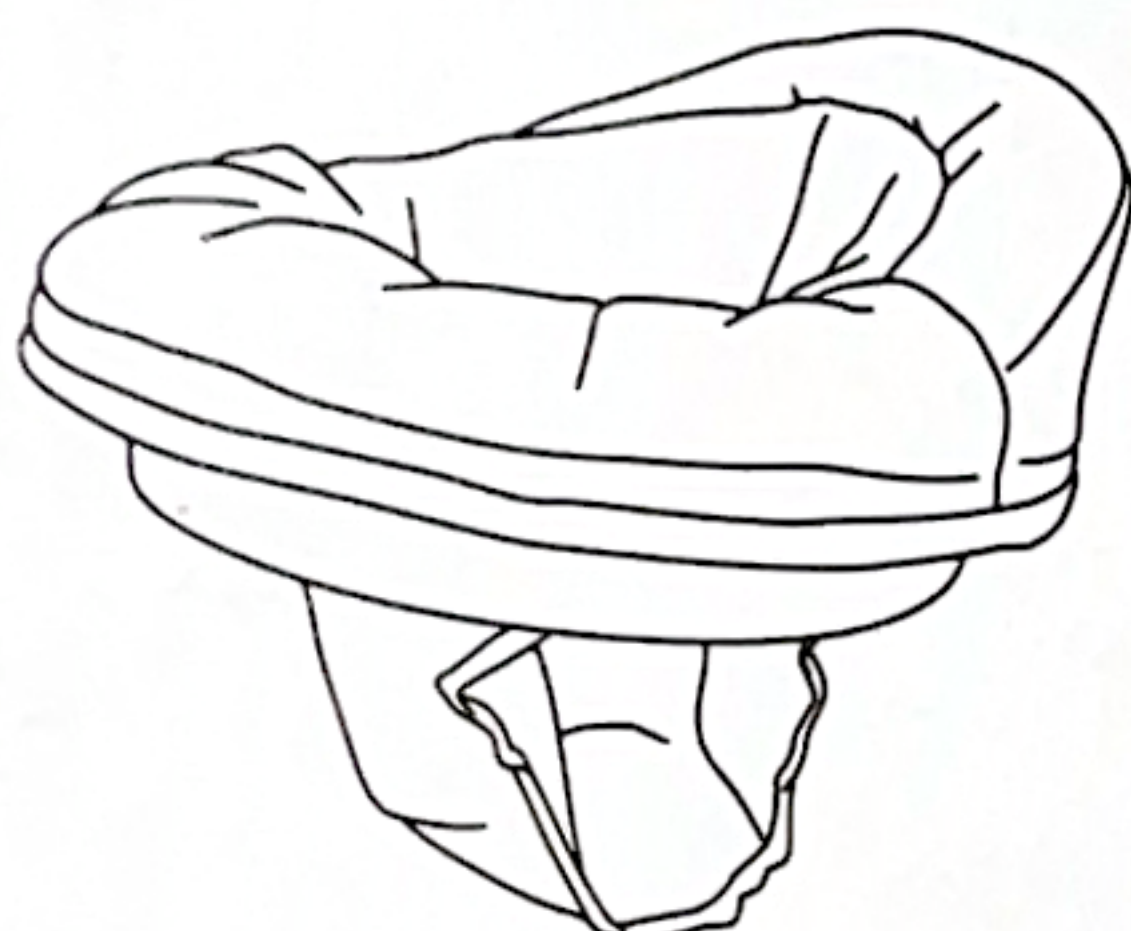
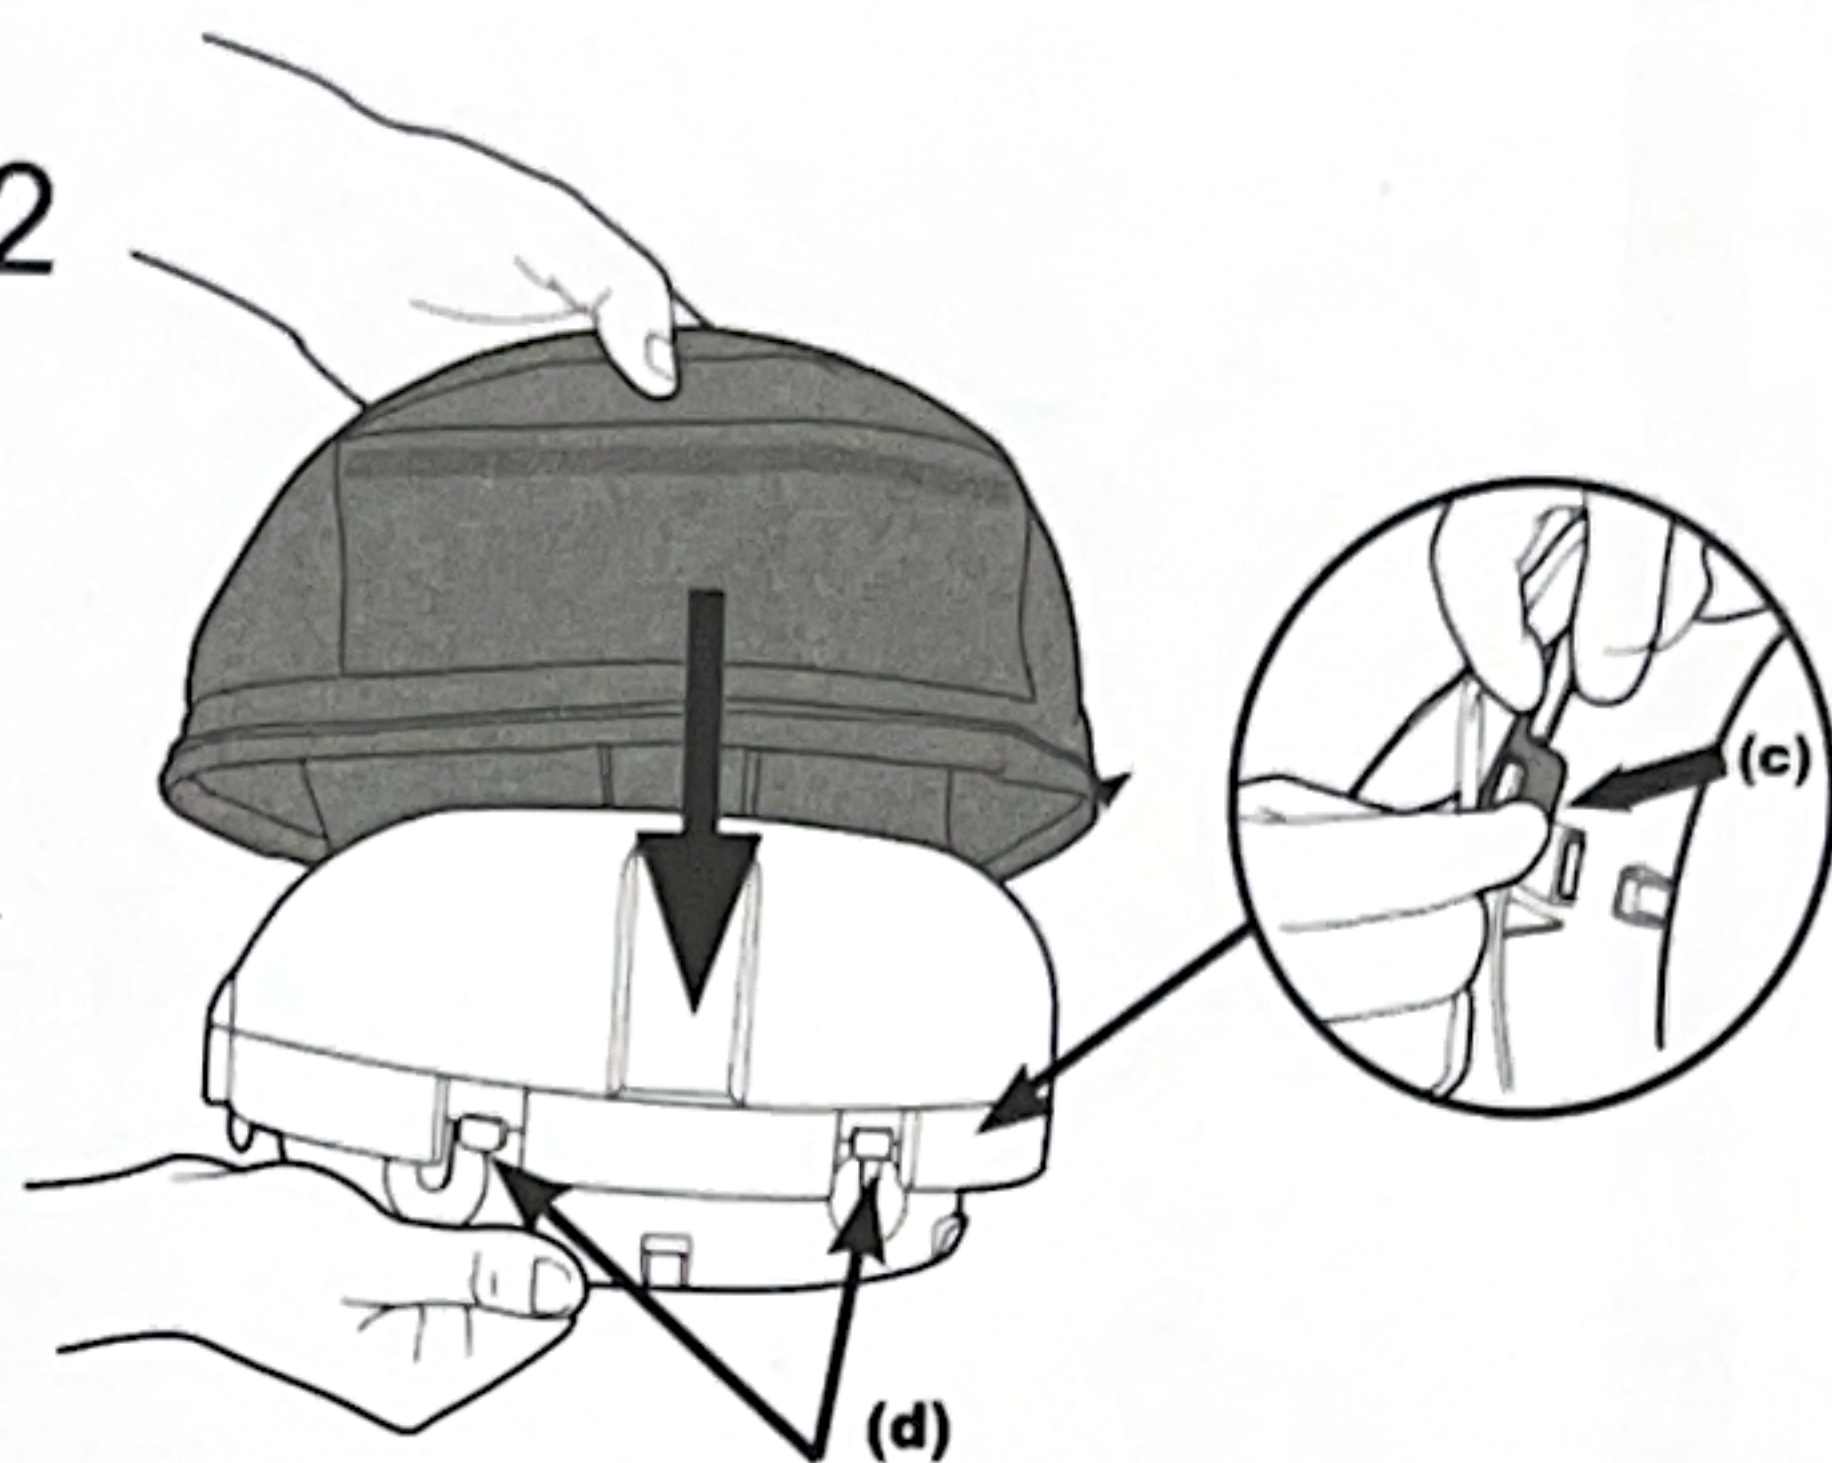


(d)

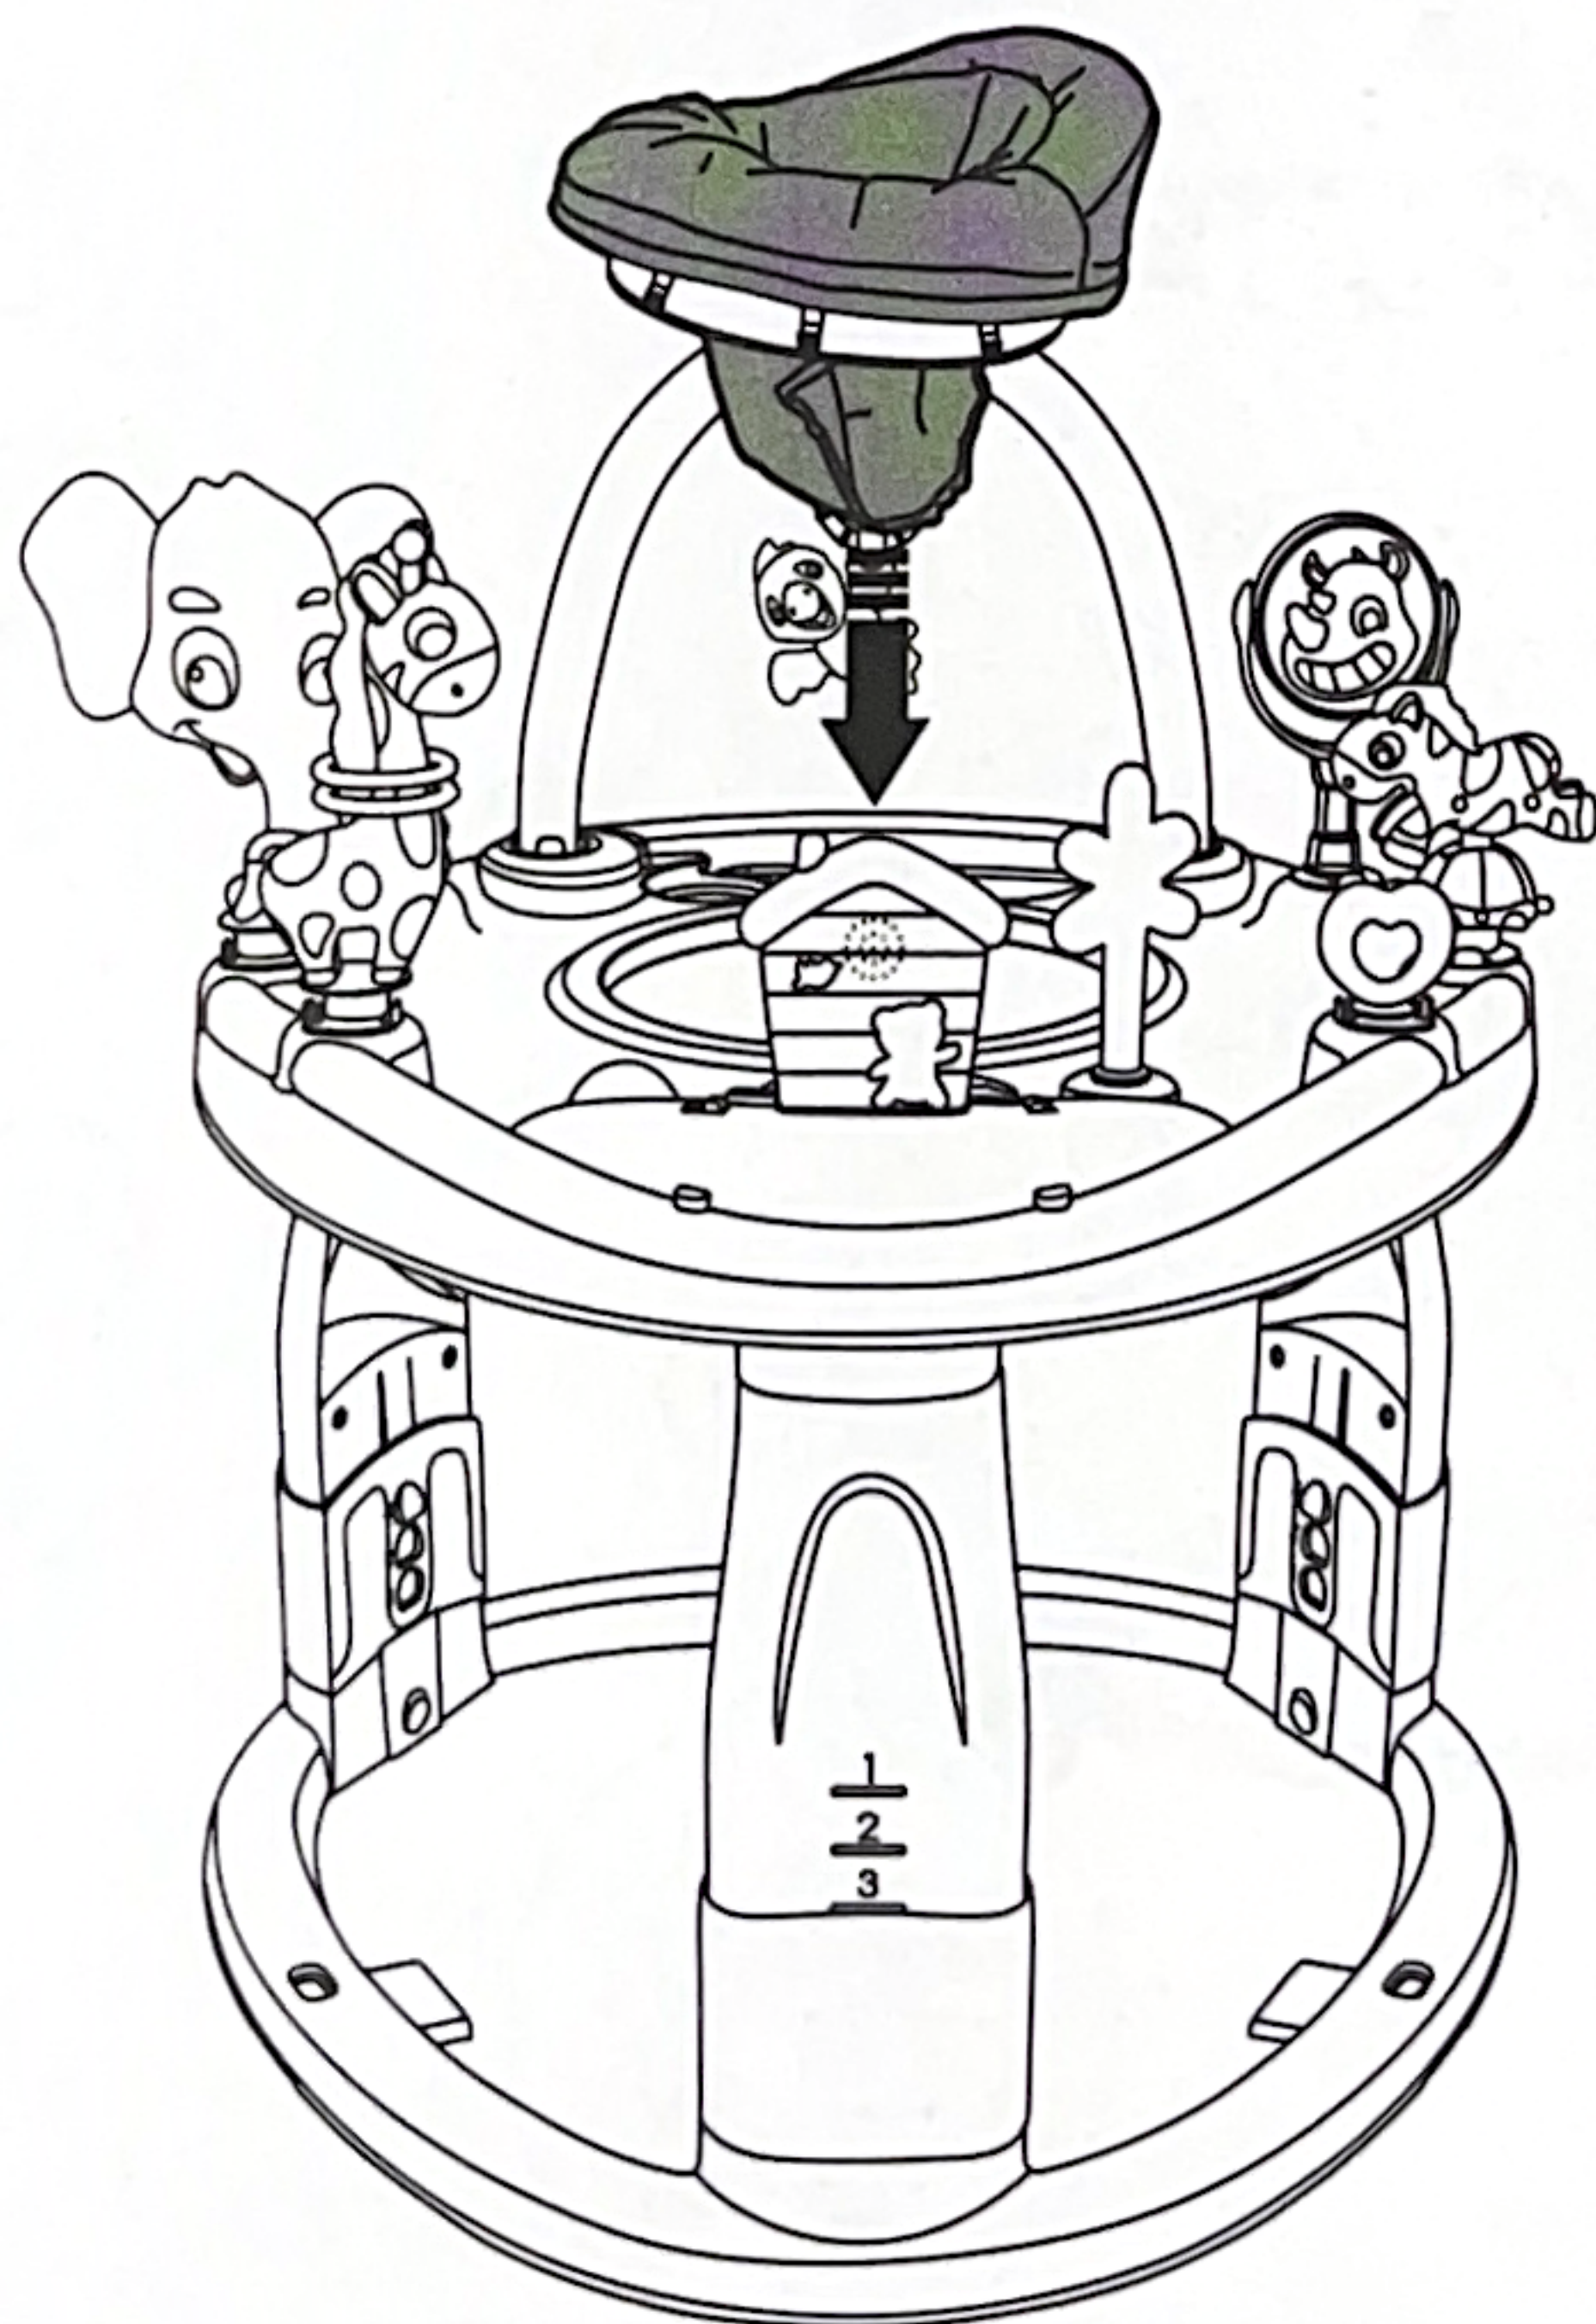



STEP 7

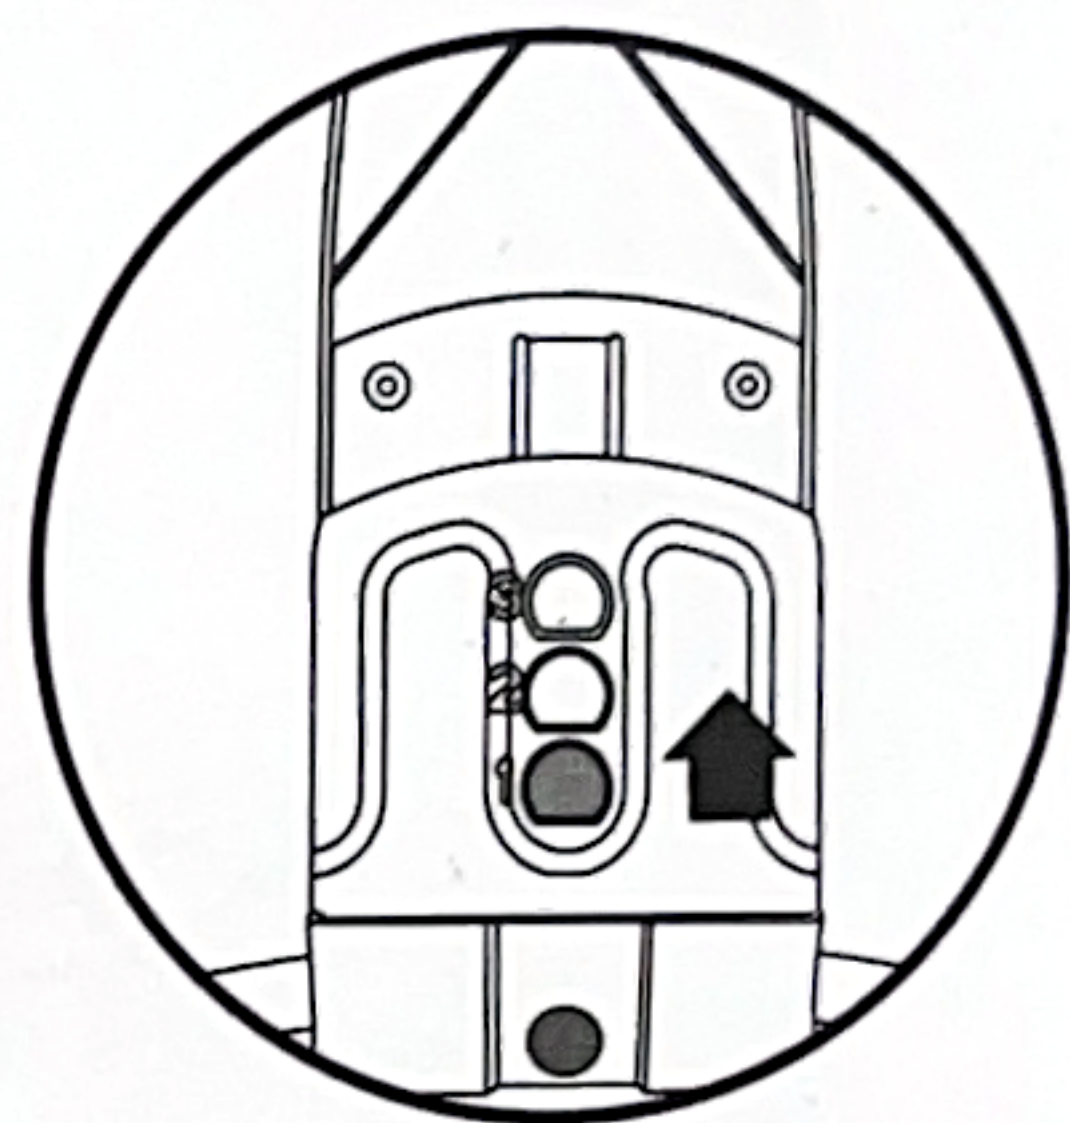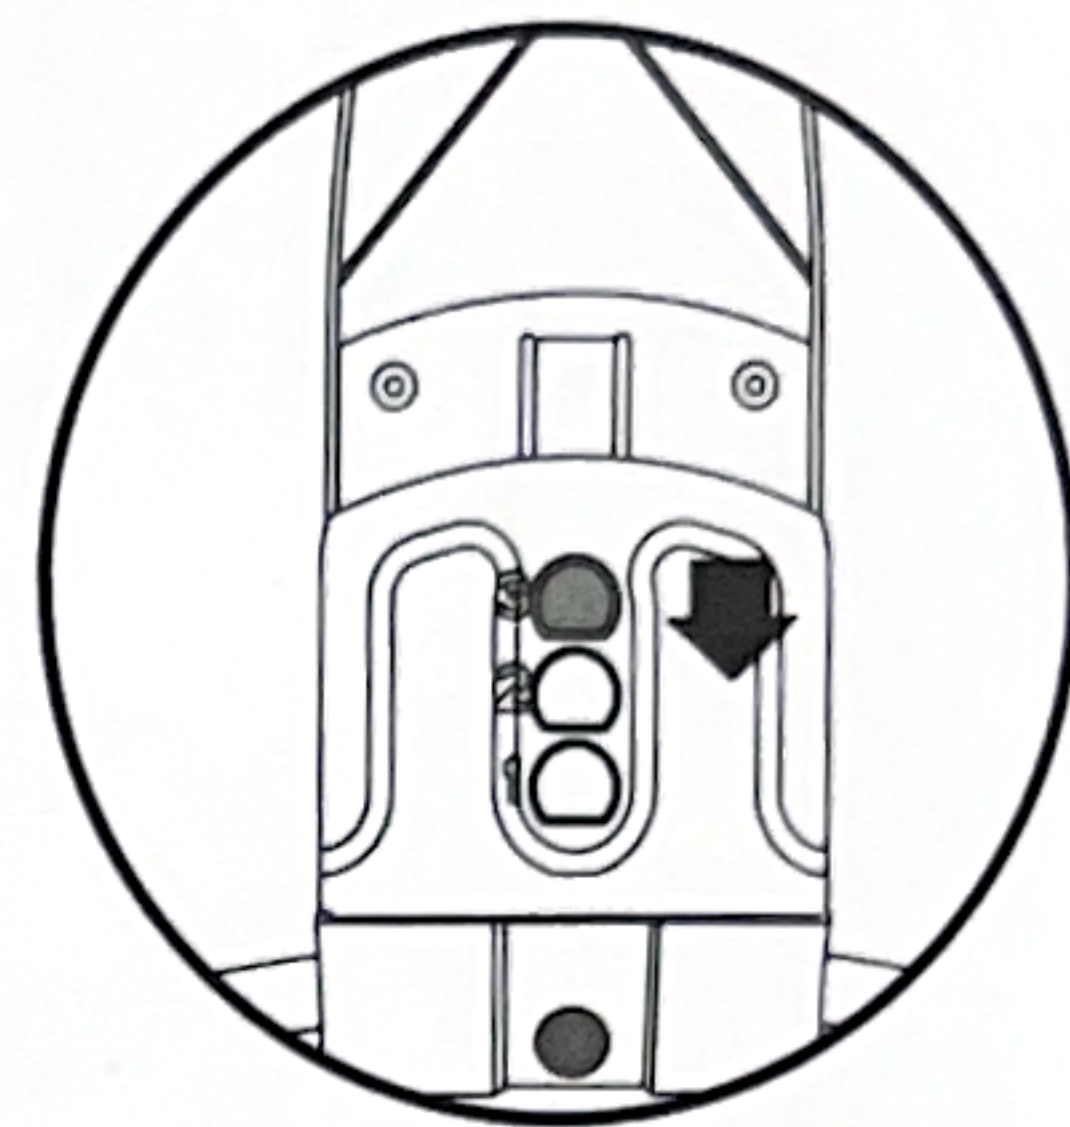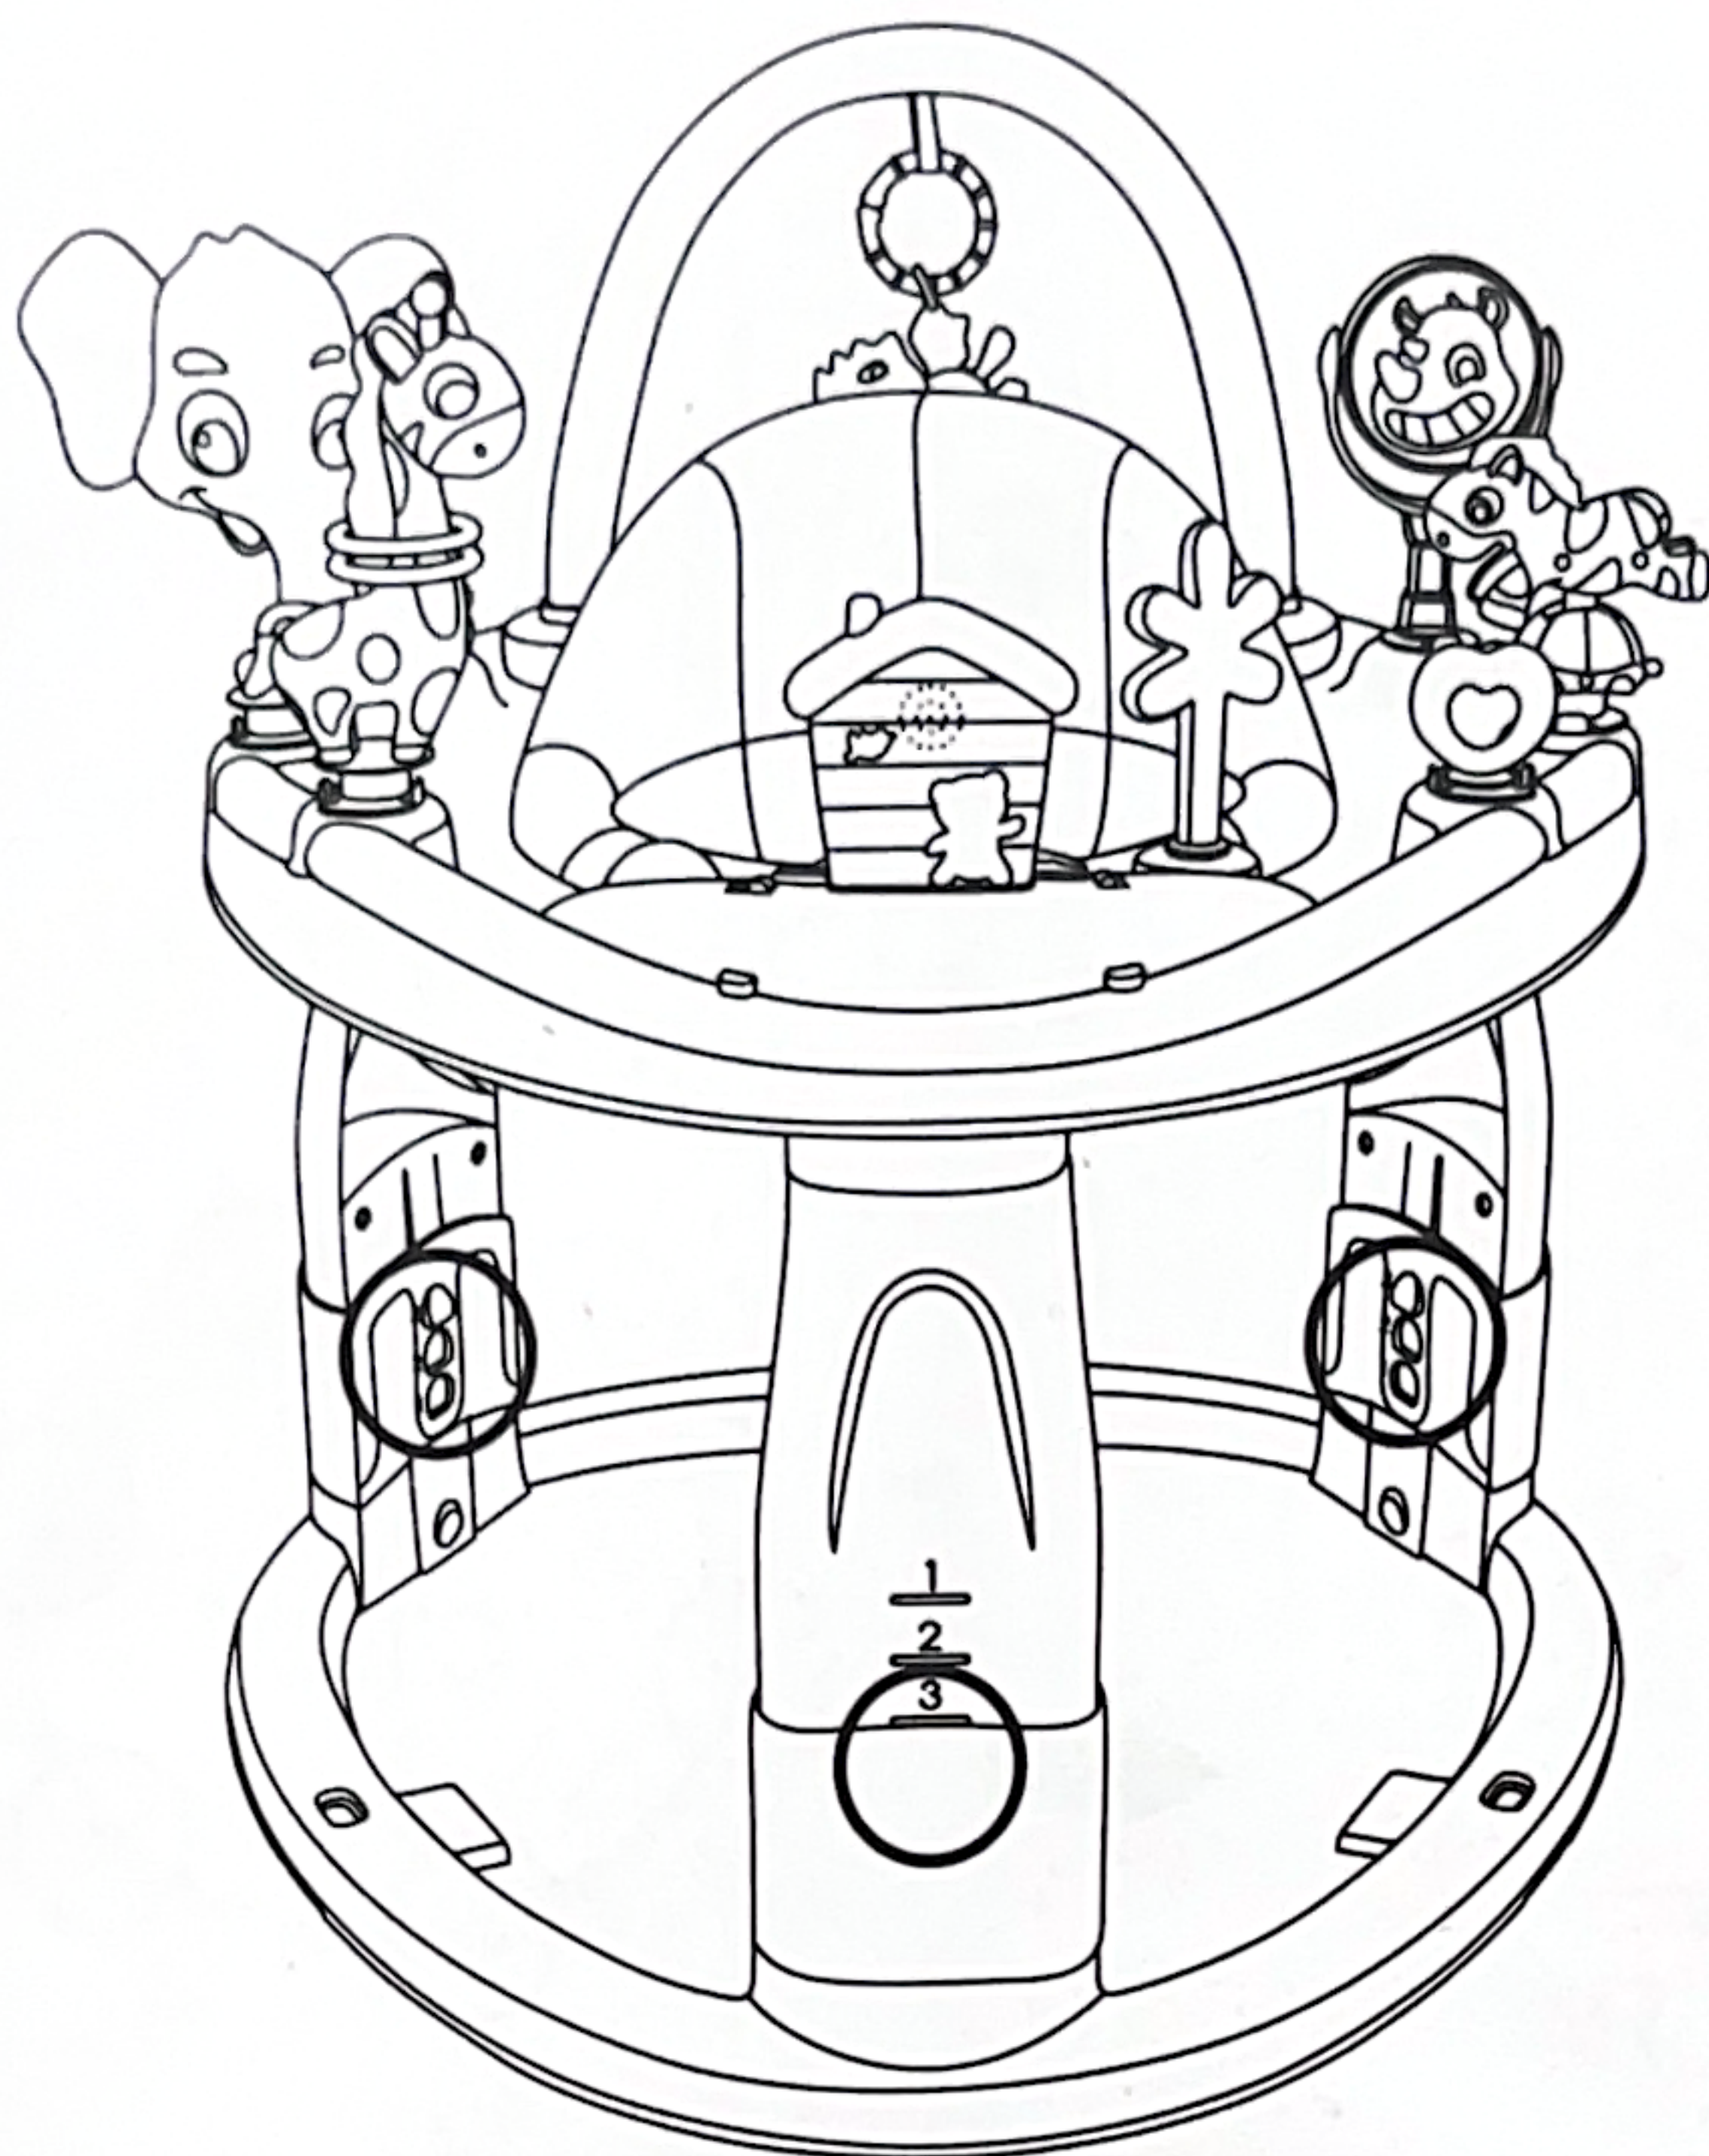

STEP 8

