


babyco

Urban Escape T436

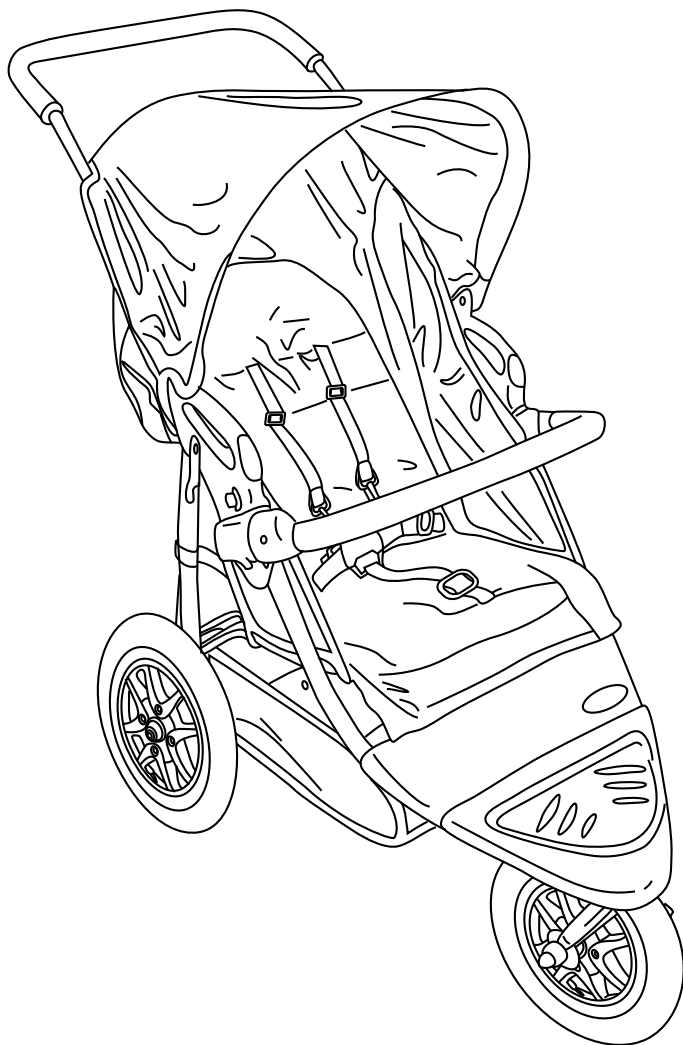

User Guide

**Important. Keep for
future reference.**

Warnings

READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THE STROLLER.

- Check that all safety locks are fully engaged before using stroller.
- Ensure your child is fully secured with a correctly adjusted safety harness.
- Do not allow your child to climb unassisted into the stroller.
- Apply the brakes when parking or placing your child into the stroller.
- Ensure children are clear of moving parts before making adjustments, otherwise they may be injured.
- Do not overload this stroller with additional children, goods, bags or accessories, as this could cause the stroller to tip over.
- Do not hang bags and other items from the handle.
- Do not place more than 3kg in the basket.
- Always apply the brakes when the stroller is stationary.
- Be careful when going up or down curbs.
- Remove your child and fold the stroller when going up or down stairs or escalators.
- Do not use your stroller in a manner for which it was not designed.
- Don't let children play with or hang onto the stroller.
- If someone unfamiliar with the stroller is going to use it, show them how it operates first.
- Never leave your child unattended, even for the shortest time.
- The maximum weight of the child using this product is 17kgs.
- **THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE**

Introduction

The three-wheeler is designed to withstand use on uneven paths, pavements and even in the countryside. The jogger is only suitable for children from birth when used in the fully reclined position and on smooth surfaces.

Parts check list

Three-wheeler chassis with hood and shopping basket.



Clear Rain cover



Detachable bumper bar



2 rear wheels
1 front wheel




Front wheel footplate
4 screws



Tyre Pump




Foot Muff

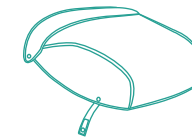


Preparation for use


Unfolding the chassis

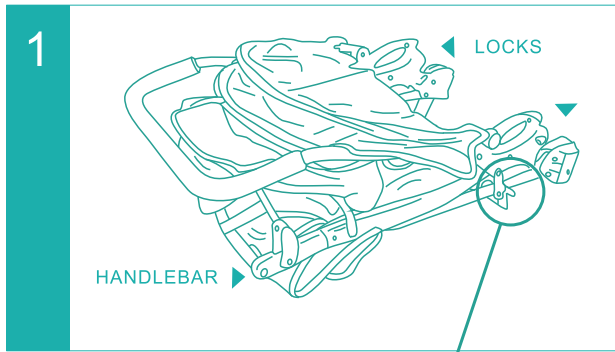

Lay the chassis down flat with the two locks facing up. Remove all packaging materials from the chassis.

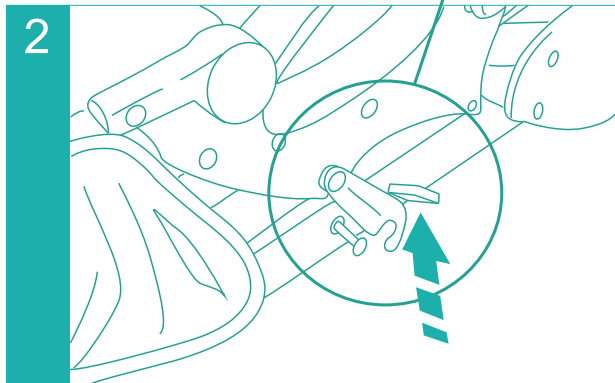


Find the folding latch, there is only one, Unclip the latch.

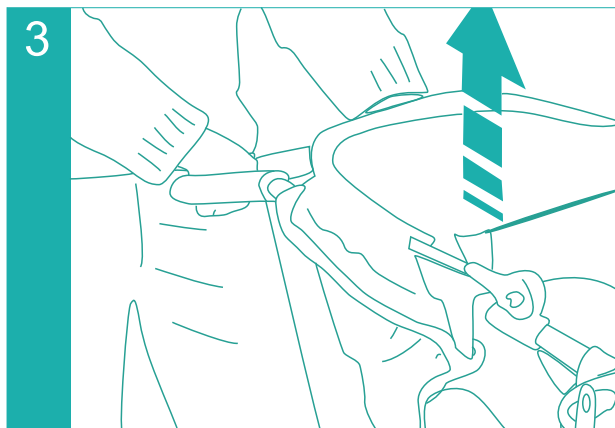

Unfold the three-wheeler by lifting the handle upwards. As the three-wheeler opens, keep lifting the handlebar, until you hear a click and the locks on both sides are fully engaged.

Preparation for use


Fitting the front wheel

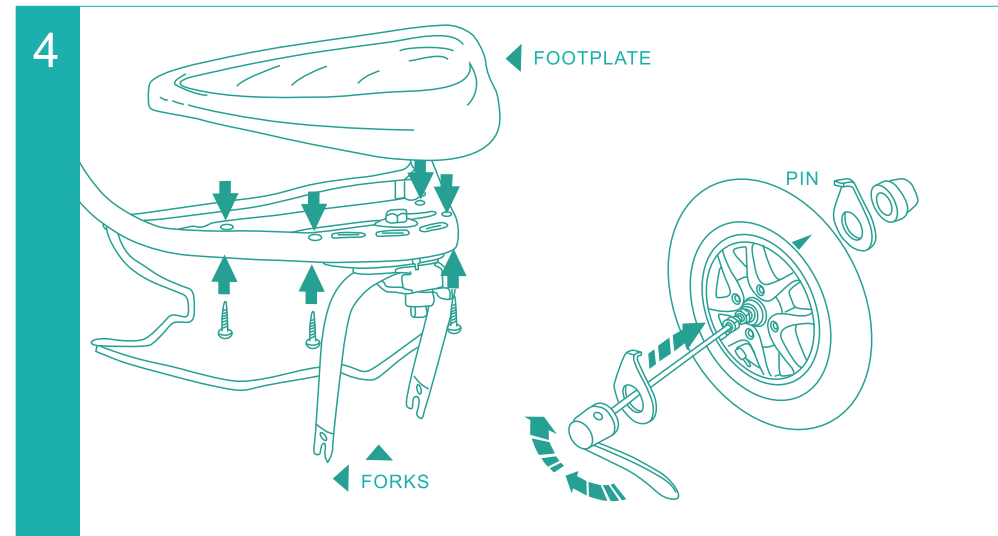

Remove the plastic packing from the front forks and dispose of safely. Remove the outer nuts and washers from the wheel's axle. Fix the front wheel into the slots on the front forks. Slide the washers onto the axle, fitting the pins into the holes on the forks. Screw the nuts onto each end of the wheel's axle with the flat side of the nut against the washers. Tighten both nuts using the spanner. Before the nuts are tightened, please ensure that the front wheel is fitted parallel to the two rear wheels. Incorrect alignment could cause the three-wheeler to veer to one side. Make sure both nuts are tight. Pull the wheel to ensure it is fitted secure. Fit the footplate into place by pushing the 4 plastic spikes into the holes in the chassis. Screw the 4 screws firmly into place.


Preparation for use

Fitting the rear wheels

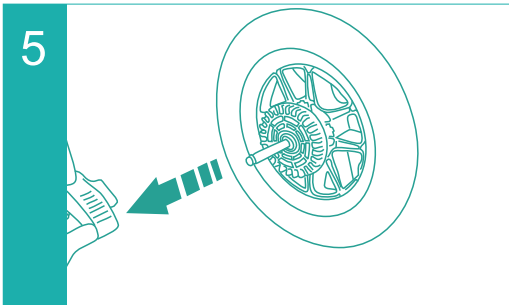


Push each wheel's axle into the chassis. Check the wheels are firmly in place by pulling them.

pumping up the tyres

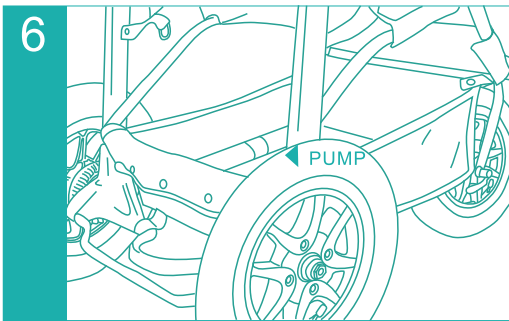

The tyre pump is secured in the shopping basket. The three-wheel's tyres are semi-inflated. You should pump them until they are inflated to 28psi. Do not over inflate them.

attaching the bumper bar

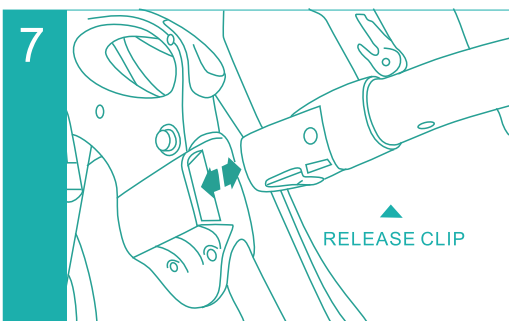


Insert the ends of the bumper bar into the slots on the frame, with the release clips underneath. Check the bar is securely in place by pulling it. To remove the bar push in the release clips on both sides and pull the bar out.

Warning

When a child is in the Stroller, keep the Bumper bar attached at all times.

In use


Harness

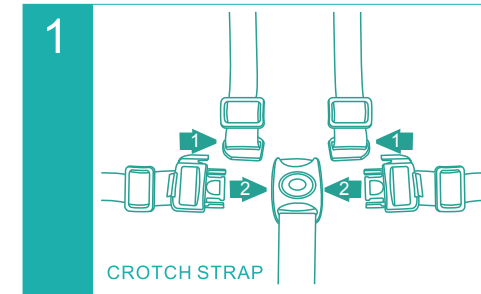

TO ATTACH THE HARNESS
Insert both fasteners securely into the clasp. Adjust each strap length with buckles.

Warning

Use this harness at all times.

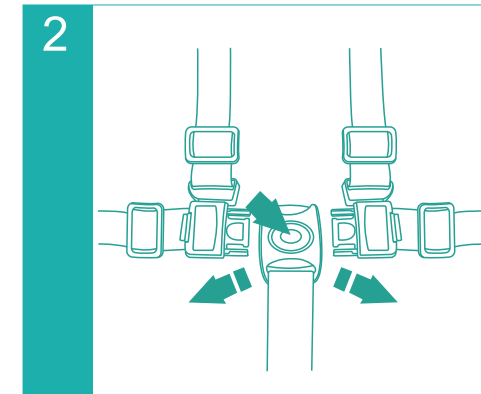


TO UNDO THE HARNESS
Press the fastener prongs and pull apart.

Your child should always be harnessed in and should never be left unattended even for short periods.

Warning

When not in use disconnect shoulder straps from the waist straps and buckle.

operating the brake

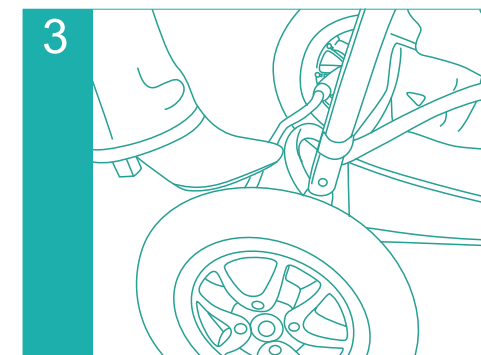


Push down firmly on the brake bar to engage the brake. Check the brake is on by pushing the three-wheeler. Pull the brake bar up to the release it.

Warning

Always apply brakes when parking the Stroller. The stroller may roll away even if left unattended for a few moments.


Adjusting the front wheel swivel

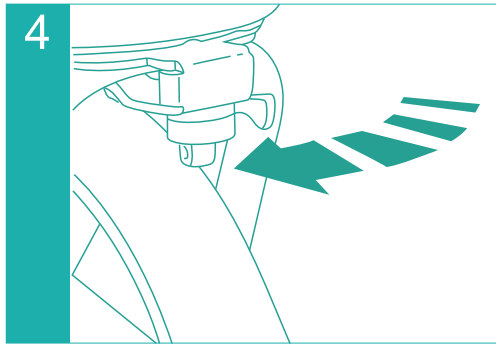

The front wheel can be unlocked to allow it to rotate, giving greater mobility. It is recommended that this is only done on smooth surfaces, and that the wheel is locked when on uneven surfaces to prevent vibration.

Push the lever at the top of the front wheel fork across, to the left to release the wheel. To lock the wheel, push the lever in the opposite direction and rotate the wheel until it locks into position.

reclining the seat

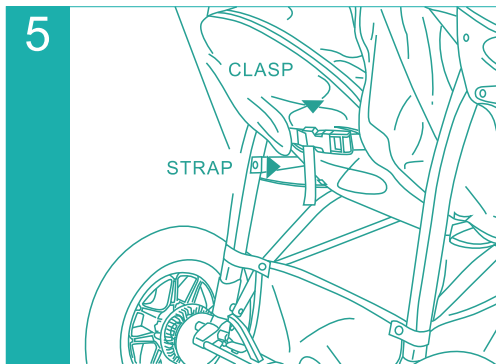


The seat back can be lowered by loosening the strap until the desired seat height has been reached or by pressing the buttons on the clasp. To raise the seat, hold the fastened clasp and pull the strap.

Caution

Ensure that your child's limbs are inside the seating area before adjusting the backrest.


The canopy, window and pocket

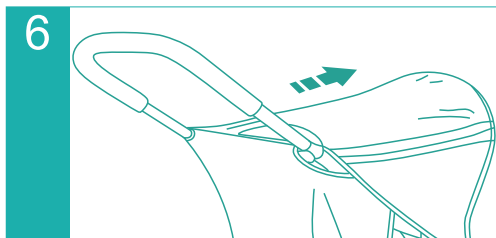

The hood can be pulled forward during use to help protect your child from wind or bright sunlight.

This allows you to view your child. The pocket should not carry more than 0.5kg of items as this may make the stroller unstable.


The tether strap

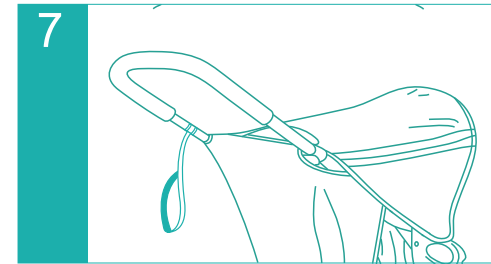**Warning**

Use the tether strap to prevent the Stroller from rolling away.

Apply brakes whenever the stroller is stationary


Fitting the rain cover and foot cover

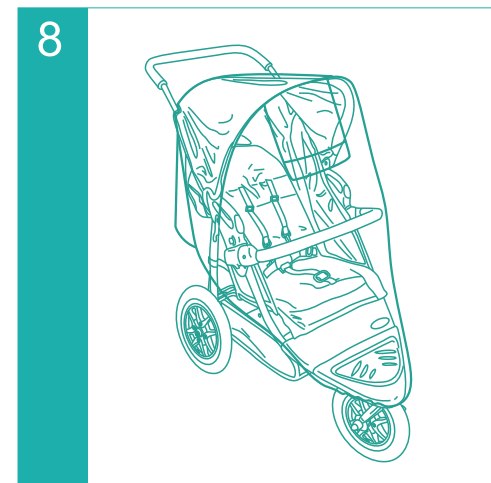

Fit the rain cover on top of the hood. The foot end of the rain cover is elasticated to fit around the footplate of the three-wheeler. There is an adjustable flap to provide extra ventilation

Position foot cover and attach with domes and clips.

fitting the shopping basket

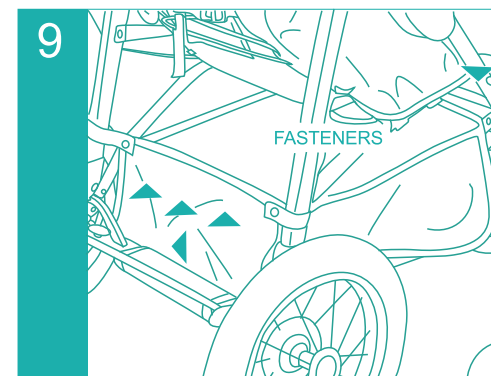


The shopping basket has eight fasteners on the back (five of which are shown) and two more on the front. The shopping basket should not carry more than 3kg of items evenly distributed.

After use

Folding the three-wheeler

1

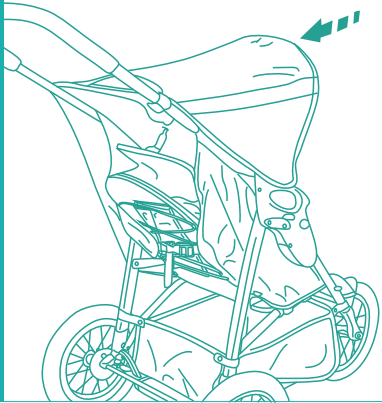


Engage the brake and remove the rain cover fitted. Push the hood back. Make sure that the seat backs are in the reclined position. Lock the front wheel.

Warning

Make sure children are clear of any moving parts, if you adjust, open or close the stroller

2

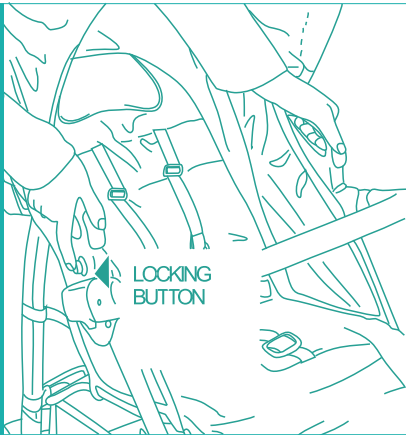


To fold the three-wheeler press the locking button firmly and at the same time press both buttons on the front of the two side locks. Lift on the two handles, the three-wheeler will fold.

After use


Folding the three-wheeler

3

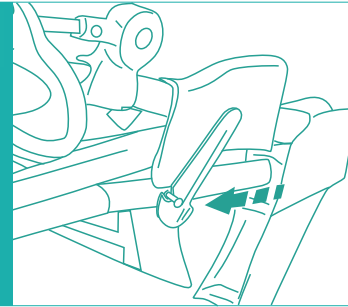

Attach the folding latch before carrying the three-wheeler.

4

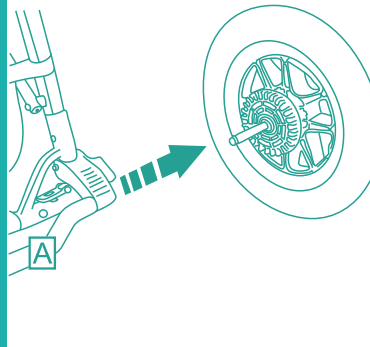

The front and rear wheels have been designed to be easily removable for more compact storage of the three-wheeler. To remove the rear wheels lift tabs (A) on the pushchair chassis, as you pull the wheels at the same time.

Distributed by:

The Baby Factory(NZ) Ltd.

Address: 58 Stonedon Drive
East Tamaki, Auckland, New Zealand

Ph. (09) 274 4986

www.babyfactory.co.nz

Babyco Australia

www.babyco.com.au

Care your product

- This three-wheeler requires regular maintenance by you.
- Regularly inspect the locking devices, brakes, harness assembly, catches, joints and fixings to ensure they are secure and in full working order.
- Brakes, wheels and tyres are subject to wear and should be replaced if necessary. This can be arranged through your local store. The tyres have inner tubes and can be repaired in the same way as conventional bicycle tyres.
- Should parts of your three-wheeler become stiff or difficult to operate. Ensure that dirt is not the cause, Then try a light application of a silicon based spray lubricant, ensuring that the lubricant penetrates between the components, but do not overspray as this may encourage the accumulation of dirt. Regular lubrication of moving parts will extend the life of your three-wheeler and make opening and folding easier.
- Plastic and metal parts may be sponged clean with warm water and a mild detergent.
- The seat may be cleaned by sponging lightly using warm water and a mild detergent.
- Allow drying thoroughly before storing.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- After exposure to damp conditions, leave fully opened and in a warm environment. Dry off with a soft cloth. Storing a damp three-wheeler will encourage mildew to form.
- Store your three-wheeler in a dry safe place.
- Your three-wheeler should be serviced and reconditioned before using it for a second baby, or within 18 months, whichever is the sooner, This can be arranged by your local store.