

Maintenance

This product requires regular maintenance to keep it in good working order. Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage. Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.

Cleaning

Seat pad: Hand wash or spot clean. Use mild soap or upholstery shampoo. Wash separately. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.


Frame: Wipe frame with soft clean cloth and mild soap. NEVER use bleach. NEVER use abrasive, ammonia based, bleach based or spirit type cleaners. Store walker in a dry location away from any heat sources, and not in the sun. Ensure the product is fully dry before use or storage.



The crossed bin symbol on the appliance indicates that the product at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliances or by returning it to your dealer when you buy another similar appliance. The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the disused appliance is collected correctly as separate waste it can be recycled, treated and disposed of ecologically. This avoids a negative impact on both the environment and health and contributes towards the recycling of the product's materials. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.

Racer 500

Baby Walker

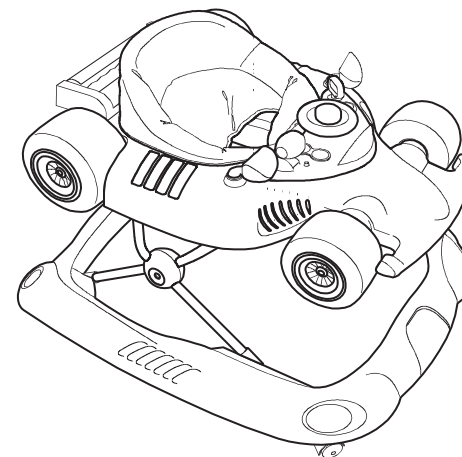



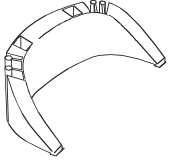

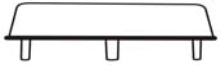

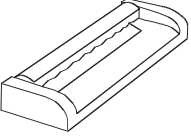
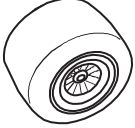
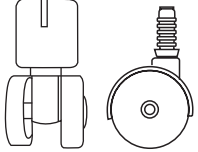
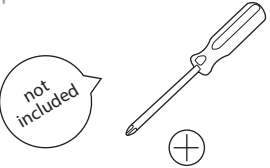
IMPORTANT:
RETAIN FOR FUTURE REFERENCE
READ CAREFULLY

Specification of product

Age	6 Months+
Load capacity	Under 12 kgs
No. of passenger	1 person
Weight	Approx. 5.3 kgs
Assembled Size	Length 73cm x Width 62cm x Height 50.5-53.5cm
Battery	2 x AA batteries (Not included)



Parts

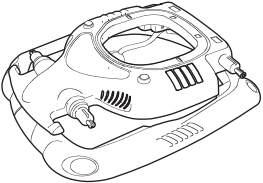A x1 	B x1 
C x1 	D x1 
E x6 	F x2 
G x1 	H x4 
I x2 	Tools Required 

⚠Warning! Safety

IMPORTANT

- Adult assembly required.
- Read all instructions before assembly and use of the product.
- This baby walking frame is intended to be used by children who can sit unaided, approximately from 6 months. It is not intended for children weighing more than 12kg and/or more than 78cm in height.
- Take care when unpacking and during assembly.
- Dispose of all packaging materials carefully after assembly.
- Regularly check that all fittings remain tight. Tighten if required.
- Inspect the product before all assembly and periodically during use. Never use this product if there is any loose or missing fasteners, joints or broken parts.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.

ATTENTION! BATTERY SAFETY: KEEP FOR FUTURE REFERENCE. BATTERIES NOT INCLUDED.

CAUTION: To prevent possible battery leakage, be sure to follow the guidelines outlined below.

- Alkaline batteries are recommended for longer battery life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted correctly by matching the + and - polarity markings.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of exhausted batteries properly.
- Remove batteries when product is stored for long periods of time.
 - Use a small Phillips-head screwdriver to open the battery compartment door on toy.
 - Insert the battery as indicated inside the battery door and re-attach the battery compartment door with screw.

Warning! Safety

⚠ CAUTION:

Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

⚠ WARNING:

The walker is not intended for babies that can already walk unassisted.

⚠ WARNING:

Do not use the walker if it is damaged or broken.

⚠ WARNING:

Do not use until the baby can sit upright by itself.

⚠ WARNING:

Clean friction components regularly to maintain stopping performance.

⚠ WARNING:

Never leave the child unattended. Always keep child in view while in walker.

⚠ WARNING:

Use only on flat surfaces free of objects that could cause the walker to tip over.

⚠ WARNING:

To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fire places etc.

⚠ WARNING – STAIR HAZARD:

Avoid serious injury or death. Block stairs/steps securely before using walker.

Complies with EN 1273:2005 and ASTM F9077-12


Assembly

1. Unpack all contents and check that all parts are present before starting assembly. Please refer to parts list.


Place walker (A) on a solid flat surface with bottom of base facing upwards. Insert the pins of the universal wheels (I) into their housing located at the front of the walker. Press until they click into place.

Insert the directional wheels (I) into their housing located at the rear of the walker. Ensure to align shape of mount with housing before inserting wheels. Press until they click into place. Pull on wheels to ensure they are properly inserted.

WARNING! Ensure you have installed wheels correctly before continuing.

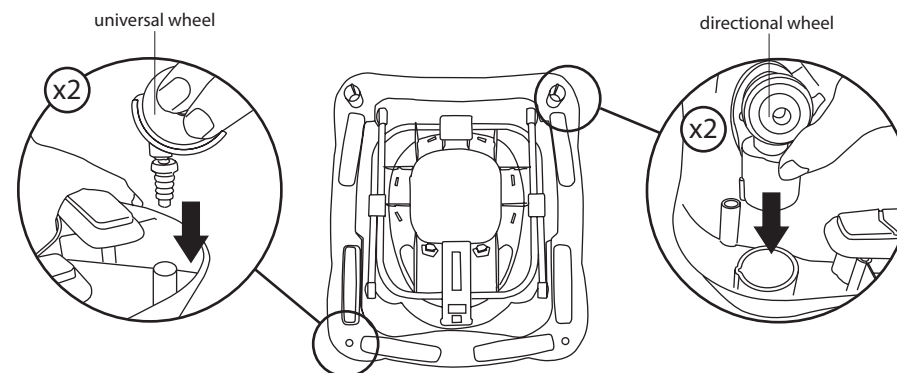


2. Turn walker over with top of walker facing up. Assemble the seat unit back panel (C) into the allocated slots. Push firmly until the panel clicks into place.

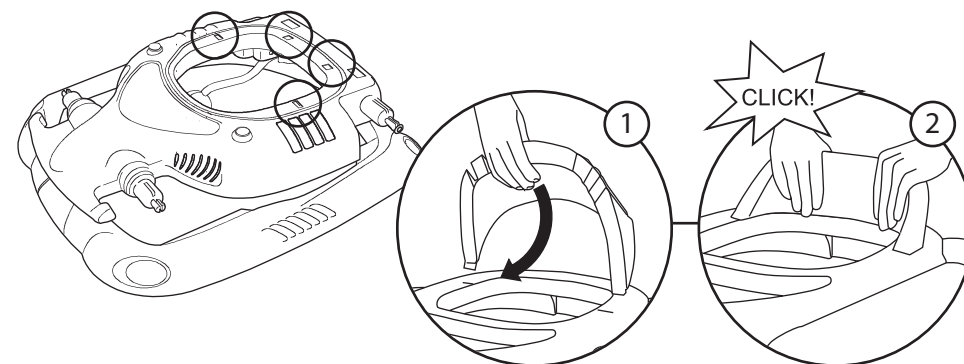

Assembly


3. Push the crotch portion of the seat unit (B) inside out to form the seat.
IMPORTANT. The black and white checker board fabric should be on the inside of the seat unit.

Insert the 8 tabs located on the seat unit into the slots dotted around the seat ring.

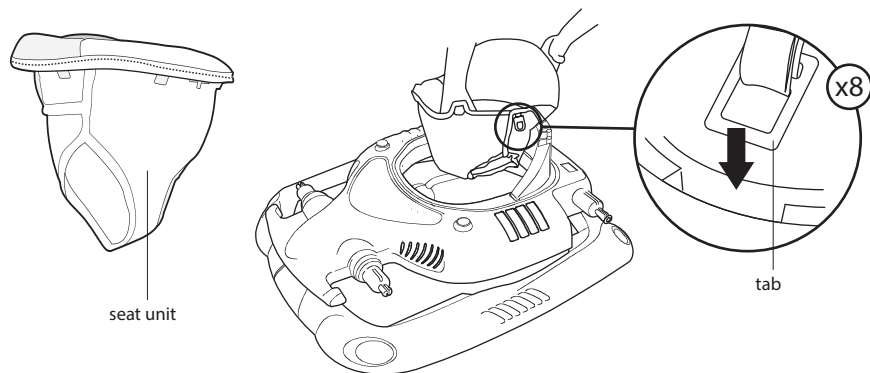

4. Turn walker upside down and pull tabs firmly from underneath walker until tabs are completely through slots. Ensure all tabs are secure before continuing.
IMPORTANT. Push down firmly on seating area of seat unit to ensure it is securely assembled.

WARNING! Ensure you have installed seat unit correctly before continuing.

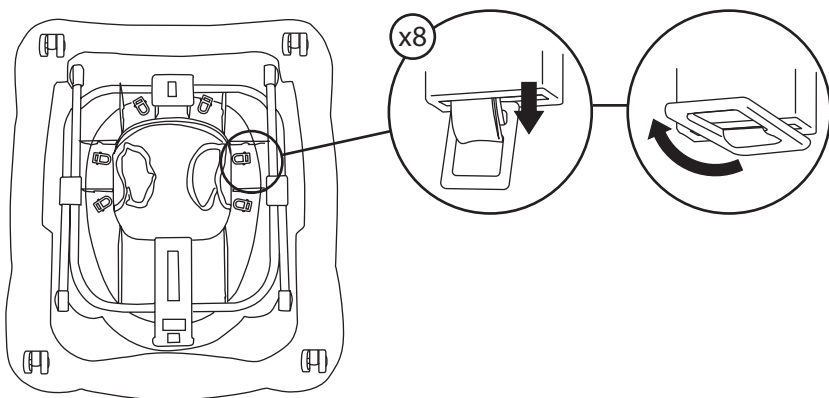

Toy Tray

Push switch to ON located on the bottom of the toy tray to active sound and lights.

Press the various buttons for sounds and melodies. Push switch to OFF to turn off sound and lights.




Height Adjustment

The baby walker has 3 height positions. To adjust height, remove baby from walker. Turn the safety button lengthwise and press the safety button up until the mechanism is released. Adjust to desired height.

WARNING! When the position has been selected, check the safety button is turned 90° to prevent accidental release.

WARNING! Do not adjust height when baby is in the walker.


WARNING! Ensure mechanism is locked before placing baby in the walker.

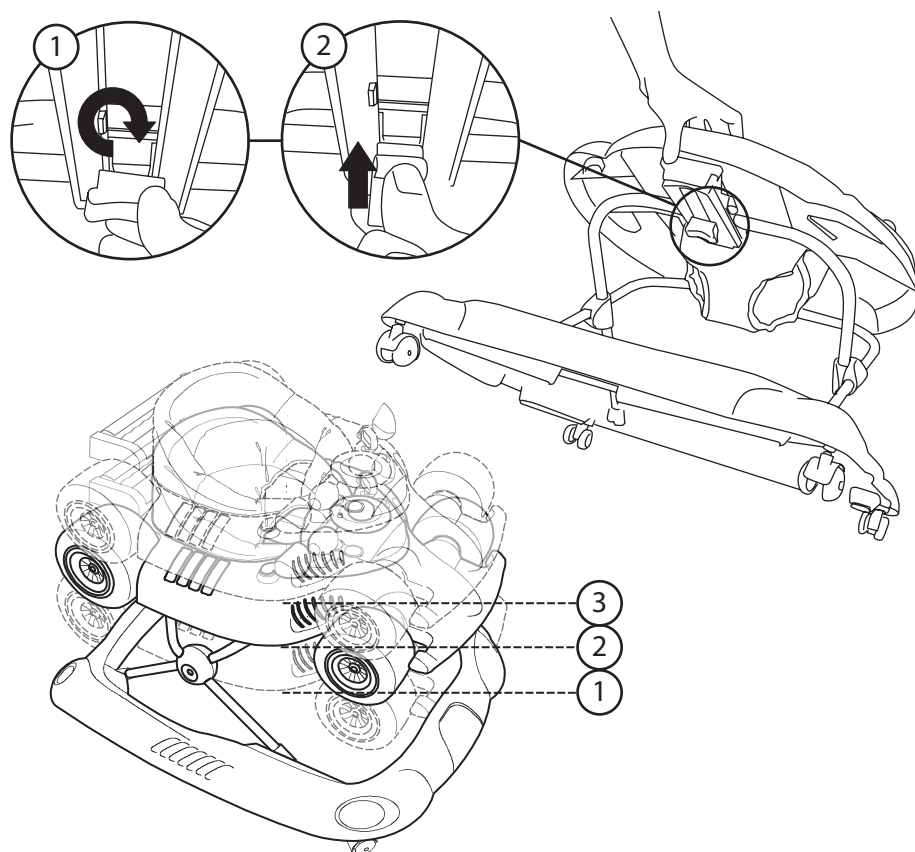


To fold walker, turn the safety button lengthwise and press the safety button up until the mechanism is released. Push walker down to a folded position.

Assembly

5. Turn walker over and attach anti-slip pads (E) to the attachment points on the baby walker base. Push down firmly until secure. Never attempt to force the anti-slip pads onto the attachment points. Pulling anti-slip pads out from holes once fitted could cause damage.

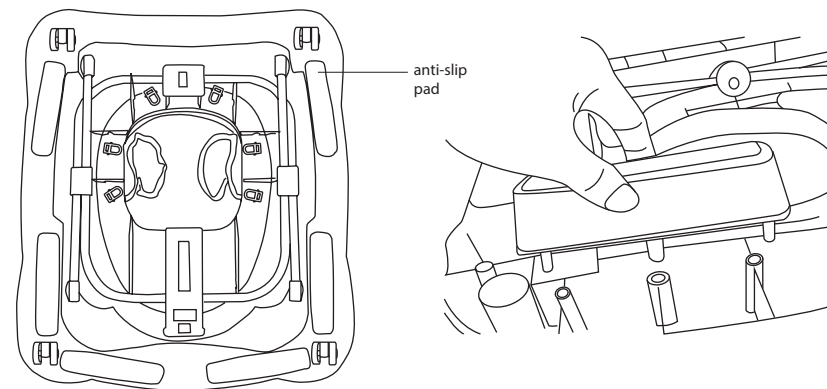


6. Raise the baby walker top tray as shown until it clicks into place. Note. the baby walker has 3 height positions *Refer to page 8 for more details. Insert rear wing (G) connection points into the allocated holes on the rear side of the walker top tray. Push down firmly until it clicks into place.

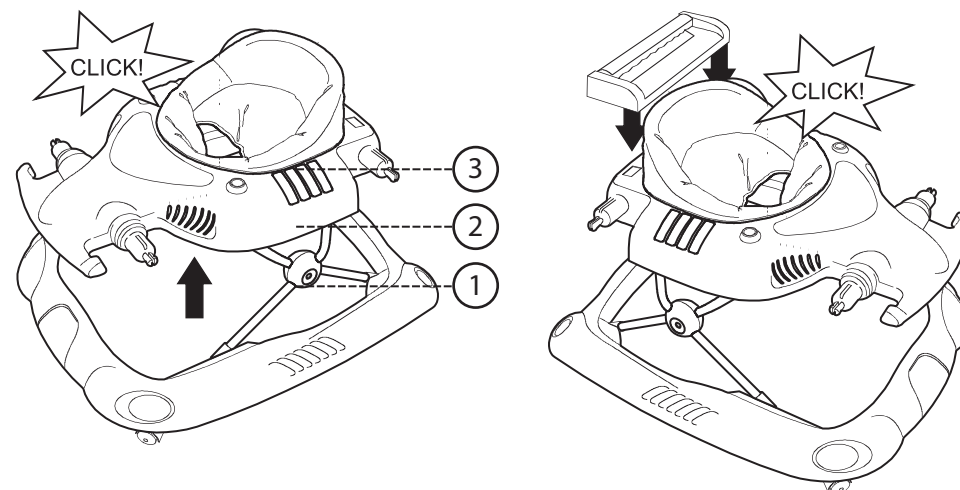


Assembly

7. Push car wheels (H) firmly onto spoke end until you hear a click. Repeat for all 4 wheels.

WARNING! Ensure wheels are secure before continuing.

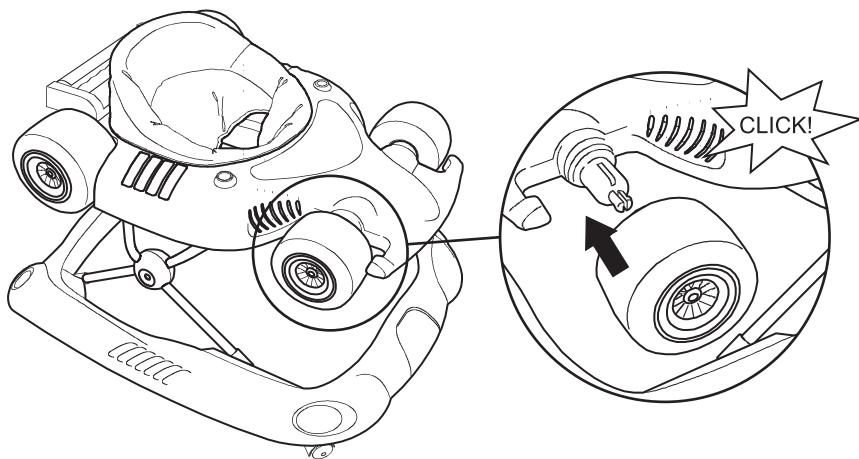


8. Insert the car mirrors (F) into the allocated slots either side of the walker top tray. Push down firmly until they click into place.

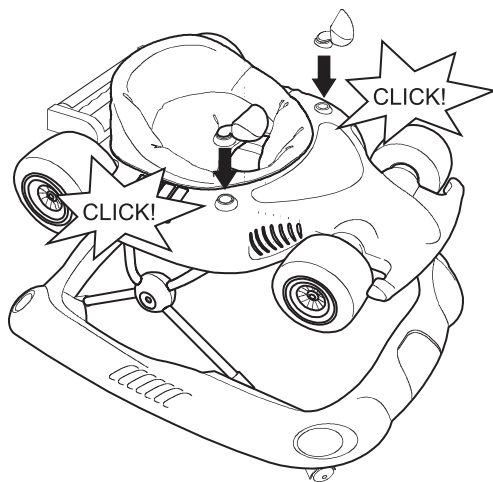

Assembly

9. The toy tray (D) requires 2 x "AA" batteries (not included). Use a screw driver to unfasten battery cover. Insert batteries. Secure battery cover back into position.

WARNING! Remove batteries before storing the toy tray and walker.

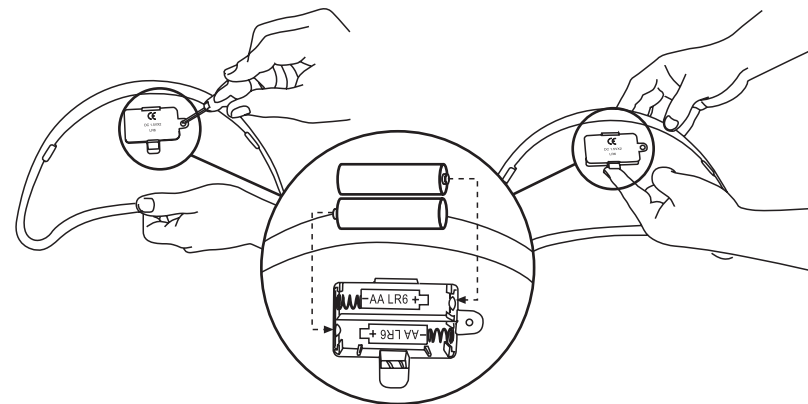

10. Once batteries are installed, attach the toy tray (H) to the walker. The tray will click once secure.

