



Soda Auto Fold Stroller


Instruction manual



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE
READ CAREFULLY**


Parts List

A

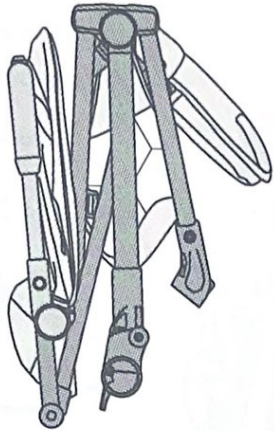

stroller
x1

B

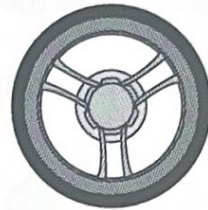

rear wheels
x2

C




front wheels
x2

Assembly

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.


1a. Located at the centre of the stroller (A) handle, press the safety button on the side. At the same time, push up the folding button.

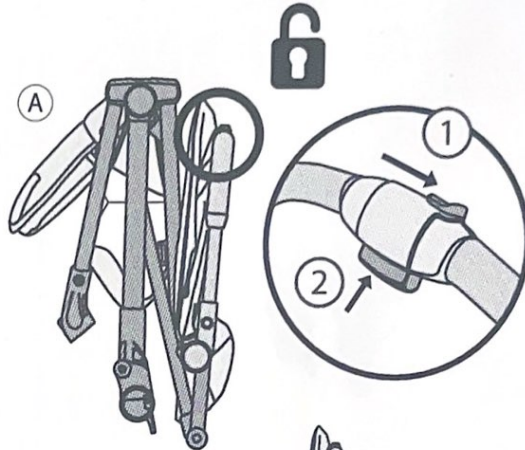

1b. Lift up the stroller handle to open. The stroller will “click” when locked into position.




1c. Open the canopy.
WARNING! Ensure the frame lock is fully engaged before placing child in stroller.

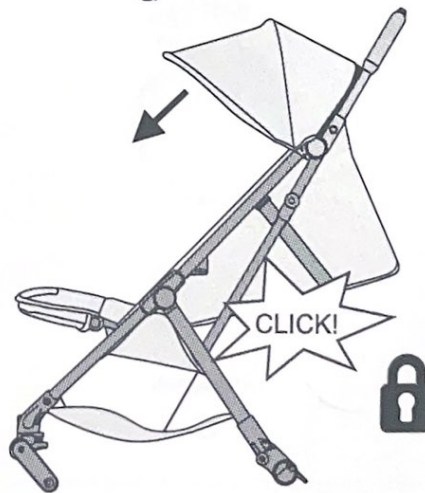


Assembly

2a. Insert each of the front wheel (C) pins into the centre of the socket until you hear a "click". Give each wheel a firm tug to ensure they're securely attached.

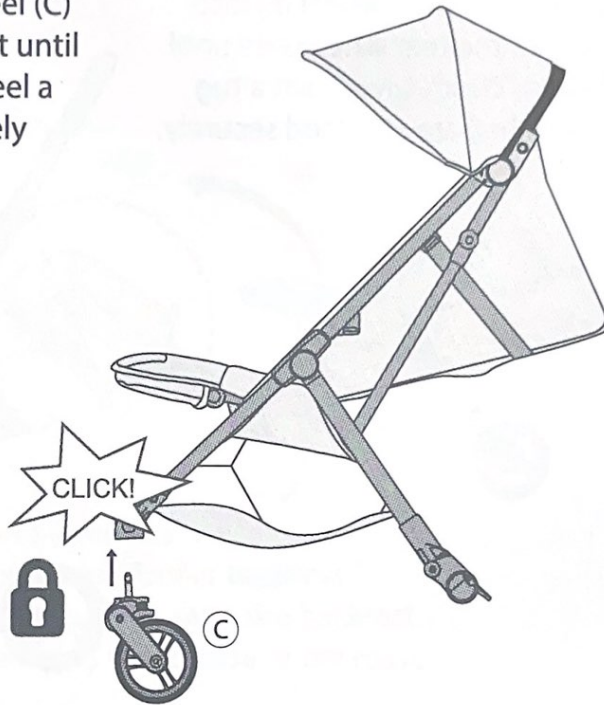


2b. To remove the front wheels, press the button on the back of the wheel socket and pull.

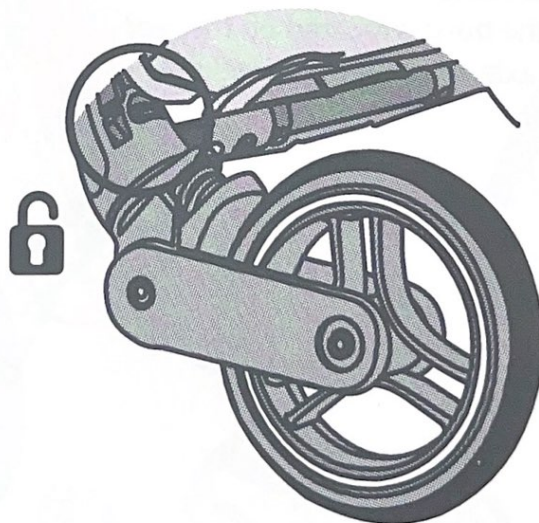


Assembly

3a. Push each rear wheel (B) into the sides of the rear wheel axle until you hear a "click". Give them a tug to ensure they are attached securely.

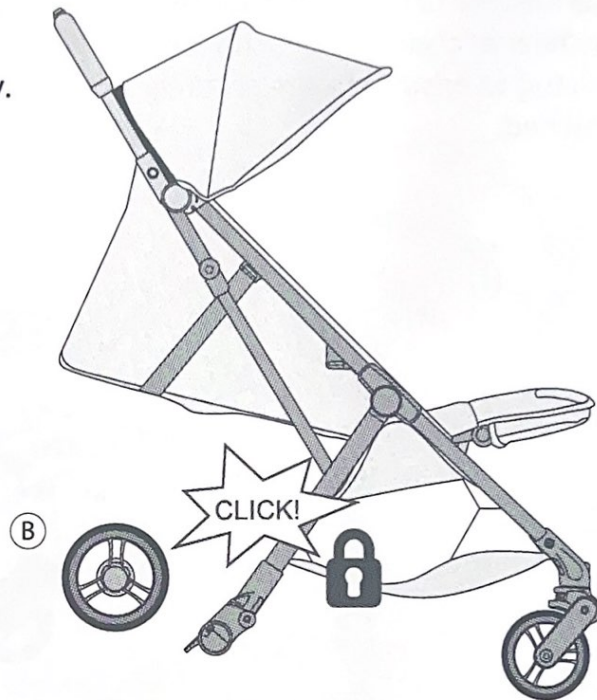


3b. To remove the rear wheels, press the button located on the rear wheel axle and pull the wheel off.

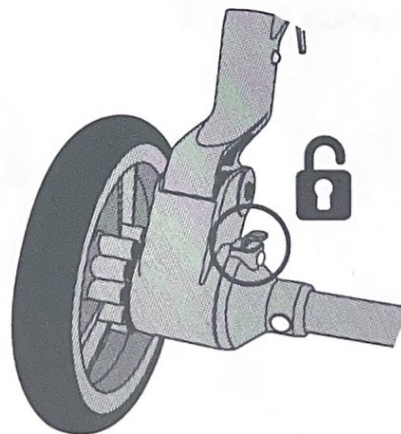


Footrest and Backrest Adjustment

4. Footrest: Press and hold the buttons both sides to adjust the footrest up and down.

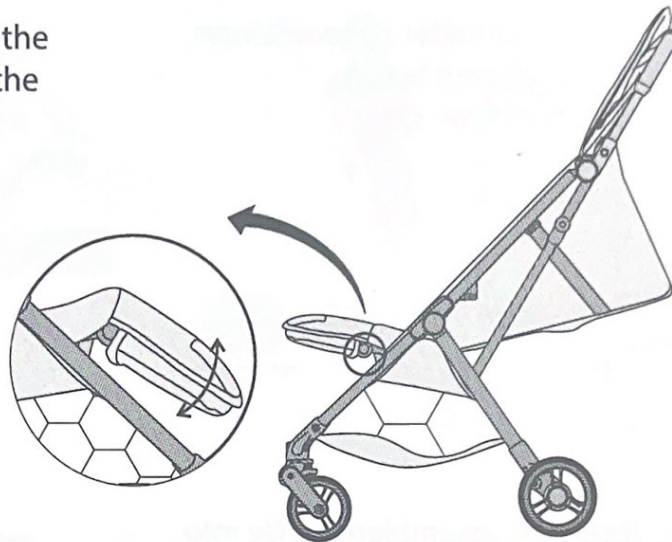


5. Backrest: Push the prongs and open the backrest adjustment buckle to lower the stroller backrest. Insert the prongs into the buckle housing to raise the backrest. Pull on the end of the harness webbing to increase or decrease the backrest height.

WARNING! Always ensure that the seat is securely fixed in position before use.

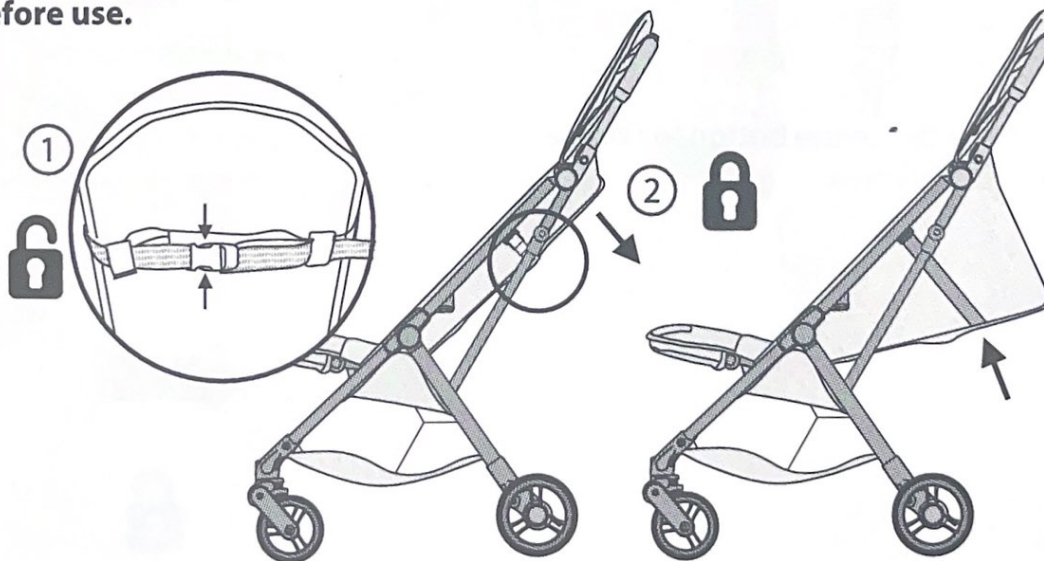


Harness Adjustment


6a. Clip the shoulder strap retainers onto the waist strap buckle. Repeat for the other side.

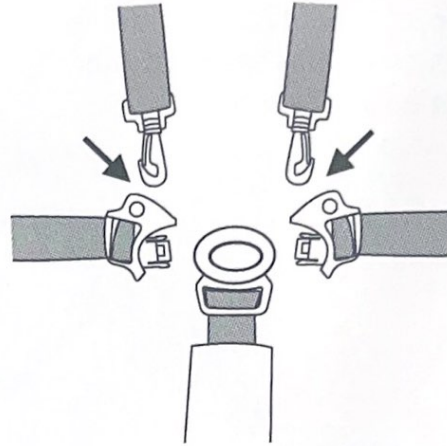

6b. Insert the assembled buckle into the crotch buckle housing until it engages securely in place. Listen for the "click". Repeat for the opposite side.

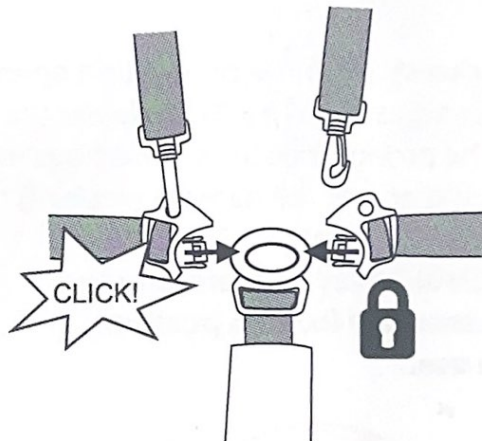


6c. Press the centre button to release child from harness.

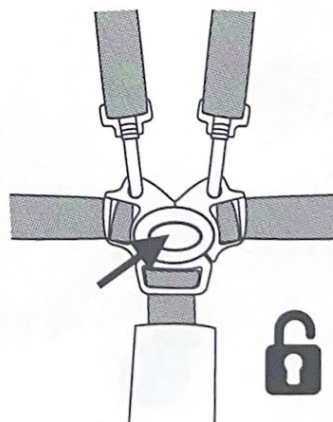

Harness Adjustment



6d. Move the sliders to adjust the shoulder and waist strap length.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

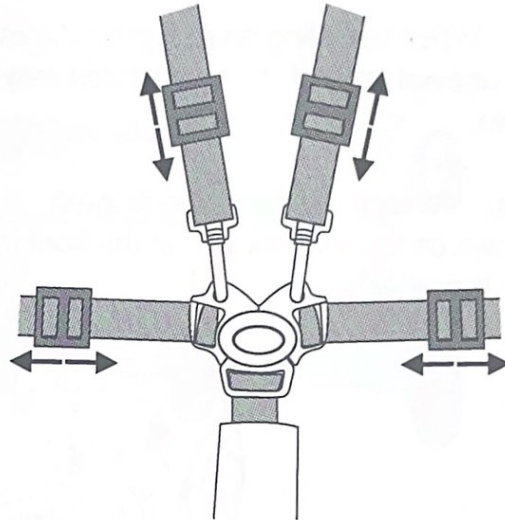

6e. The stroller has 3 height positions. Undo the harness and remove the shoulder pads to adjust the shoulder height. Remove harness strap from webbing holders. Redo harness.



WARNING! Always adjust the shoulder strap height according to baby height and ensure that both straps are at the same height.

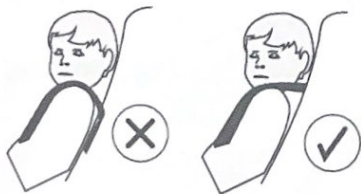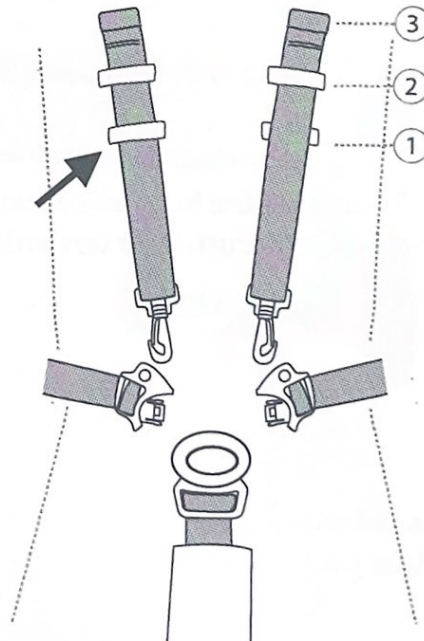


Swivel Wheels

7. When travelling on straight surfaces or uneven ground the front wheels may spin.

7a. **To lock** the front wheels, push down on the lever located at the front of the wheels.

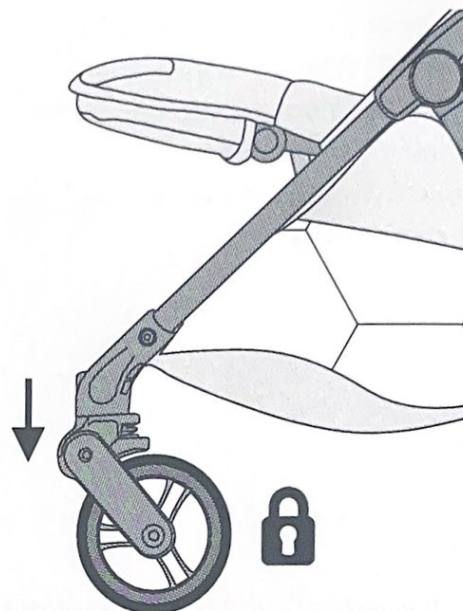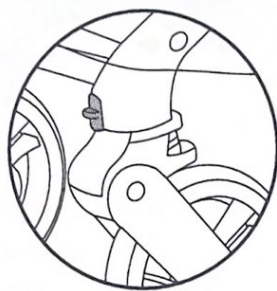


7b. **To unlock** the front wheels so they swivel 360°, push lever upwards.

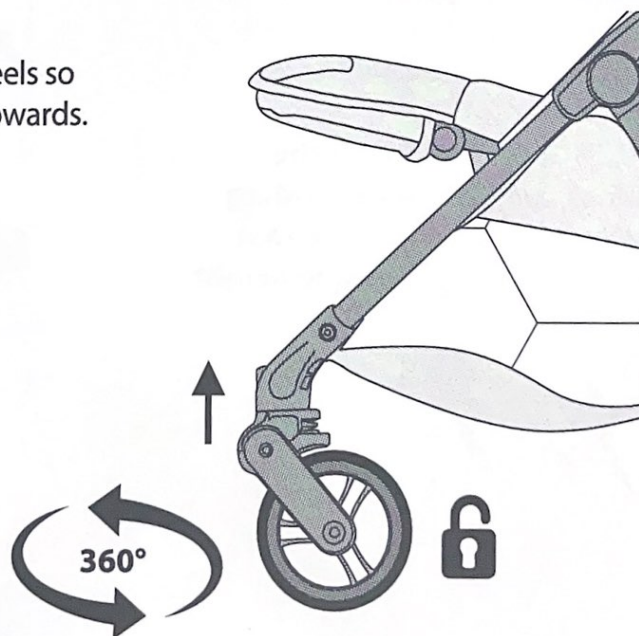


Brakes

8a. To lock: Engage the brake push down brake locking pedal. The brake will “click” when locked into position.

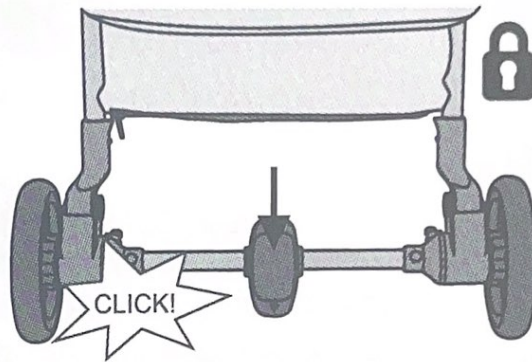

8b. To unlock: Lift up pedal to release brake.

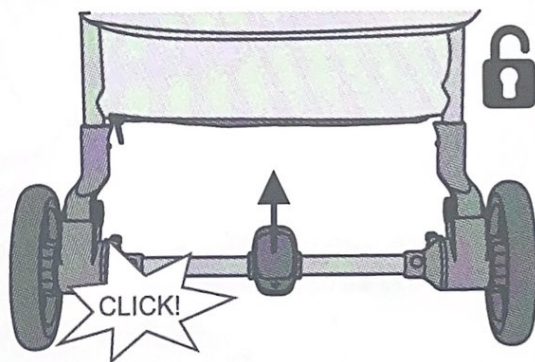

WARNING! Always apply the parking brake when the stroller is stationary.
WARNING! Ensure the parking brake is engaged during the loading and unloading of children.

Folding


9a. Fold the canopy.



9b. On the handle, press the safety button at the side. At the same time, push up the folding button.



9c. Remove your hand, the stroller will fold automatically.

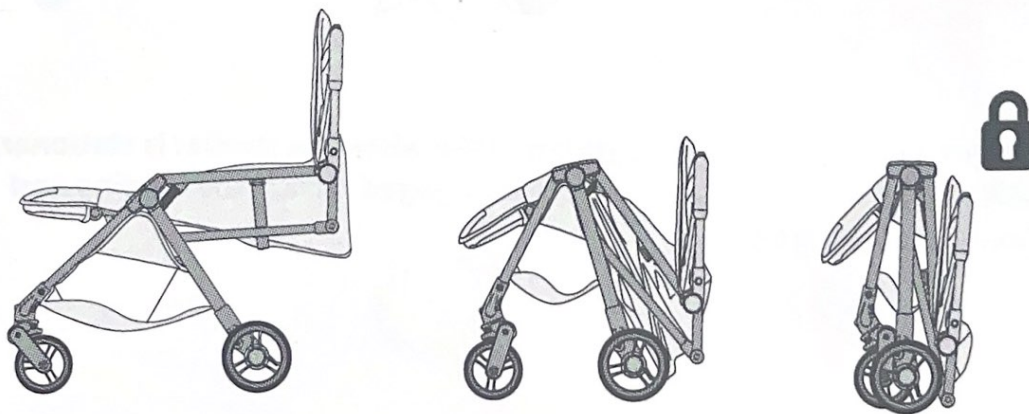

Safety

 **IMPORTANT:**

RETAIN FOR FUTURE REFERENCE

READ CAREFULLY

WARNING! TO AVOID INJURY OR DEATH READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

The maximum weight of the child for which this stroller is intended is 22kg.

WARNING! Follow the manufacturers instructions.

WARNING! Always apply the brakes whenever the stroller is stationary.

WARNING! Do not leave the child unattended.

WARNING! Secure the child in the harness at all times.

WARNING! Do not carry extra children or bags on this stroller.

WARNING! Make sure children are clear of any moving parts if you adjust the stroller. Otherwise they may be injured.

WARNING! Use the harness at all times.

WARNING! This stroller is intended for children from birth to 22kgs (approx 4 years). It is not suitable for children under 6 months old when in upright position.

Remember, your child safety is your responsibility:

- The correct use and maintenance of this stroller are essential.
- Be sure that all clamps and buckles are securely fixed and in place before use.
- When in the stroller, your child must always wear the safety harness, correctly fitted and adjusted, at all times.
- Ensure the parking brake is engaged during the loading and unloading of children.
- Do not allow your child to climb into the stroller.
- Never leave a raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.

Safety

- Be careful when going up or down kerbs.
- Remove your child and fold the stroller when going up or down escalators.
- If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- To prevent damage, always remove the raincover before folding the stroller.
- Do not place anything on top of the raincover.
- To prevent your child overheating, always fold or remove a raincover when indoors or in warm environments.

This product conforms to EN 1888-2:2018+A1:2022

Care

Cleaning

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean. Do not bleach.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

Maintenance

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Regularly check and lubricate the wheels.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- Always check your stroller for loose screws, ensure they are tightened properly.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.



Supplied by Baby Factory NZ. Ltd.
58 Stonedon Drive
East Tamaki
Auckland
New Zealand
www.babyfactory.co.nz

Due to variation in style and design the illustrations used in this instruction manual are generic.
Variation in design may occur in the images shown.