



Swift

i-Size Travel System

Instruction Manual



IMPORTANT:
READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE

Safety



IMPORTANT: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

WARNING! This product is suitable from birth up to 9kg with the carrycot and from 6 months up to 22kg or 4 years of age, whichever comes first, with the seat unit.

WARNING! The carrycot is suitable for one child from birth who cannot sit up unaided, roll over and cannot push itself up on their hands and knees.

WARNING! The carrycot is not suitable for overnight sleeping.

WARNING! The seat unit is not suitable for children under 6 months.

WARNING! Never leave the child unattended.

WARNING! Ensure that all locking devices are engaged before use.

WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING! Do not let your child play with this product.

WARNING! Do not add an additional mattress to the pram.

WARNING! ALWAYS USE THE HARNESS RESTRAINT SYSTEM.

WARNING! Always use the crotch strap in combination with the waist belt section of the harness.

WARNING! Check that the pram body or seat unit attachment devices are correctly engaged before use.

WARNING! This product is not suitable for running or skating.

Safety

WARNING! Do not let other children play unattended near the product.

WARNING! Any load attached to the handle and/or backrest and/or sides will affect the stability of the product.

WARNING! Do not use this product if any part is broken, torn or missing.

WARNING! Do not place the product near an open fire or other source of strong heat.










WARNING! Use only on a firm, horizontal level and dry surface.

- YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.
- Adult assembly is required.
- The vehicle shall be used only for up to one child for which it has been designed.
- When in use, the head of the child in the product should never be lower than the body of the child.
- Ensure that the parking brake is engaged during the loading and unloading of children.
- The handles and the bottom of carrycot should be inspected regularly for signs of damage and wear.
- Do not add another mattress on top of the mattress provided or recommended by the manufacturer.
- If a mattress is purchased separately, the carrycot depth from the top of the mattress to the top of the carrycot side must be at least 150mm.
- The basket can carry a maximum load of 3kg.
- Before carrying or lifting, make sure that the handle is in the correct position of use.
- Do not overload the pram with additional children, goods or accessories.
- Always apply the parking brake when the pram is stationary.
- Take care when going up or down kerbs.
- Use only replacement parts supplied or approved by the manufacturer.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.



Safety

- Keep the plastic packaging away from children to avoid danger of suffocation.
- Take extra care in windy conditions.
- Remove your child and fold the pram when going up or down stairs or escalators.
- Do not use this pram near an open fire or exposed flame.
- For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- To prevent damage, always remove the raincover before folding the pram.
- Do not place anything on top of the raincover.
- Never leave a raincover, hood or apron on the product indoors, in a hot atmosphere or near a heat source, as the child may overheat.
- This product conforms to EN 1888-2:2018+A1:2022 & EN 1466:2023.

Parts List

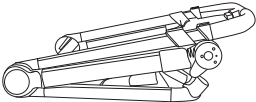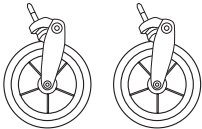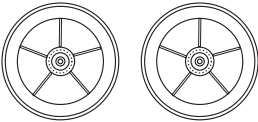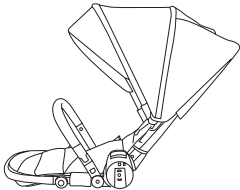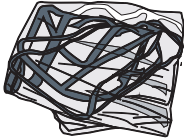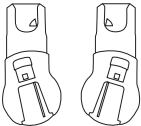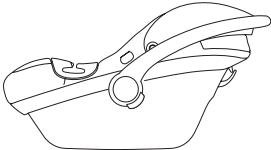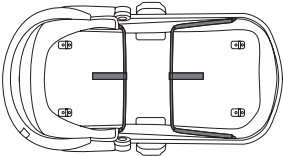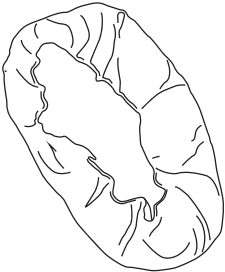A  Chassis x 1	B  Front wheels x 2	C  Rear wheels x 2
D  Seat unit (bumper bar and canopy assembled) x 1	E  Raincover x 1	F  Car seat adaptors x 1 set
G  i-Size car seat x 1	H  Carrycot x 1	I  Carrycot lining x 1


Parts List

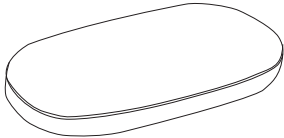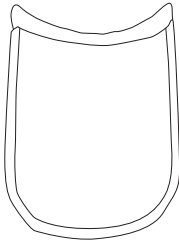J  Carrycot mattress x 1	K  Carrycot apron x 1


Chassis Assembly

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.


1a. Lift up the handle to open the chassis (A).

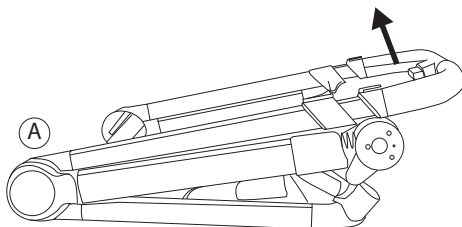

1b. When the chassis is completely open, you should hear a “click” sound on both sides indicating it is locked in place.

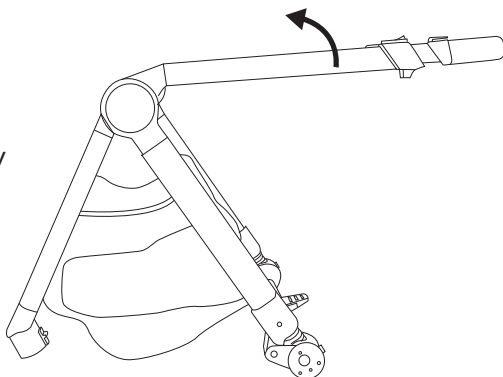


WARNING! Always ensure the opened chassis is locked in place before you use it.

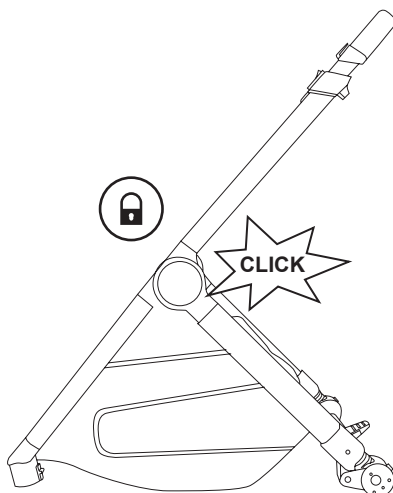


Chassis Assembly

2a. Push each rear wheel (C) into the sides of the rear wheel axle until you hear a “click”.

Give them a tug to ensure they are attached securely.

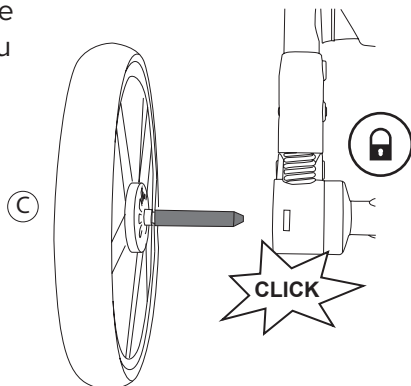


2b. To remove the rear wheels, press in the metal button located on the side of the rear wheel axle and pull the wheel out.

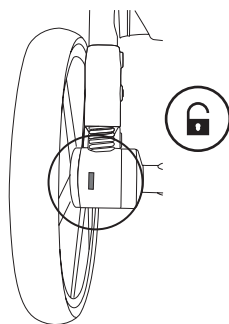


3a. Insert each of the front wheel (B) pins into the centre of the socket until you hear a “click”.

Give each wheel a firm tug to ensure they’re securely attached.

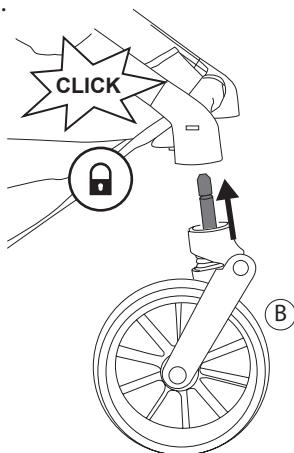


3b. To remove the front wheels, press in the metal button at the side of the wheel socket and pull the wheel out.

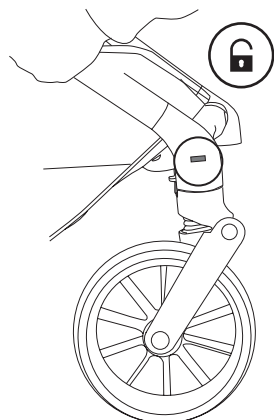

Carrycot Assembly


WARNING! The carrycot is suitable for one child from birth who cannot sit up unaided, roll over and cannot push itself up on their hands and knees (approx. 9kg).

1. Remove the carrycot mattress (J) and unzip the carrycot lining (I) to remove from the carrycot (H).

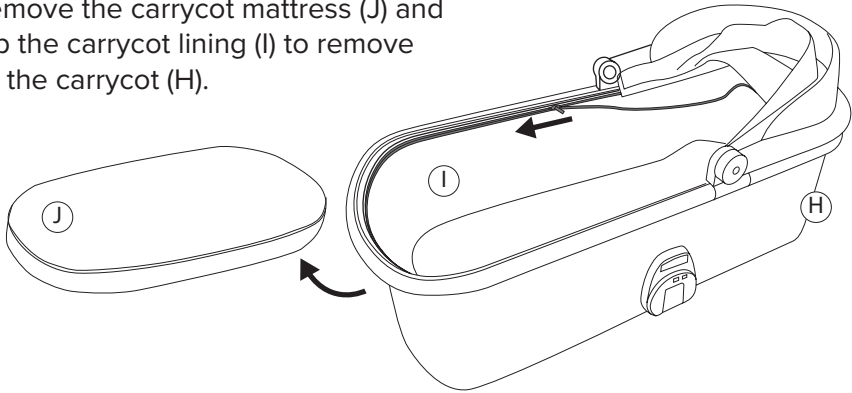

2. Pull the metal rods into place as shown. The metal rods should engage with the plastic holders in the carrycot base board. This will give your carrycot its structure.


WARNING! Ensure metal rods are fully engaged before continuing. Failure to do so could cause collapse and fatality.

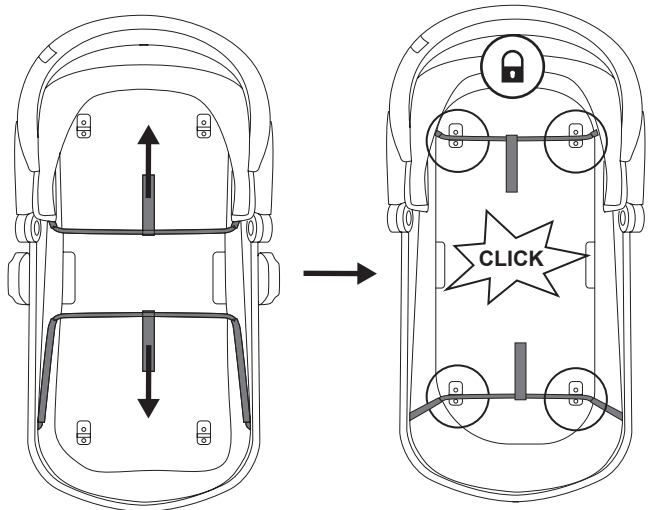

Carrycot Assembly


3. Re-zip the carrycot lining onto the carrycot frame and re-insert the carrycot mattress.

WARNING! Do not add an additional mattress to the carrycot.

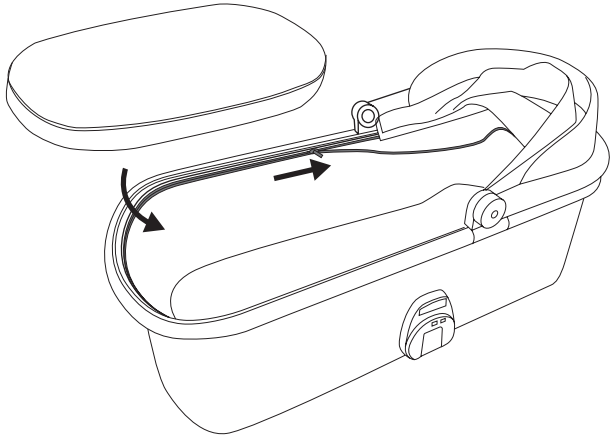



4a. Open the canopy by pulling forward on the canopy rim until it “clicks” into place.

WARNING! Keep the handle at the upright position when carrying or lifting the carrycot.

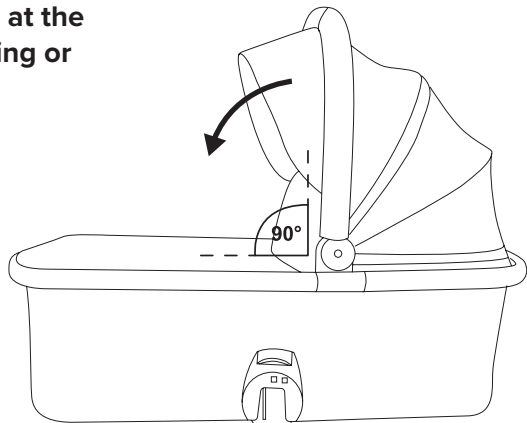


Carrycot Assembly


4b. The canopy features a mesh extension panel for ventilation and sun protection. Undo the zip and pull forward on the canopy rim to extend the canopy.

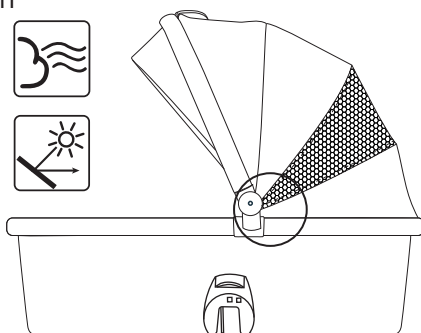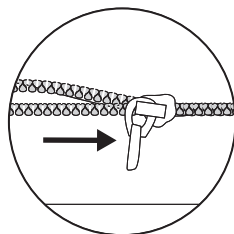

4c. There is also a mesh panel at the head of the carrycot body. Undo the zips and fold down the fabric.

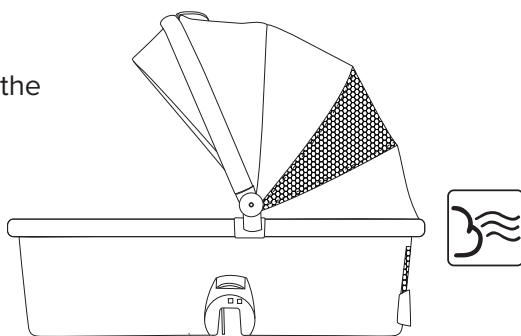


4d. To fold the canopy, push in buttons both sides inside the canopy and adjust to desired position.

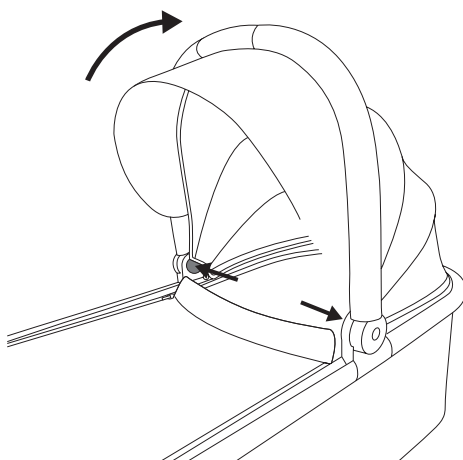

Carrycot Assembly


5. Starting from the right, zip the apron (K) onto the carrycot. Fasten the press studs to the inside of the canopy frame.

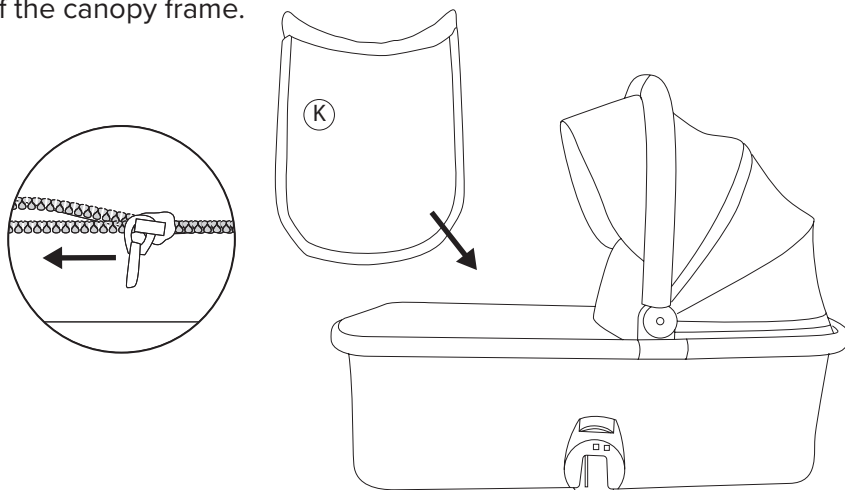


WARNING! The carrycot is not suitable for overnight sleeping.

Pram Mode

1. Attach the carrycot to the chassis.
Line up the carrycot connectors
with the chassis connection points
and press downwards.

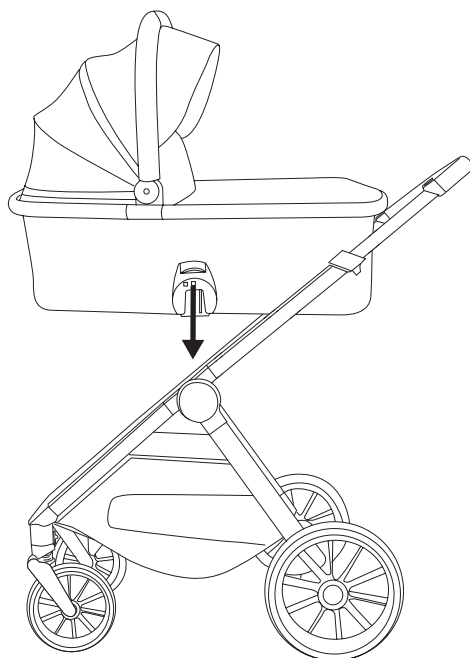


1b. Listen for a 'click' to signal
correct assembly.

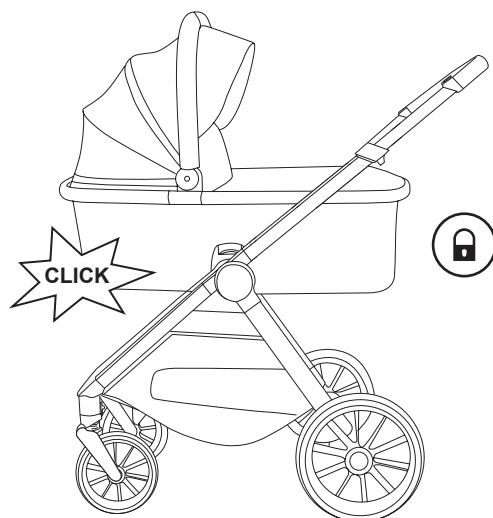

Pram Mode

2. To remove the carrycot from the chassis, lift levers both sides of the connectors and pull the carrycot upwards.

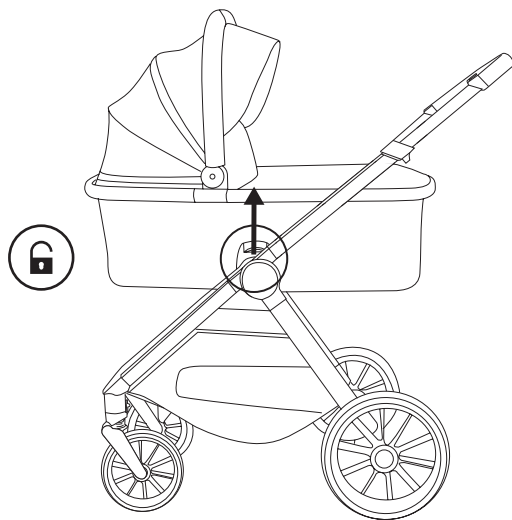

Pram Mode

Suitable from birth in pram mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.


WARNING! Never use pram mode with carrycot forward facing.





Pushchair Mode

1a. Attach the seat unit (D) to the chassis. Line up the seat unit connectors with the chassis connection points and press downwards. Listen for a “click” to signal correct assembly.

WARNING! The seat unit is not suitable for children under 6 months.

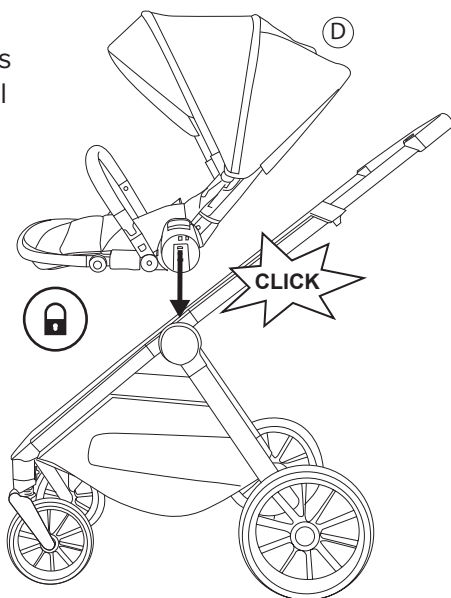


1b. To remove the seat unit from the chassis, lift levers both sides of the connectors and pull the seat unit upwards.

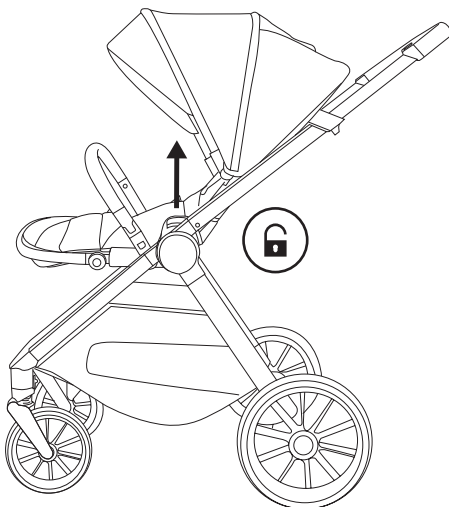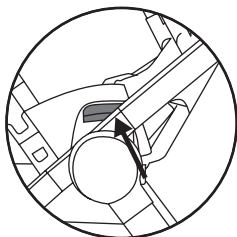


Pushchair Mode

2a. The seat unit is reversible in pushchair mode. It can be forward facing or parent facing.

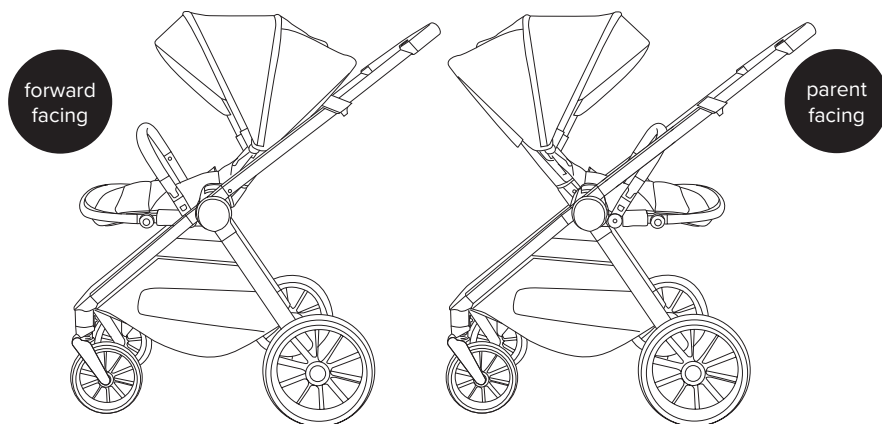

2b. Lift lever both sides of the seat connectors to remove the seat unit from the chassis. To re-attach the seat unit to the chassis, line up the seat connectors with the chassis connection points and press downwards. Listen for a “click” to signal correct assembly.

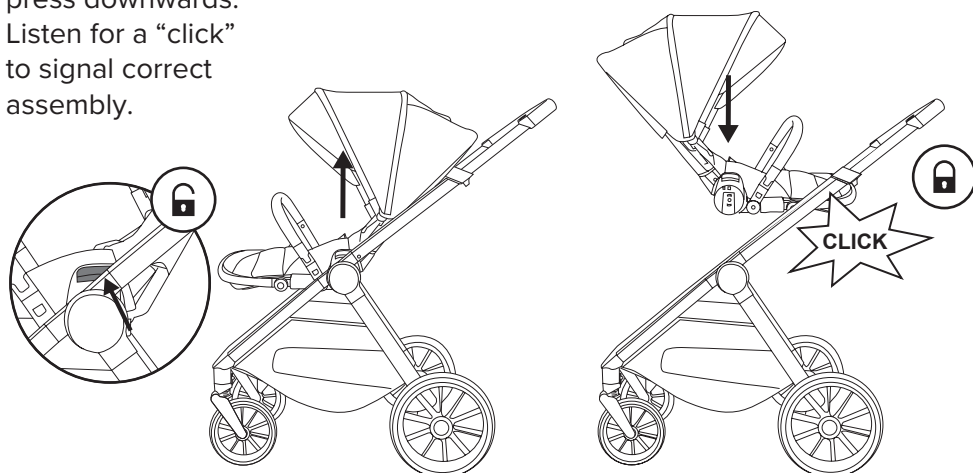

Brakes



Press down on the brake pedal on the rear axle to engage the brake. Listen for the “click” signalling that the brake is locked.

Push the brake pedal upwards to disengage the brake.

WARNING! Always apply the parking brake when the pram is not moving.



WARNING! Always apply the brake when you are placing and removing the child.

WARNING! Always apply the brake when you are making adjustments to the pram (e.g. changing seat direction).

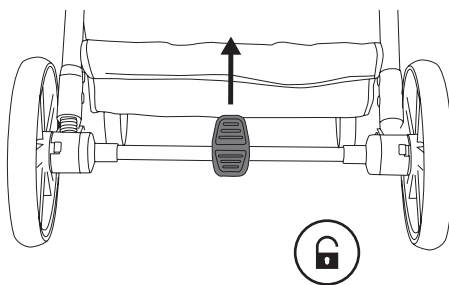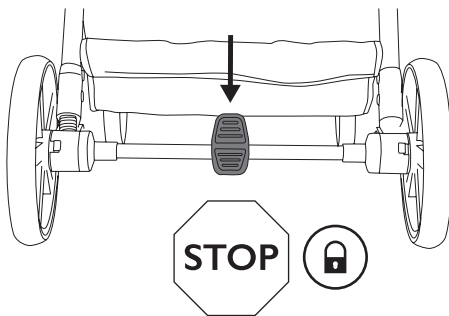


Bumper Bar

1. To open or remove the bumper bar, press the buttons on both sides and lift up.

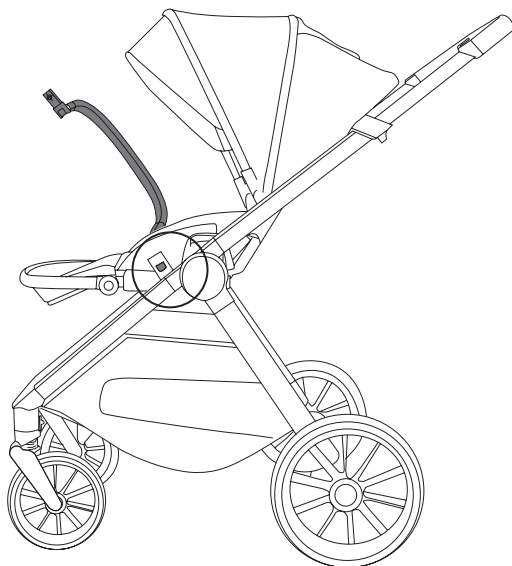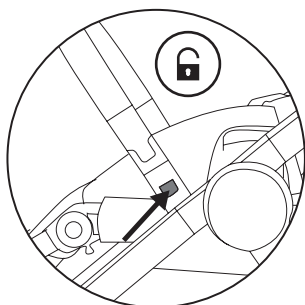


2. To reattach the bumper bar, align the ends with the connection posts on the chassis and push down. Listen for the “click” signalling that the bumper bar is secure.

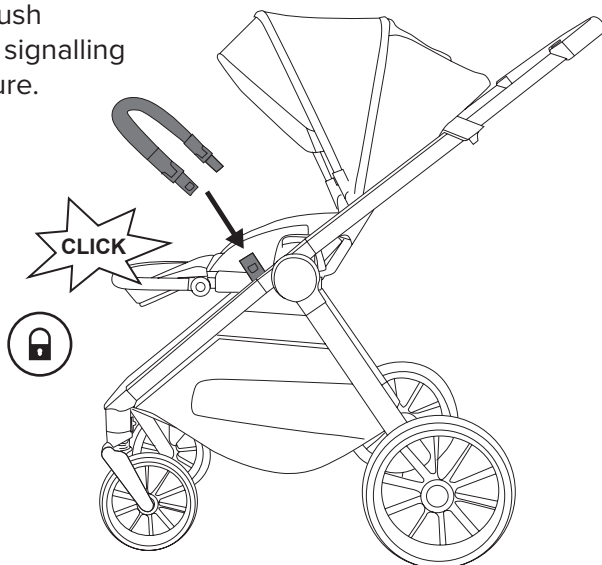


Swivel Wheels

To lock the front wheel swivel, push the lever at the front of the wheel hub down on each side.

When locking the wheels, make sure they are directed straight so that the lock tab aligns correctly with the slot on the wheel.

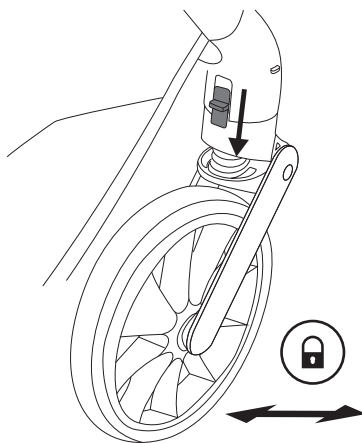


To enable 360° swivel movement, push the lever up to unlock the wheels.

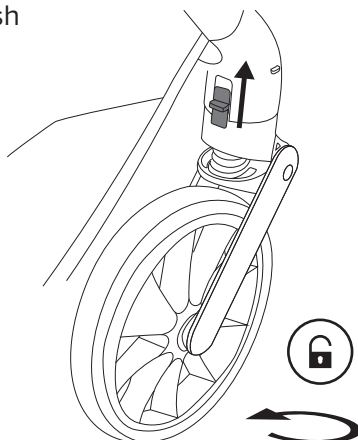

Backrest Adjustment


Lift the lever at the back of the seat unit to adjust the seat unit recline. Ensure you hear a “click” as the seat engages at your desired position.

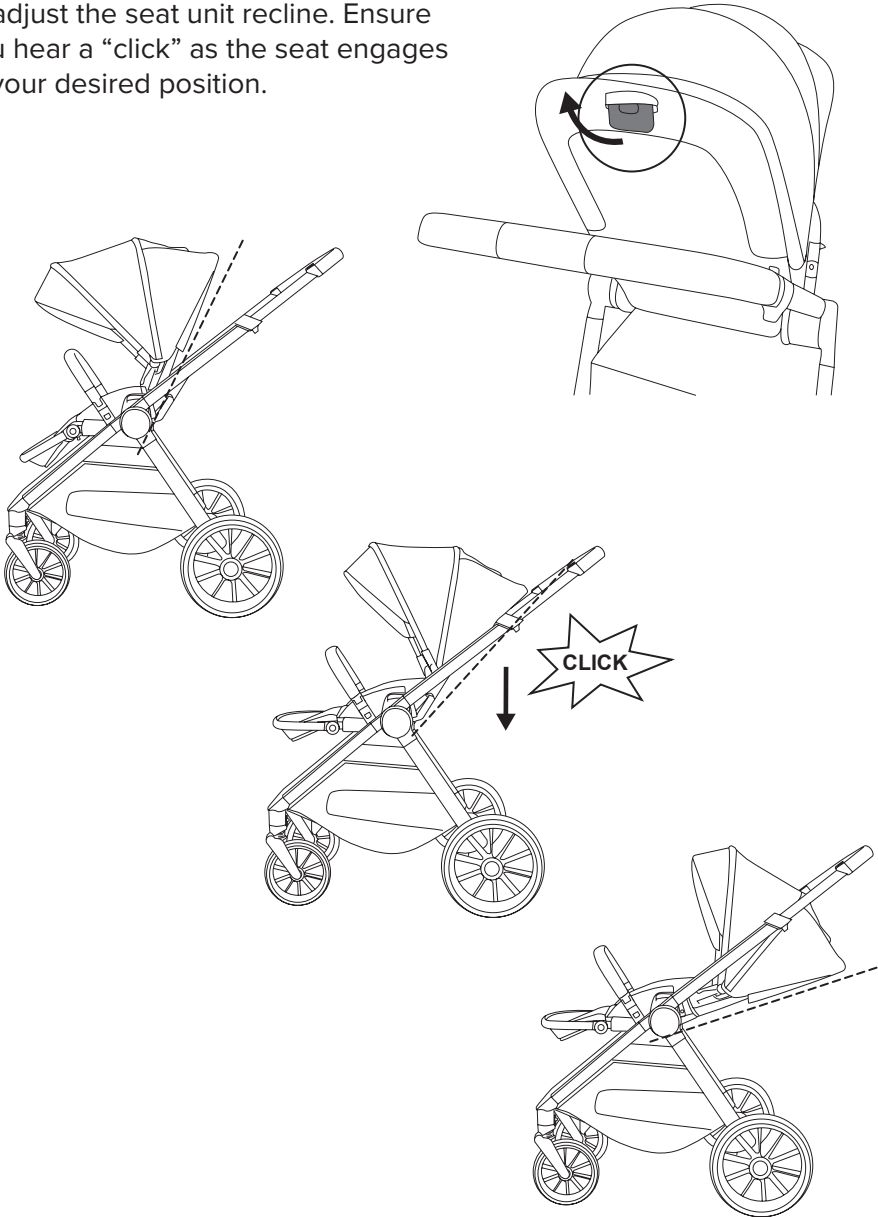

Handle Adjustment


Push the button in the middle of the handle bar and pull or push the handle to your desired height.

The handle will “click” into place.

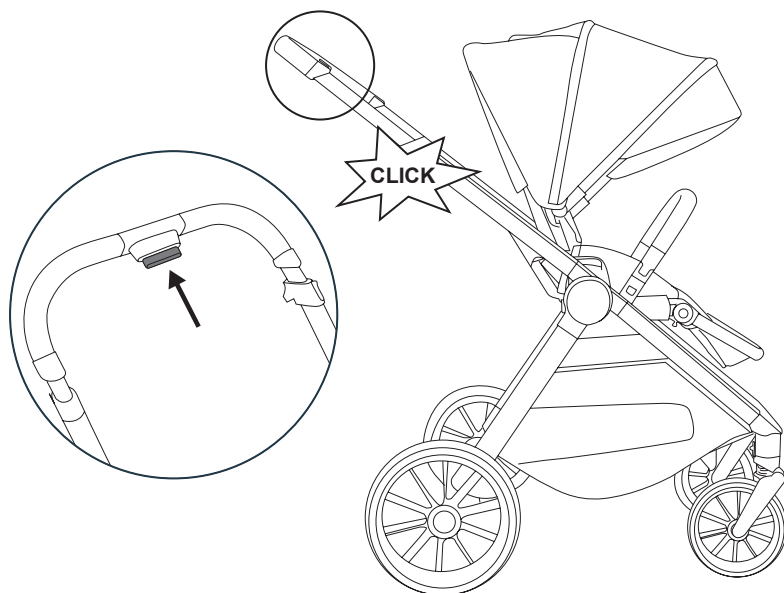


Footrest Adjustment

Press both footrest buttons simultaneously and adjust the footrest to the desired position. Listen for the “click” signalling that the footrest is locked into position.

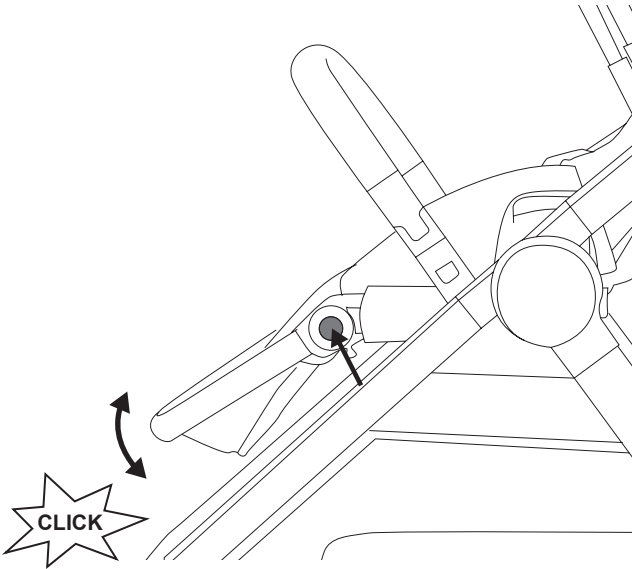


Canopy Adjustment

1. The canopy can be opened or closed by pulling forward or backward on the canopy rim.

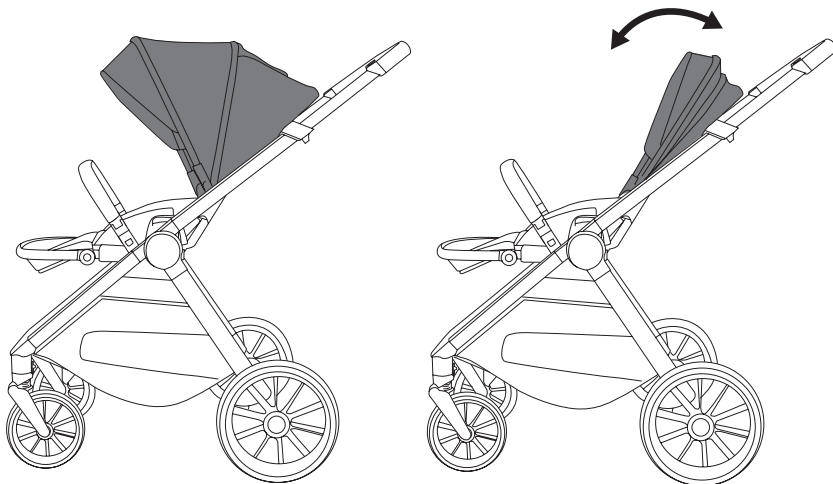


2. The canopy features an extension panel for maximum sun protection. The extension panel has a mesh window for air circulation and to keep an eye on baby in forward facing position.

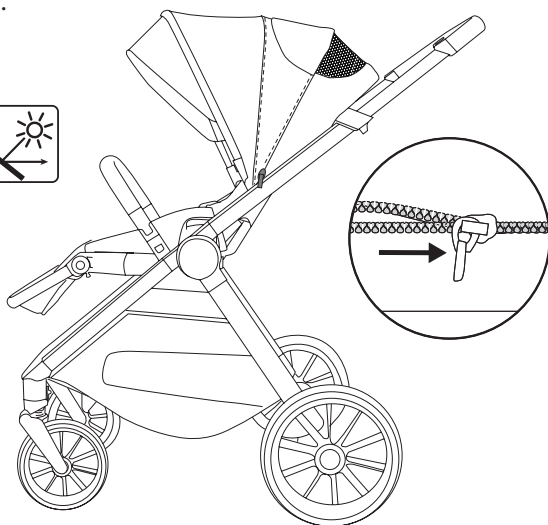


Harness

1. A five-point safety harness is provided to restrain your child and should always be worn.

To secure the child in the harness, slide two buckles A onto buckle B. Then push the A and B buckles into C buckle holder.

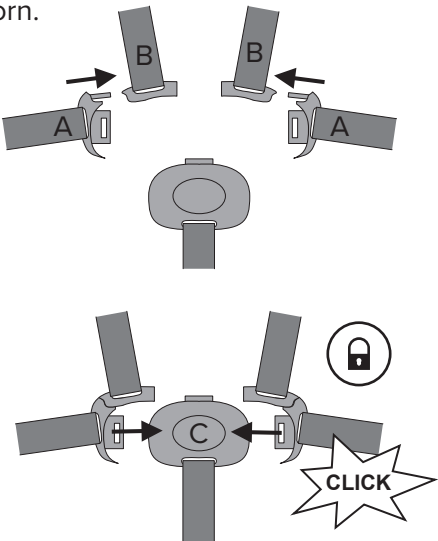


2. To release the buckle, press the button in the centre.

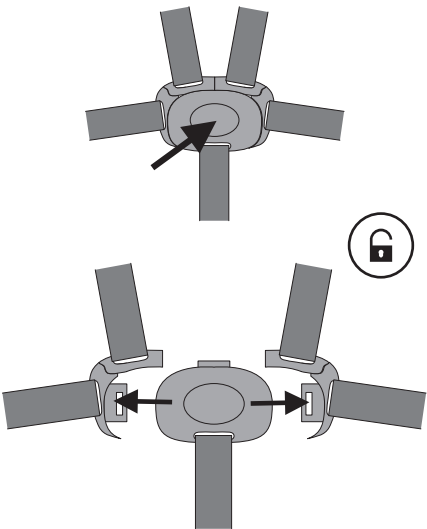

Harness


3. Adjust the length of each strap to ensure it fits nice and snug.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

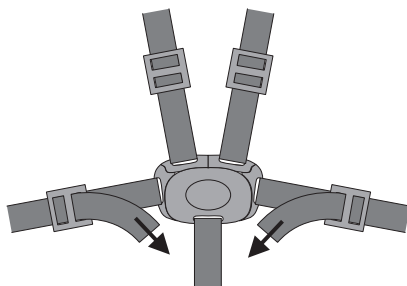


4. There are 3 shoulder height positions.

At the lowest height setting, thread harness through loops as shown.

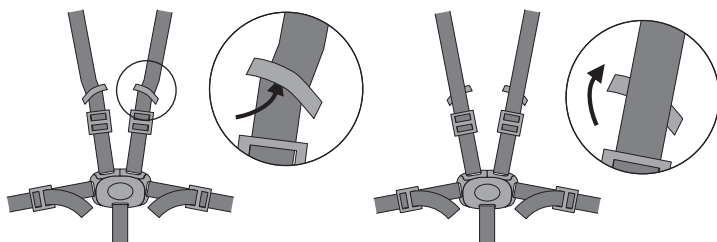

For the middle and highest setting, feed the buckles B through the slot at the front of the seat unit. Re-insert the harness tabs back through slots at desired height. Pull out from front of seat.


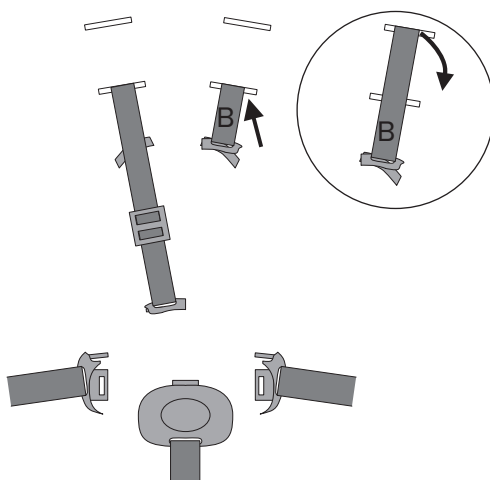


WARNING! Always adjust the shoulder strap height according to baby height.

Raincover

Locate the raincover (E).
Pull the raincover down over the
pram/pushchair. Fasten the velcro
straps around the chassis to secure.


NOTE: The raincover will fit with
the carrycot, seat unit or car seat
attached to the chassis.

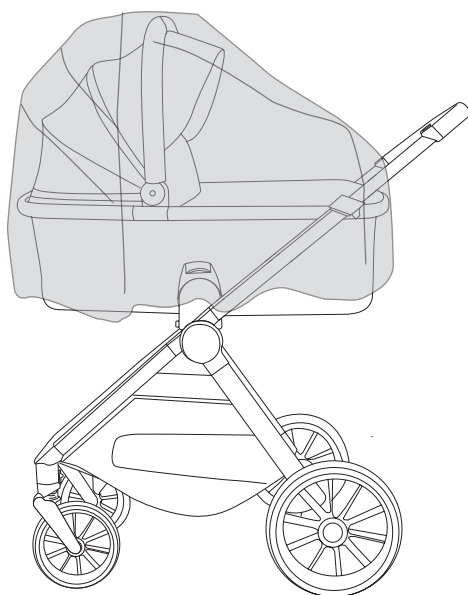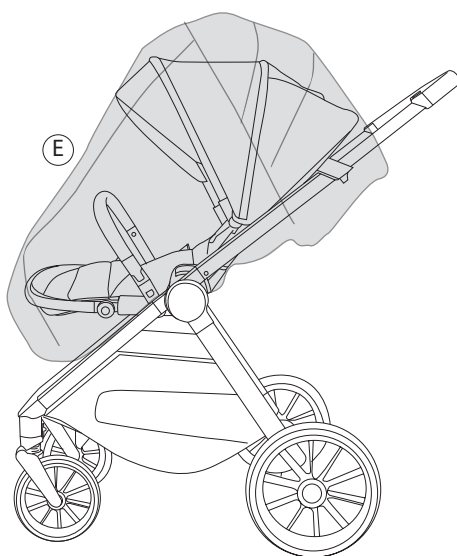

Travel System

A set of car seat adaptors (F) and a car seat (G) are included to complete the travel system.


1. Remove the carrycot or seat unit from the chassis to fit the car seat adaptors. Line up the adaptors with the chassis connectors and press downwards. Listen for a “click” to signal correct assembly.

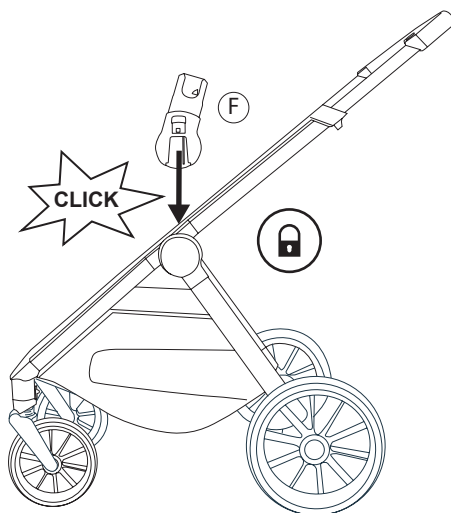

2. Place the car seat onto the adaptors. Push down to “click” into place. Lift by handle to ensure car seat is secure.


WARNING! Never attach the car seat forward facing.

IMPORTANT: Refer to the car seat manual for full details of use.

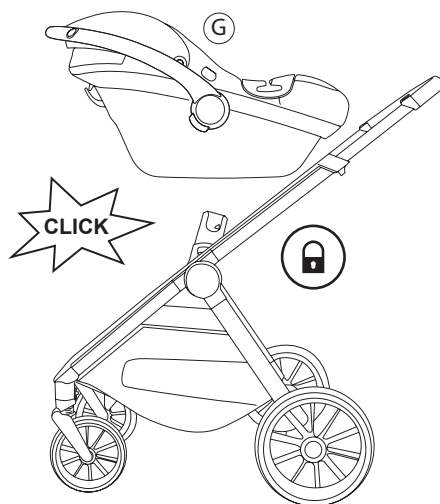


Travel System

3. To remove the car seat, press the buttons located on the sides of the car seat and pull upwards.

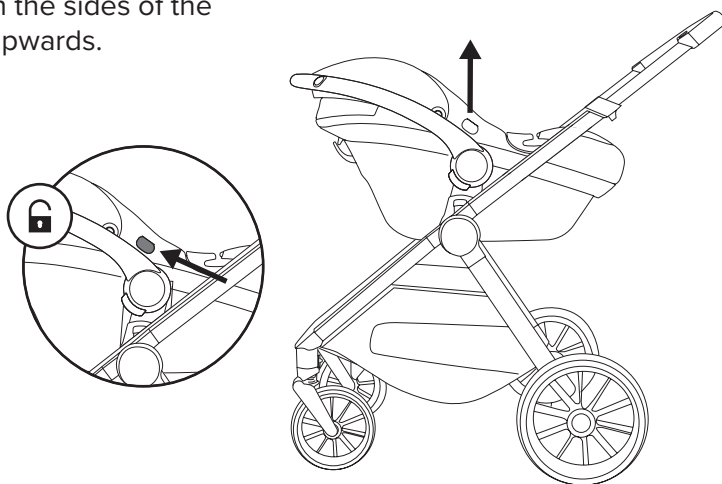

4. To remove the car seat adaptors, press the buttons on the adaptors and pull adaptors upwards.

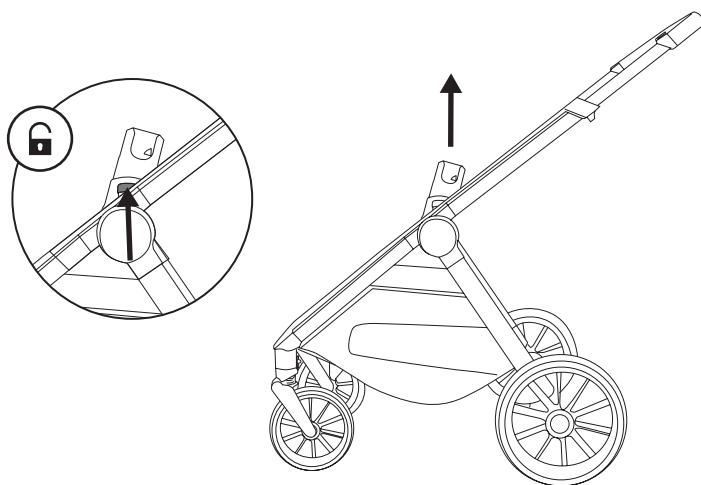


Folding


1. For a more compact fold, remove the seat unit before folding. Otherwise, the chassis can fold with the seat unit attached forward facing or parent facing.

NEVER fold the chassis with the carrycot or car seat attached.

ALWAYS apply the brake, fold the canopy back and lower the handle to the shortest height.


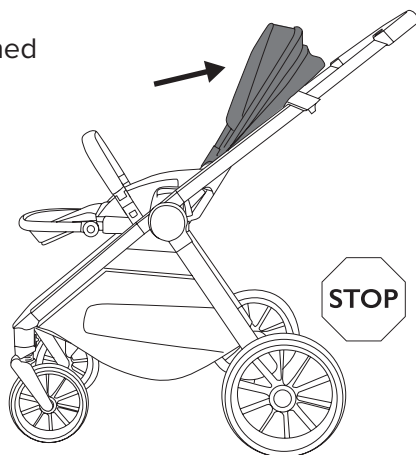


2. Lift the adjustment lever at the back of the seat unit and push the backrest forward until the seat unit is completely folded over.

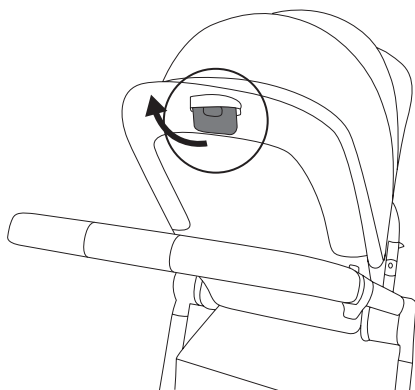


Folding

3. Press and hold the folding button on the left side of the frame, then simultaneously pull both folding levers towards you and push the frame down until the stroller folds down.

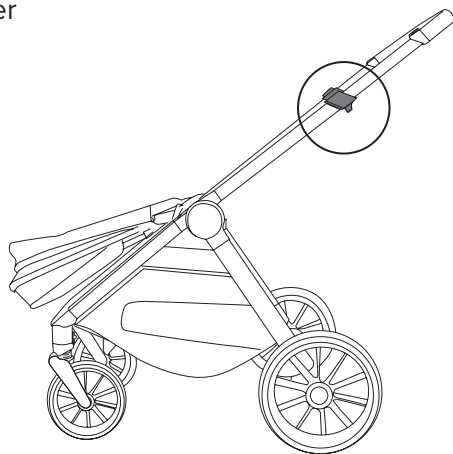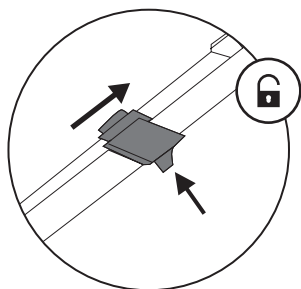

WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.

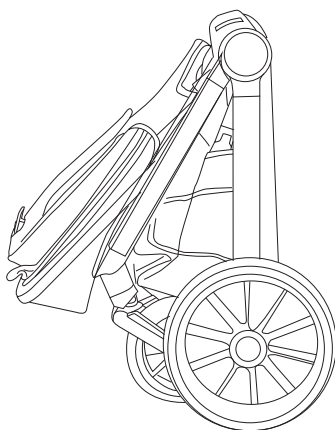

Care

Maintenance

- This product requires regular maintenance to ensure correct and safe performance.
- All assembly fittings are to be tightened properly.
- Always check your pram for loose screws, worn parts, torn material or stitching.
- Replace or adjust parts as needed.
- Lubricate moving parts regularly, especially the wheels.

Cleaning

- Wipe metals and plastics clean with a damp cloth.
- Sponge clean fabrics with warm soapy water. Rinse well with clean water to avoid staining. Dry in shade.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Do not use abrasive pads, bleach or strong household cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

Notes

Notes

Due to variation in style and design the illustrations used in this instruction manual are generic.
Variation in design may occur in the images shown.



Supplied by Baby Factory NZ. Ltd.
58 Stonedon Drive, East Tamaki, Auckland, New Zealand

www.babyfactory.co.nz