 




Cuggle

Reversible Stroller

 
Instruction Manual

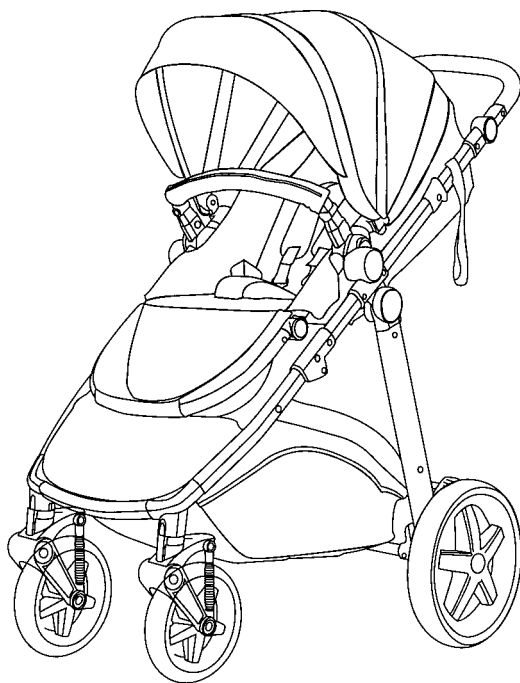

IMPORTANT:
RETAIN FOR FUTURE REFERENCE
READ CAREFULLY


Parts List

A

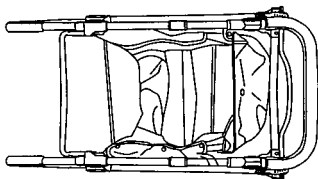


chassis
x1

 B

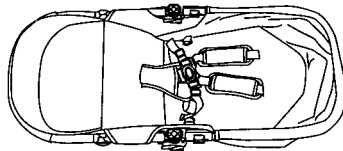

seat unit
x1

 C

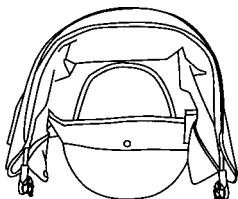


canopy
x1

D




bumper bar
x1

 E

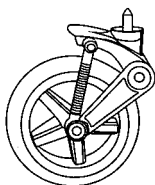

front wheels
x2

 F

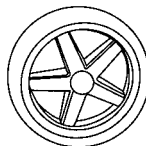

rear wheels
x2

Safety



CAUTION:

TO AVOID INJURY OR DEATH

Read these instructions carefully before use and keep for future reference. The child may be hurt if you do not follow these instructions.



WARNING!

Follow the manufacturers instructions.



WARNING!

Always apply the brakes whenever the pram/ stroller is stationary.



WARNING!

Do not leave the child unattended.



WARNING!

Secure the child in the harness at all times.



WARNING!

Do not carry extra children or bags on this pram/ stroller.



WARNING!

Make sure children are clear of any moving parts if you adjust the pram/ stroller. Otherwise they may be injured.



WARNING!

Use the harness at all times.



WARNING!

Use the tether strap to stop the pram/ stroller rolling away.

Safety



WARNING! check that the pram body or seat unit attachment devices are correctly engaged before use.



WARNING! the product is not suitable for running or skating.

Remember, your child's safety is your responsibility:

- Always fit and use the tether strap when the stroller is in use.
- When using the stroller, always ensure your hand is positioned in and around the tether strap. The strap is a compulsory safety feature which must be used at all times. It is for the safety and benefit of your child.
- This product is suitable for one child in an upright or reclined position from birth and up to 15kg.
- The stroller will become unstable if the manufacturer's recommended load is exceeded.
- The correct use and maintenance of this stroller are essential.
- Be sure that all clamps and buckles are securely fixed and in place before use.
- When in the stroller, your child must always wear the safety harness, correctly fitted and adjusted, at all times.
- Always use the harness correctly fitted and adjusted, with your child in the seat.
- Never leave the harness buckles when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.
- When in use, the head of the child in the product should never be lower than the body of the child.
- Use the stroller on flat or gentle sloping surfaces. It may be unstable on higher sloping and uneven surfaces - be aware of the possibility of the stroller tipping over.
- Care should be taken if the stroller is used on stairs or escalators.
- Care must be taken when folding and unfolding the product to prevent finger entrapment.



Safety

- Check all parts before use for breakage or fatigue. Discontinue use immediately if any part is found to be damaged or broken.
- The basket can carry a maximum load of 5kg.
- This product is suitable to be used with a new born baby. Please ensure the seat is in its full recline position when using with a new born child.
- Do not carry additional children. This stroller is manufactured for the use with one child only.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides will affect the stability of the product.
- Always be aware of the risks provided by fire and other significant sources of heat such as radiators etc. which may be in the immediate vicinity of your stroller.
- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires etc. in the vicinity of the stroller.
- It may be unsafe to use any accessories other than those approved by manufacturer.
- Keep the plastic packaging away from children to avoid danger of suffocation.
- Take extra care in windy conditions.
- Lift and carry the stroller safely. Please ensure all locking devices are engaged before lifting stroller - injuries can occur from moving parts.
- Only carry stroller if folded and locking or storage latches are engaged. Please apply storage latch if latch does not engage automatically.
- Never leave a raincover, hood or apron on the product indoors, in a hot atmosphere or near a heat source, as your child may overheat
- To prevent damage, always remove a raincover before folding the pram.
- This product is intended for domestic use only. It is not for commercial use.

This product conforms to AS/NZS 2088:2013

Assembly


1. Unfold the chassis (A) first by stepping on the rear tube and pulling upward on the lock bar. Lean forward until the folding hinge is fully engaged.
- NOTE. The folding mechanism will lock into place when the legs are fully extended.

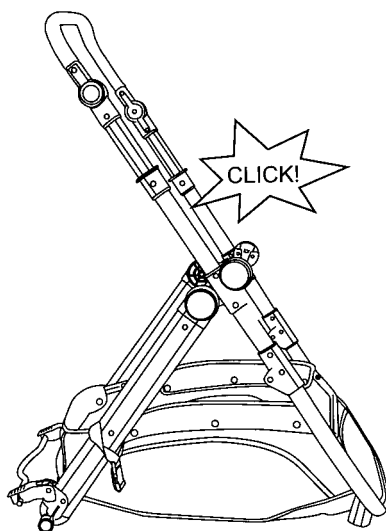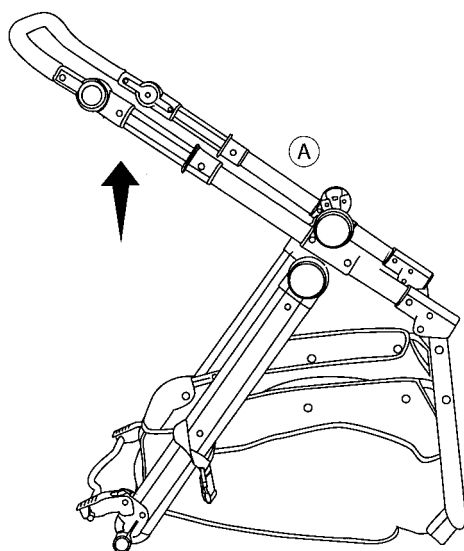


Assembly

2a. Lean the chassis backwards and push each front wheel (E) assembly into the front wheel housing until the lock into place.

NOTE. Pull on the wheel assembly to ensure that it is securely attached to the chassis.

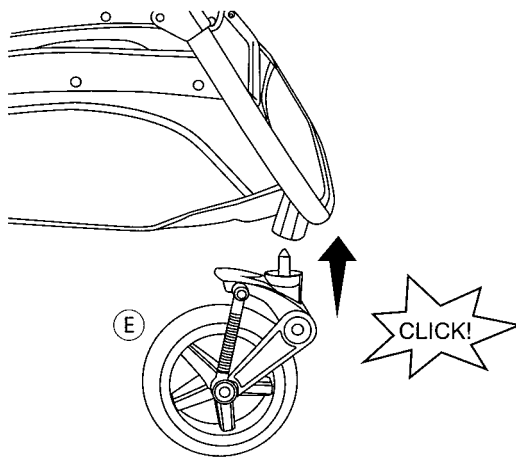


2b. To remove, push the release button on the side of the wheel hub and pull wheel from hub.

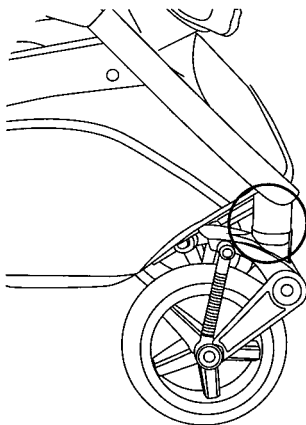


Assembly

3a. Lean the chassis forward and press the rear wheel (F) post into the rear frame hub until it “clicks” into place.

NOTE. Pull on the rear wheel to ensure that it is securely attached to the stroller.

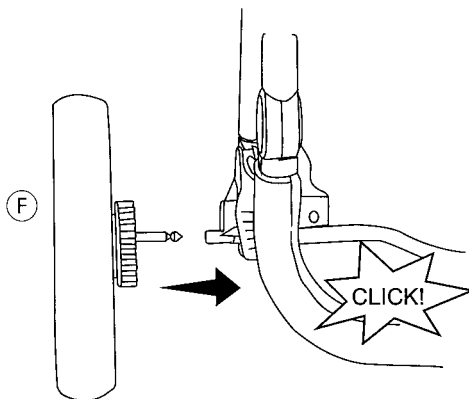


3b. To remove, push release button and pull wheel from hub.

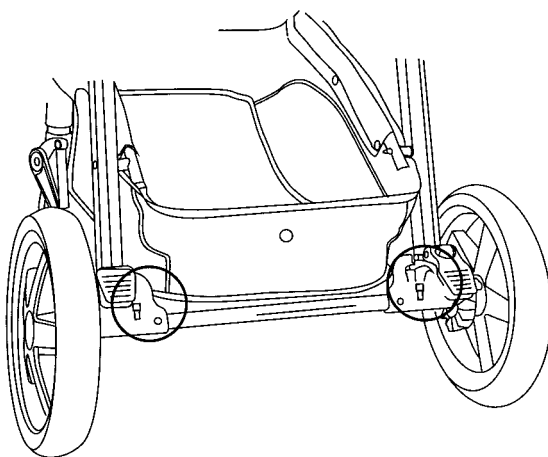

Assembly


4. Align the seat unit (B) with the anchors on the side of the chassis and push them together until they “click” securely.

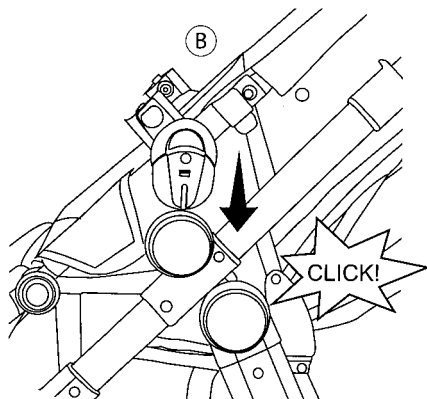

5. Attach the bumper bar (D) by aligning the anchors with the slots on the seat unit.


Push until the bumper bar “clicks” into place.

NOTE. The bumper bar must be securely attached before using this product.

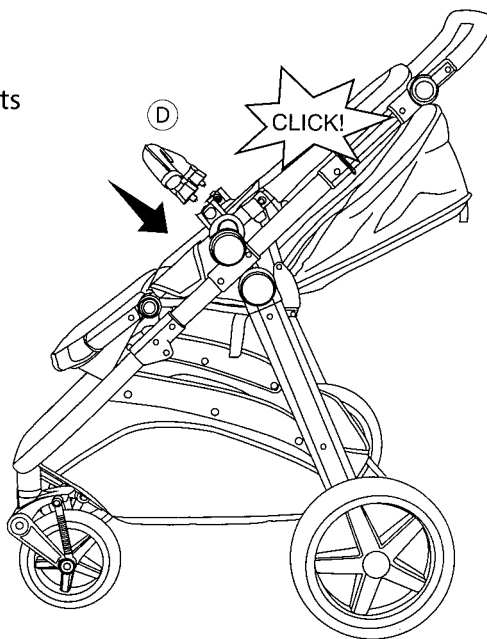



Assembly

6. Insert the canopy (C) clips into the slot located on each side of the seat unit. Push forward on the front edge of the canopy while holding the rear of the canopy in place.

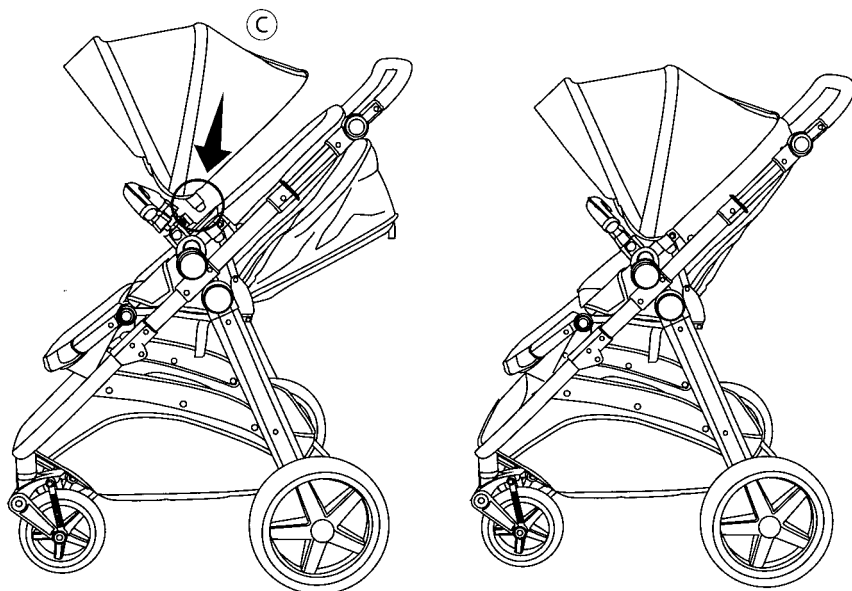

Reversible Seat Unit



The seat unit is reversible. It can be forward or parent facing.

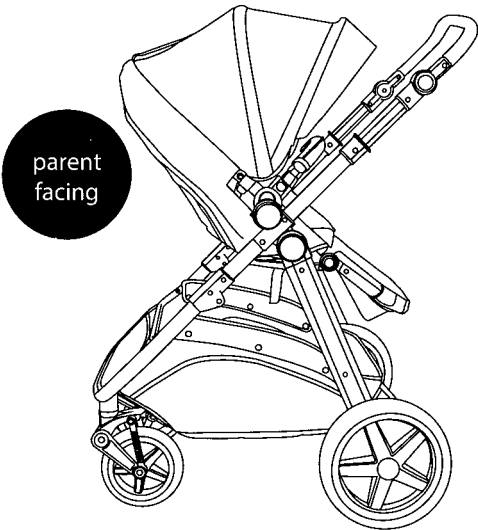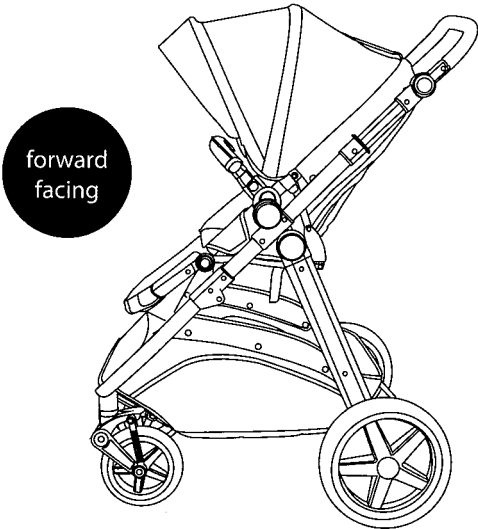

Backrest Adjustment


The seat can be adjusted into upright, half-reclined and reclined positions. Press the recline button on the rear of the seat unit and adjust the seat into the desired position.

NOTE. For the reclined position, make sure both footrest and backrest are unlocked and extend the seat fully.

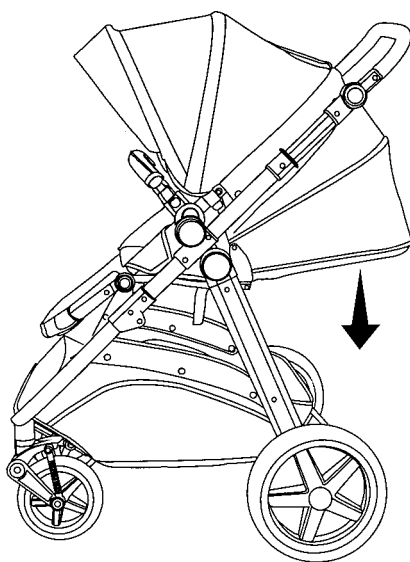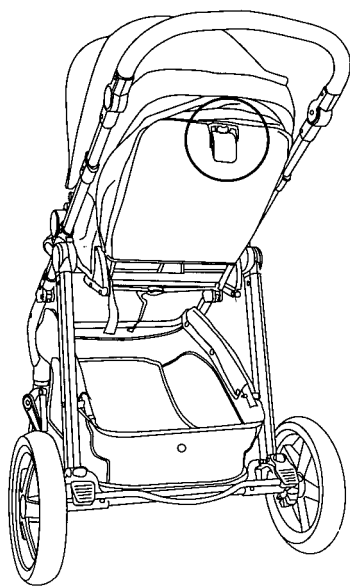

Footrest Adjustment


Press the buttons on both sides of the footrest support to adjust it up or down.

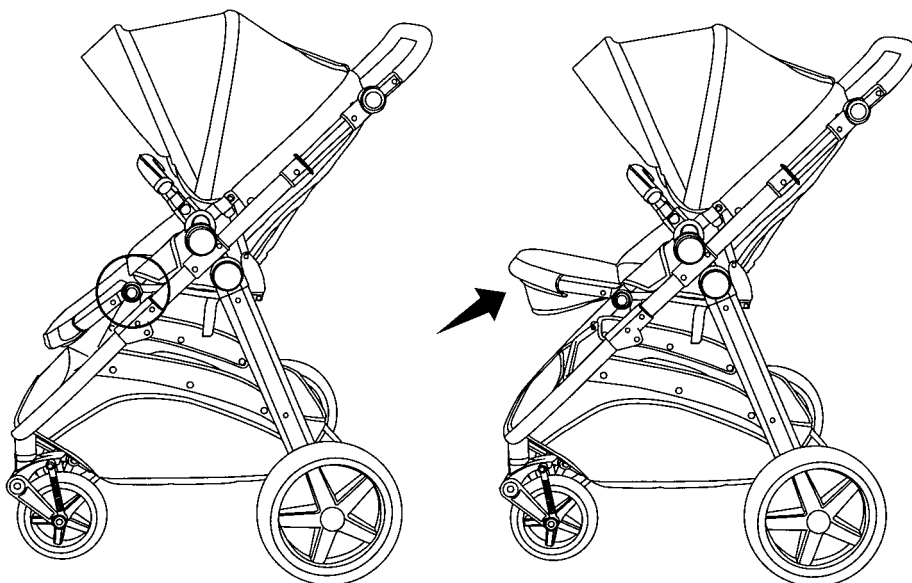

Handle Adjustment


Press the release buttons to move it up or down.

NOTE. Make sure the handle "clicks" into place before using.

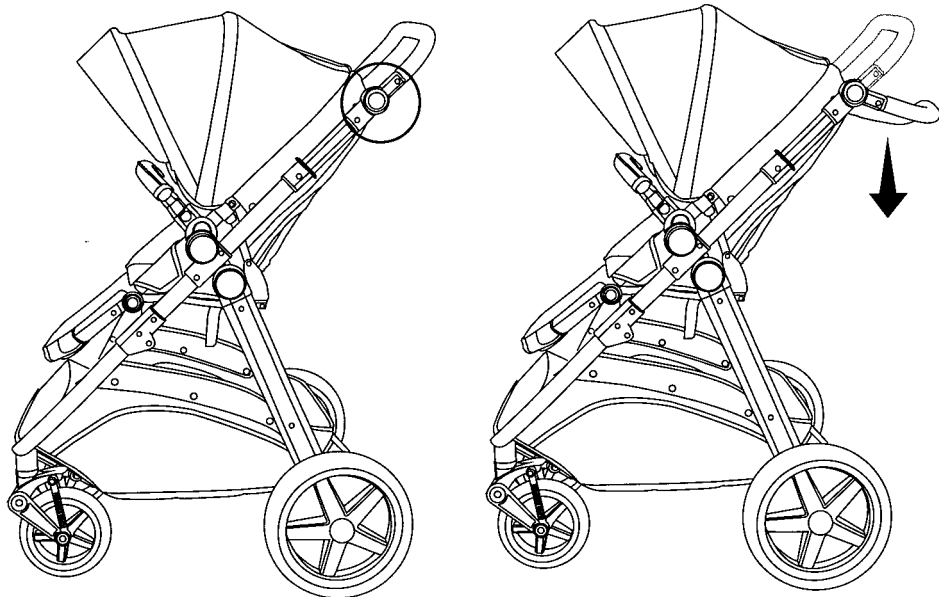

Swivel Wheels


The front wheels are equipped with a swivel locking device. Push the button on each wheel down to fix the locks and push upward to disengage the locks.

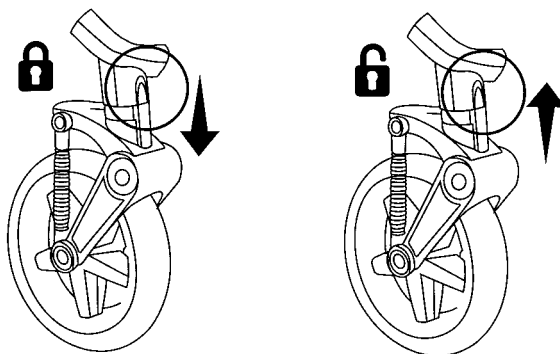

Brakes


To engage brakes, apply downward pressure to the brake lever located on the rear axle. Check that the stroller does not move once the brakes are properly applied.

To release, gently lift up on the brake lever.

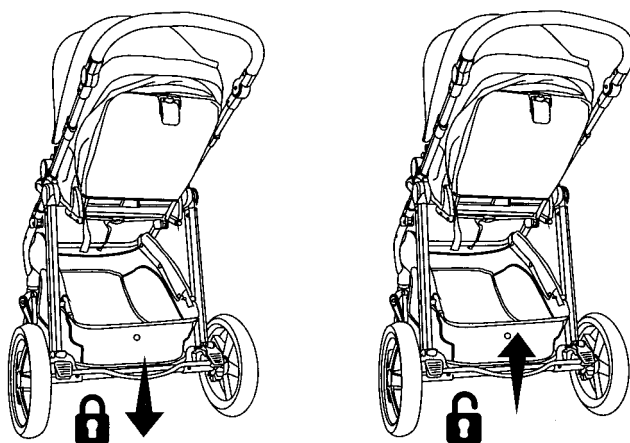


Harness

1. Slide the shoulder strap buckle onto the housing of the waist strap buckle. Repeat for the other side.
2. Insert the completed buckle into the buckle housing until it engages securely in place. Listen for the "click". Repeat for the opposite side.

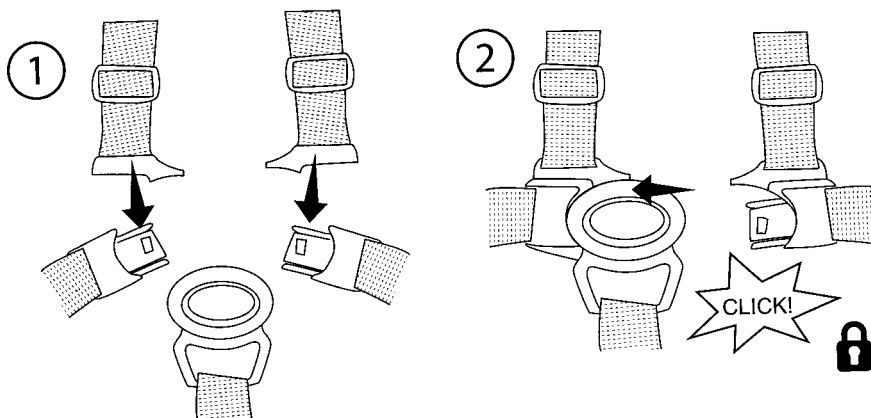

3. Press the centre button to release child from harness.

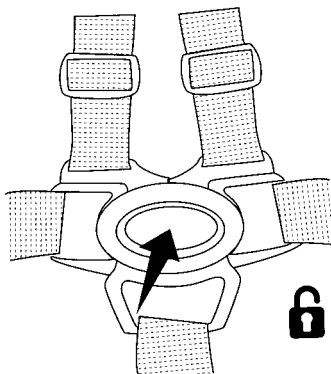

Harness


4. To adjust the harness, move the slides as shown.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

5. The stroller has 2 shoulder height positions.


WARNING! Always adjust the shoulder harness length according to baby height.

To adjust the shoulder height position, feed harness tabs through slot (a) in seat unit. Re-insert the harness tabs through slots at desired height (b). Pull out from front of seat.

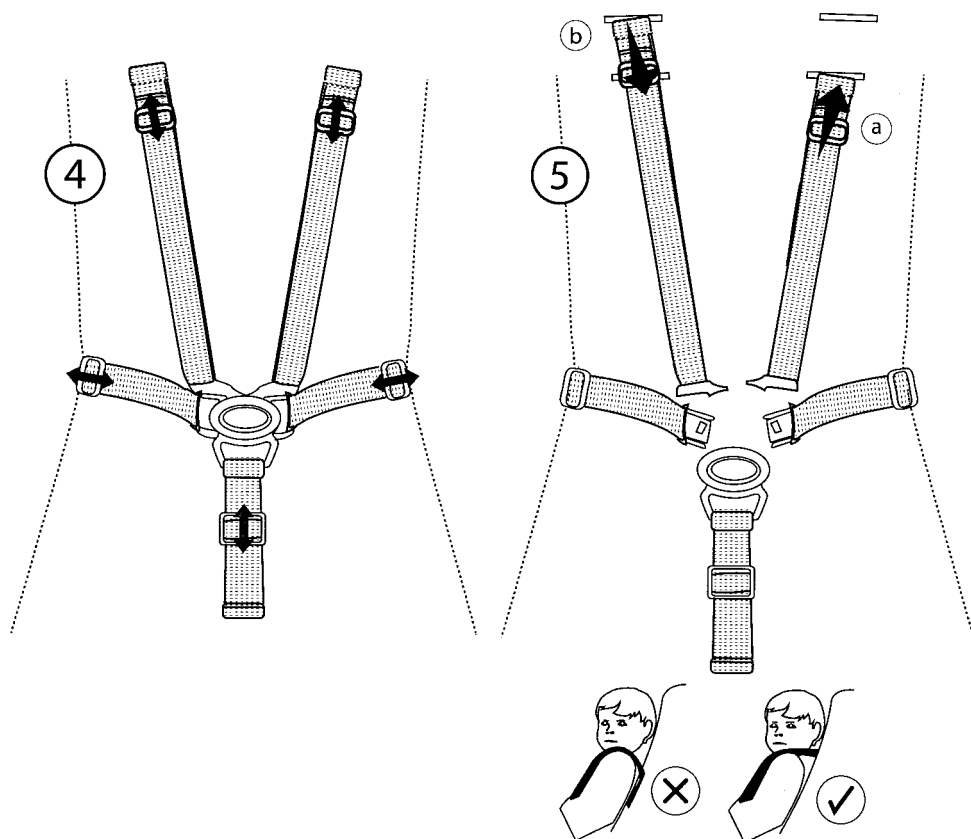


Folding

1. Fold the canopy and apply the brake.
2. Pull both release triggers and push the handle toward the floor.

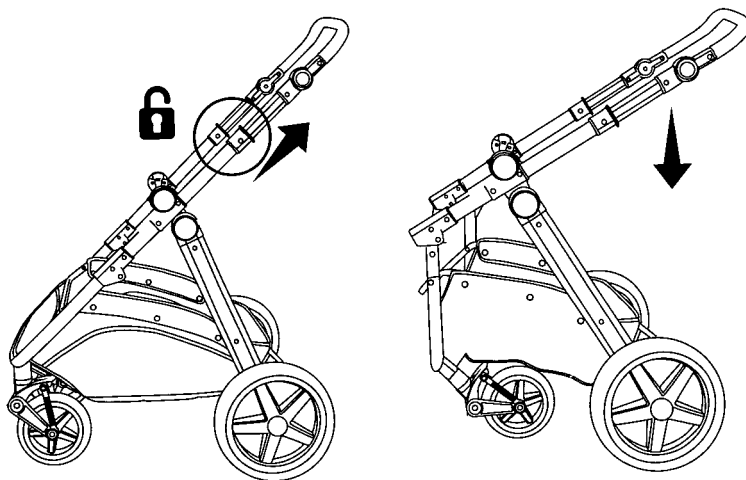

3. Make sure the front wheels lie flat, then secure the stroller in the folded position by locking the fold strap located on the right side of the stroller through the rear frame.

NOTE. The stroller cannot be folded in parent facing position.

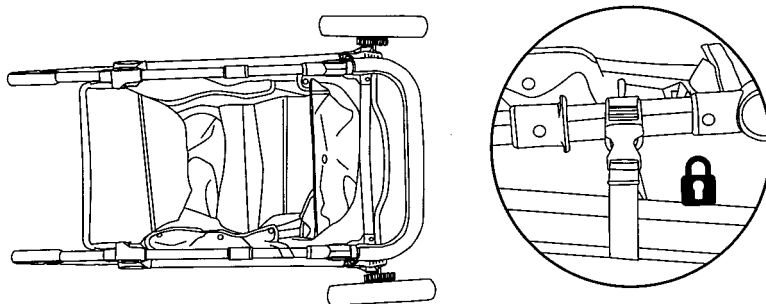

Care

Maintenance:

The product requires regular maintenance to ensure correct and safe performance.

Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.

Replace tyres if they are excessively worn.

Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.

If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.

The stroller should be serviced and reconditioned before using for a second baby, or within 18 months, whichever is sooner.

After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry place.

Do not leave in sunlight for prolonged periods as some fabrics may fade.

Cleaning:

Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. Wash separately. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.

Wipe clean plastics and metals with damp cloth.

Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.

Ensure the product is fully dry before use or storage.

Always ensure the product is stored in a dry place to prevent mold or mildew developing.

Due to variation in style and design the illustrations used in this instruction manual are generic.
Variation in design may occur in the images shown.



Supplied by Baby Factory NZ. Ltd.
58 Stonedon Drive, East Tamaki, Auckland, New Zealand

www.babyfactory.co.nz