


Edinburgh

# 3 Wheel Pathfinder Stroller

## Instruction Manual

Up to 15kg or 4 years  
whichever comes first

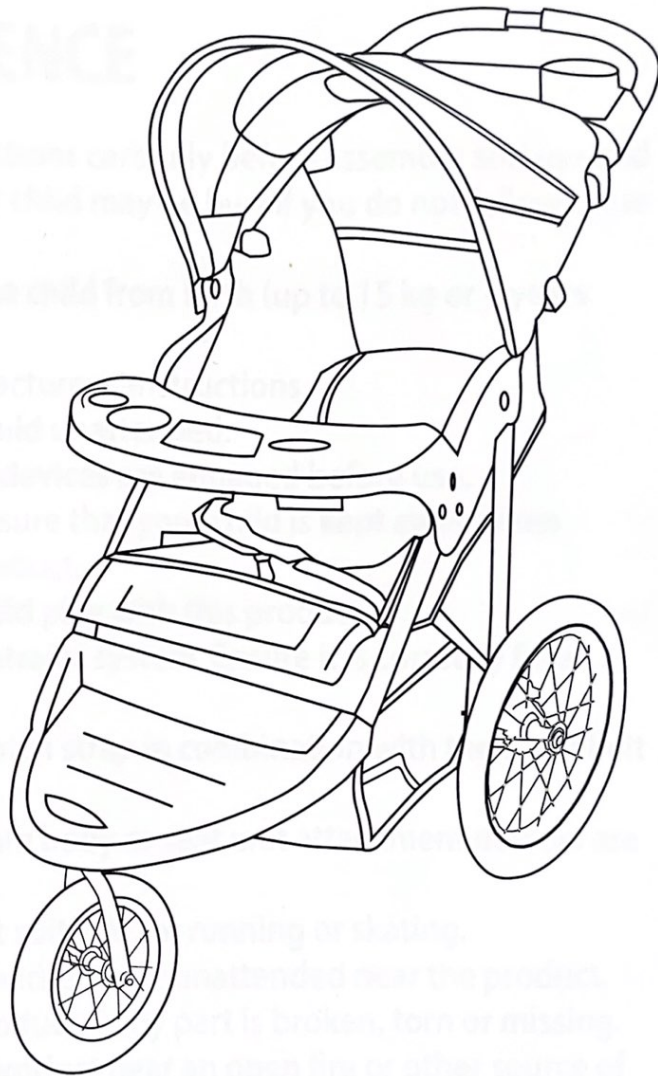

**IMPORTANT:  
READ CAREFULLY AND KEEP FOR  
FUTURE REFERENCE**

# Safety

---



## **IMPORTANT:**

# **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

**WARNING!** Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

This product is suitable for one child from birth (up to 15 kg or 4 years whichever comes first).

**WARNING!** Follow the manufacturer's instructions.

**WARNING!** Never leave the child unattended.

**WARNING!** Ensure all locking devices are engaged before use.

**WARNING!** To avoid injury ensure that your child is kept away when unfolding and folding this product.

**WARNING!** Do not let your child play with this product.

**WARNING!** Always use the restraint system. Ensure it is correctly fitted at all times.

**WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.

**WARNING!** Check that the pram body or seat unit attachment devices are correctly engaged before use.

**WARNING!** This product is not suitable for running or skating.

**WARNING!** Do not let other children play unattended near the product.

**WARNING!** Do not use this product if any part is broken, torn or missing.

**WARNING!** Do not place the product near an open fire or other source of strong heat.

- Adult assembly is required.
  - Ensure that the parking brake is engaged during the loading and unloading of children.
-

# Safety

---

- The basket can carry a maximum load of 5kg.
- Use the most reclined position for new born babies.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides will affect the stability of the product.
- Do not overload the stroller with additional children, goods or accessories.
- Always apply the parking brake when the stroller is stationary.
- Take care when going up or down kerbs.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.
- Keep the plastic packaging away from children to avoid danger of suffocation.
- Take extra care in windy conditions.
- Remove your child and fold the stroller when going up or down stairs or escalators.
- Do not use this stroller near an open fire or exposed flame.
- To prevent damage, always remove a raincover before folding the stroller.
- Do not place anything on top of the raincover.
- Never leave a raincover, hood or apron on the product indoors, in a hot atmosphere or near a heat source, as the child may overheat.

**This product conforms to EN 1888-2:2018**

# Maintenance

---


- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Replace tyres if they are excessively worn.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- Your pram should be serviced and reconditioned before using for a second baby, or within 18 months, whichever is sooner.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.

# Cleaning


---

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. Wash separately. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean.
- Wipe clean plastics and metals with damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

**Parts:**

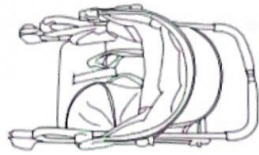


Stroller

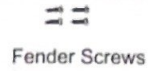

Fender Screws



Parent Tray

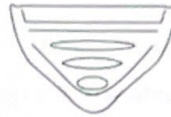

Fender



tray



Front Wheel



Rear Wheels

**Assembly:**

**IMPORTANT!**To ensure safe operation of your stroller, please follow these instructions carefully. Please keep this instruction manual for future reference.

**IMPORTANT!**Before assembly and each use, inspect this product for damage hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

**IMPORTANT!**Adult assembly is required.

Remove stroller from box. The front wheel, rear wheels, fender and parent tray need to be installed prior to use.

## Front wheel

To attach the front wheel, unfold stroller as described in the section following:

1, Lean the stroller backwards so that it rests on the handle and rear axle frame and the front wheel forks are pointing upward (Fig.1).



Fig.1

2, The front wheel features a quick release attachment system. The quick release must be open enough for the wheel to slide on the forks. Rotate the lever forward to loosen one side (Fig.2a) and loosen the finger nut on the other side (Fig.2b).

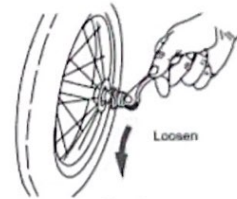


Fig. 2a




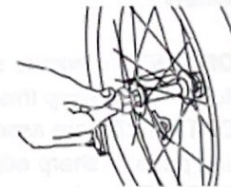


Fig. 2b

3, Slide the front wheel onto the front forks.(Fig.3a) Make sure the front forks are in the position as shown on Fig.3b.

Line up the tab on the Retainer Plate with the Slot on both sides of the forks. (Fig.3c).

**IMPORTANT!**The tab on the retainer plate must be lined up with the slot before tightening the wheel.

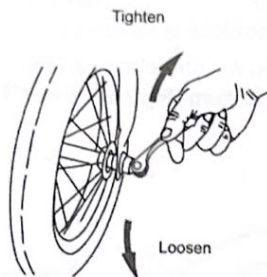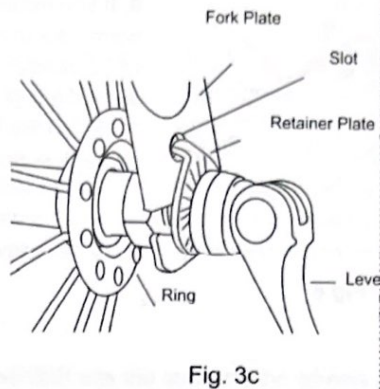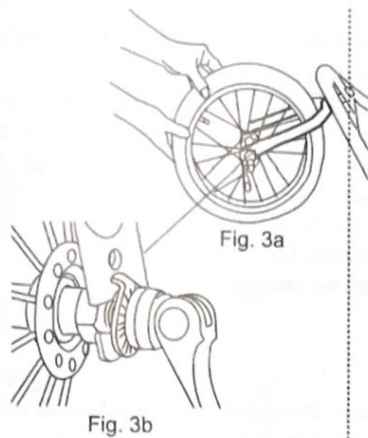

4, With the wheel in position, tighten the finger nut on the axle until it is very close to contacting the fork and rotate the lever to tighten it as shown in Fig.4.

Fig. 4

**WARNING!** Always make sure the lever is in close position before use. Leaving the lever in open position can cause the wheel to fall off.


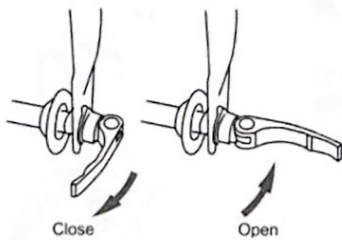


Fig. 5

5, Close the lever ( Fig.5 ) and you should feel significant resistance and the wheel should be held tightly.If you do not, open the lever and tighten the finger nut a bit more and close the lever again.Continue to do this until the wheel is held tightly in the fork.**DO NOT OVER TIGHTEN.**

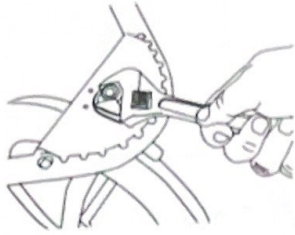


6, If you experience front wheel wobble that is beyond what is normal for use walking or jogging you may have to adjust the front wheel housing nut. This nut is located under the footrest located at the front of the jogger. You can use a standard crescent wrench to tighten the nut. **DO NOT OVER TIGHTEN** this can cause damage to the wheel housing (Fig.6).

Fig.6


### 7, Fender:

To secure the fender to the frame, use the 4 screws provided.

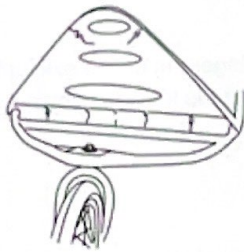


Examine the bottom of the front fender. You will notice four ¼ inch diameter plastic tubes protruding from the bottom (Fig.7a).

Fig.7a

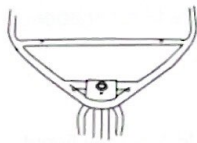


These tubes must be lined up with the holes in the front frame assembly (Fig.7b).

Fig. 7b

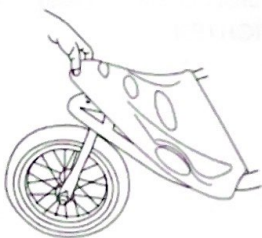

Line up the front fender and press onto the front frame assembly, (Fig.7c).


Fig. 7c

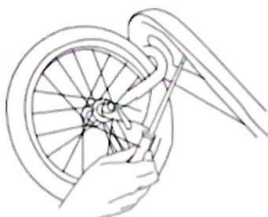

Insert the 4 screws through the underside of the front frame assembly into the front fender's plastic tubes. Tighten the screws only until snug (Fig.7d). **DO NOT OVER TIGHTEN.**

Fig. 7d

## 8, Rear wheel:

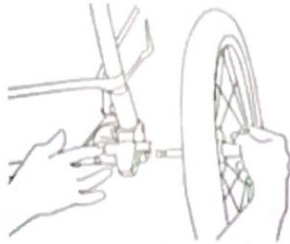


Lean the stroller forward to rest on the front wheel. To attach the rear wheel, push each wheel's axle into the plastic corner fitting as shown in Fig.8. Depress the metal lever on the inside of the corner fitting as you push the axle into corner fitting. When the wheel will not go on any further, release the lever. Check that the wheel has locked into the corner fitting by pulling on the wheel. If not locked, lift upward on the lever, push the wheel on further and release lever.

Fig.8

Ensure that the wheels are firmly locked into place. NEVER use the stroller if the wheels are not locked into place. Please contact our customer service immediately.

**WARNING!** Do not place hot liquids or more than 1.5kg in the parent tray. Serious burn or unstable conditions could result.

## 9, Parent tray:

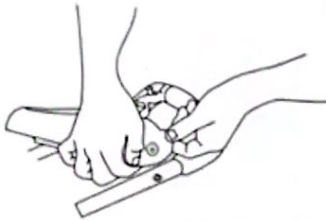

To attach the parent tray, align the fittings on the ends of the parent tray with the fittings on the outsides of the handle. Hook the hole in the parent tray. Pull outward on the opposite end while pushing down on the tray until locked onto the stroller handle. Please be careful not to pinch your fingers when installing the parent tray. (Fig.9). To remove the parent tray, pull outward on one end of the tray while lifting upward.

Fig.9

## 10, Canopy

To open the canopy; push forward on the front edge of the canopy while holding the rear of the canopy in place (Fig.10).



Fig. 10

## 11, Fold the canopy:

Pull backwards on the front edge (Fig.11).



Fig. 11

**WARNING!** Always set brakes when the stroller is not being pushed so that the stroller will not roll away. NEVER leave your stroller unattended on a hill or incline as the stroller may slide down the hill.

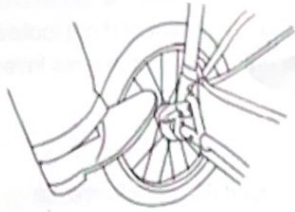


Fig. 19

### 19, Brake

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller might require slight forward and rearward movement in order to line up the teeth on the brake with each wheel brake cluster (Fig. 19). Check the stroller will not move and that both brakes are properly applied. To release, gently lift up on the brake lever.

**FIGYELEM!** Always lock the front swivel wheel in STRAIGHT position before placing or removing your children from the jogger.

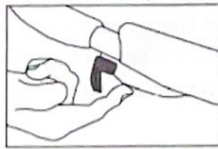


Fig. 20a

### 20, Front wheel

The swivel jogger is equipped with a front wheel locking device. Fig. 20a is a remote release lever located under the right side handle. Pull to disengage the wheel and push to engage the locking device located under the footrest. Fig. 20b. the front wheel lock works in a vertical motion from top to the bottom, locking and unlocking the wheel.


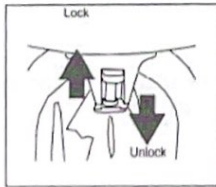


Fig. 20b




**WARNING!** Avoid serious injury from falling or sliding out. Always use the safety harness.

The shoulder straps of the 5- point harness have 2 attachment position. Select the position that places the shoulder strap level with, or below the top of the child's shoulder.

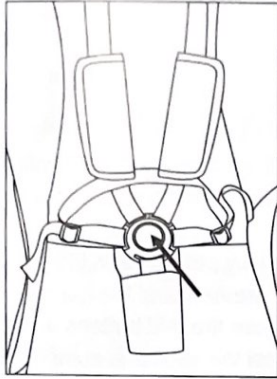

Press the button to open the buckle.

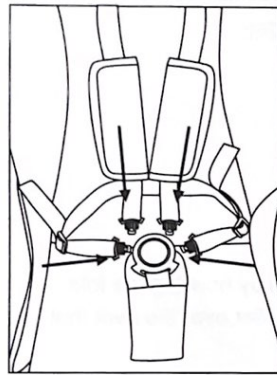

To secure your child, slide the hip and shoulder straps into the centre buckle until they engage.

Fig.22

### 23, Seatback positioning

The seat has a multiple position recline that is controlled by a strap and buckle assembly behind the seat Fig.23a. To recline the seat, loosen the strap through the buckle and adjust to the required recline position, Fig.23b. To place the seat back in a more upright position, press upward on the seat back with one hand while pulling the strap through the buckle with the other. The strap will lock automatically.



Fig.23a

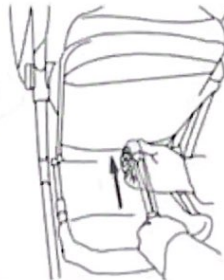


Fig.23b

## 25, Tyres

The tyres should be inflated on a regular basis to between 20 to 25 pounds of air pressure. Always use a bicycle style hand air pump to inflate the tyres.

## 26, Fold the stroller

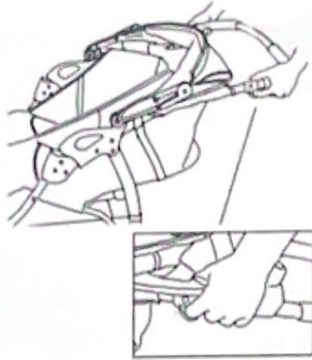


Fig.26a

Close the canopy as described in the canopy section. Recline seat by releasing buckle as described in seatback positioning section.

The stroller is folded by simultaneously pulling each trigger fold, Fig 26a. When the fold latches are released, the handle will begin to fall towards the floor. Release the fold buttons and press downward on the stroller handle until the stroller is completely folded. Secure the stroller in the folded position by hooking the fold latch, located on the right side of the stroller, over the rivet that protrudes from the frame Fig.26b.



Fig.26b

Secure the stroller in the folded position by hooking the fold latch, located on the right side of the stroller, over the rivet that protrudes from the frame Fig.26b.

**WARNING!** Care must be taken when folding the stroller to prevent finger entrapment.



Fig. 27a

### 27, To unfold stroller

Stand the stroller on the ground with all three wheels touching the ground. Release the folding latch, which is located on the right side ( Fig.27a)

Lift up on the stroller handle with both hands until the stroller frame is erected and locked in the open position (Fig.27b.)

The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.


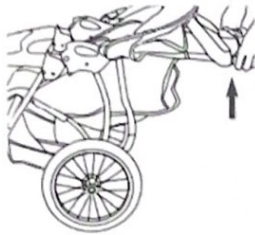


Fig. 27b

Due to variation in style and design the illustrations used in this instruction manual are generic.  
Variation in design may occur in the images shown.

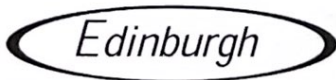

Supplied by  
**Baby Factory (nz) Ltd.**

58 Stonedon Drive, East Tamaki, Auckland, 2013 NZ  
09 274 4986  
[www.babyfactory.co.nz](http://www.babyfactory.co.nz)  
[customerservices@babyfactory.co.nz](mailto:customerservices@babyfactory.co.nz)