

MAINTENANCE

- This stroller requires regular maintenance by the user.
- Regular lubrication of moving parts will extend the life of your stroller and make opening and folding easier.
- Check your stroller regularly. If any parts, like bolts, screws, fabric pieces or stitching are found to be loose, broken or damaged, always repair or replace them.
- Regularly inspect the locking devices, brakes, wheels, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order. These should be free to move at all times.
- Brakes, wheels and tyres are subject to wear and should be replaced if necessary.
- Do not leave the stroller in sunlight for prolonged periods—some fabrics may fade.
- Where damage or dysfunction occurs, stop using the stroller.

CLEANING

- Plastic and metal parts may be sponged clean with warm water and a mild detergent.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- Storing a damp stroller will encourage mildew to form.
- Dry thoroughly before storing.
- After exposure to damp conditions, dry off with a soft cloth, open fully and allow to the air.

Distributed by:
Baby Factory (NZ) Ltd
58 Stonedon Dr
East Tamaki
Auckland 2013 New Zealand
www.babyfactory.co.nz

Edinburgh Promenade Twin Stroller

Instruction Booklet



Keep this booklet in a safe place for future reference

Note: Colour and features of product may differ from the diagrams shown

WARNING

For the safety of the child, read the following warnings and keep them for the further reference:

- Do not leave the child unsupervised in the stroller.
- It may be dangerous to leave your child unattended.
- This stroller recline seat is suitable for children 6–36 months.
- This seat is not suitable for children under 6 months.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch strap in combination with the waist belt.
- Ensure your child wears a correctly fitted and adjusted harness at all times.
- This stroller is intended for children up to maximum weight 15kg. per child
- Don't use the stroller on the stairs or on the escalator.
- Put on all the brakes whenever you park stroller.
- Ensure stroller is completely erected and check all locks are engaged before placing a child in the stroller.
- Do not overload this stroller with additional children, goods or accessories bags and other items.
- Do not hang bags from handles as this may cause the stroller to become unstable.
- Before making adjustments to stroller ensure that child's body is clear of any moving parts.
- This stroller is not suitable for running or skating.
- The parking device shall be engaged during the loading and unloading of child.
- Do not allow your child to climb unassisted into the stroller.

FOOTREST ADJUSTMENT



 
To change the footrest position press the two locks under the footrest and adjust it to the required position.

SAFETY HARNESS




Fasten the harness with the buckle❶
Adjust the strap length with
the adjustment slides❷

- Ensure that all the locking devices are engaged before use.
- Do not overload this stroller with additional children, goods or accessories. Bags and other items must not be hung from the handle. A basket is approved for the carriage of 3kg (6.61lb) of goods, evenly distributed.
- A pocket on the rear canopy is approved for the carriage of 0.2kg (0.441lb) of goods, evenly distributed.
- Keep away from fire.

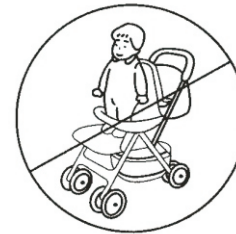


PARTLIST

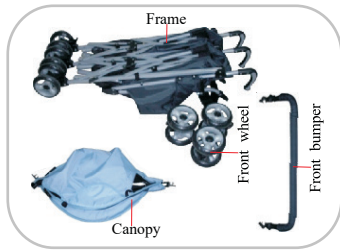 

1. Frame*1
2. Front wheel*3
3. Front bumper*1
4. Canopy*1

 UNFOLDING THE STROLLER

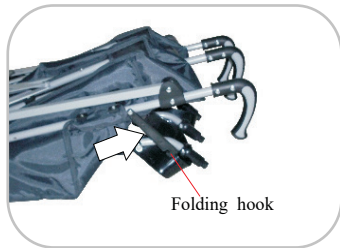

Release the catch of the folding hook.



Open the frame, and step on the two safety lock in the backrest until hear each side “click”.
This indicates the assembling is complete.

SWIVEL WHEEL OPERATION



Lift the locking arm to lock the swivel wheels for forward movement.



Press the locking arm down to release the swivel wheel lock.



ATTENTION:
Before moving backwards the swivel wheels must be released!!!
Failure to follow the rules of swivel wheel operation may cause mechanical damage to the wheel system, which will not be covered by the guarantee.

MOUNTING THE WHEELS



FRONT WHEELS:

Put the front wheel set on the hub (plastic tip of the tube) until you hear the locking device click.

Repeat the same procedure on the other side.

DISMANTLING THE WHEELS

 


FRONT WHEELS:

To detach the front wheels press the locking device sticking out at the bottom of the wheel set and pull the wheel set until it slides off of the hub.


Repeat the same procedure on the other side.

OPERATE THE PARKING DEVICE

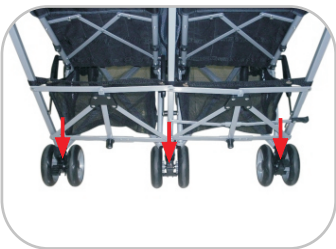


NOTE: Verify that the parking device is fully engaged by attempting to move stroller forward and backward.

 LOCK: Press the left/right lever downward.

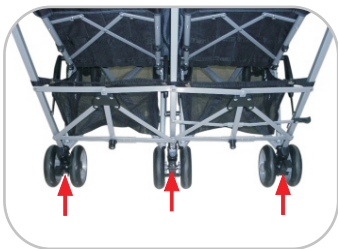

RELEASE: Lift the lever up until the parking device released.

 FOLDING THE STROLLER

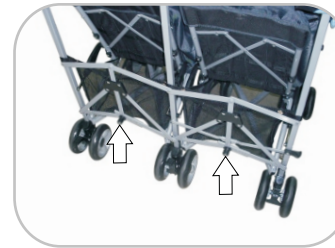


Dismantling the front bumper and canopy lift the two safety locks by foot.



Press the folding mechanism lock on left side of stroller.



 Fold the stroller down completely.

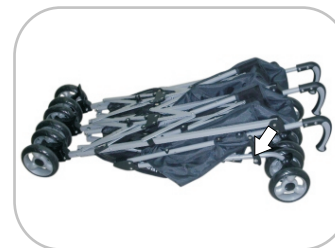

Lock the folding hook.

MOUNTING THE HOOD



Place the canopy ahead then insert the plastic connector in both sides of canopy into the frame.

HOOD OPERATION



The hood should be unfolded by means of the plastic expanders.

To unfold the hood press the expanders from above until the hood fully opens and the expanders are engaged.



To fold the hood, release the expanders first, pulling them up and then fold the hood.

DISMANTLING THE BUMPER BAR



Loose the bumper connector in both sides of front leg tube, then you can dismantle the bumper bar.

BUMPER BAR OPERATION



Press the button on both sides of bumper, it would be adjusted up and down.

BACKREST ADJUSTMENT



The backrest may be adjusted in five positions.

To change its position press the backrest mechanism locks on both sides and adjust the backrest to the required position.