


CATALOGUE

	03	USAGE
		3.1 Install position of the child seat in vehicle
		3.2 Adjust the headrest
		3.3 Checking the shoulder strap height 11
		3.4 Usage of buckle
01	PRODUCT OVERVIEW 01-04	3.5 Adjust the length of harness 13
		3.6 Adjust the ISOFIX attachments 14
		3.7 One click adjustment method:
		rotation & adjust gear 15
	SAFETY WARNING 05-08	3.8 Adjust method of top tether 16

04	INSTALLATION	
0.	4.1 Installed rearward-facing (Height 40-	19-20
		21-22
	4.3 Installed forward-facing (Height:100-150: 50)	23-26
05	5.1 Daily mainlenance 5.2 Washing instruction	28 28
	5.3 Remove and assemble the fabric cover	29
06	THE MAIN TECHNICAL PARAMETERS	32

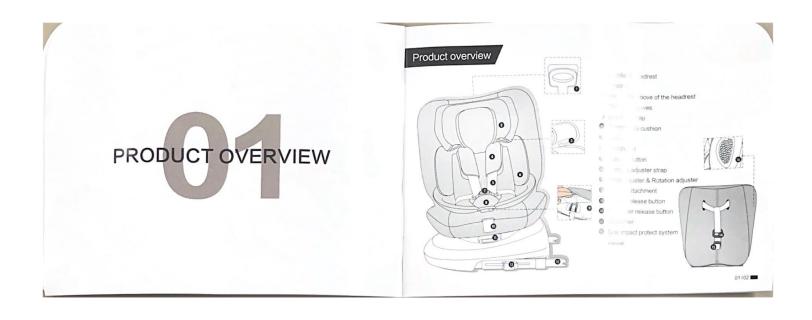

NOTICE

I-SIZE ECRS NOTICE

This is an i-Size Enhanced Child Restraint System.It is approved according ICLIN Regulation No.129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual.

friedurers at the second of th

"I - SIZE BOOSTER SEAT " NOTICE

This is a i - Size booster seat Enhanced Child Restraint System. It is approved according to UNRegulation No. 129, for use primarily in " i - Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

- * DO NOT use forward facing before the child's and state 15 months.
- * Do not to use the ECRS in seating positions whe installed, death or serious injury may occur.

active frontal airbag









03104



Safety warning

* In order to ensure the safety of your child, please readangerous situations!

ant instructions carefully to avoid

Understand the product

This is a height of 40-150cm product, sun-

children from 0-36KG.

40-105CM

76-106CM

100-150CM Forward-facing position F-1234

ISOFIX+Top tether + 5-point belt

ISOFIX+Top tether + 5-point belt

* DO NOT use forward facing before the child's age exceeds 15 months.

Precautions for produ

- o This product can be rearward-facing us. on with a height of 40-105cm (Weie 0-18kg), using ISOFIX +Top tether to fix the child restraint system
- o This product can also be forward-facing used by a point safety system for children a height of 76-105cm (Weight: 9-18kg), using ISOFIX+Top tether child restraint system;
- o. This product can also be forward-facing used for children with a height of 100-150cm Veight: 15-36kg), using adult three-point belt to fix the child restrain arm, or using ISOFIX and adult three and belt together to fix the child restraint system;
- o Do not use any load bearing contact points and than those described in the instructions and marked in the child restraint when in 100-150cm;
- O Please keep for future reference, a storage or gradient for the instructions is located as the back of the child seat
- O Do not use this child seat, at home. It has not been designed for home use and should only be used in your car;
- Do not use rearward facing child seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur;
- O For the reason of safety, the child seat must be fixed inside the vehicle using ISOFIX anchorages even if you do not put your child inside the child seat:
- O The rigid items and plastic parts of a child seal shall be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle;

- Any straps holding the restraint to the vehicle should be tight
- Any straps restraining the child should be adjusted to the or
- o Straps should not be twisted;
- Ensure that any lap strap is worn low down, so that the pelv-
- o The device should be replaced when it has been subject to $\boldsymbol{\psi}$ ses in an accident;
- the approval of the Type Approval Authorio It's dangerous to make any alterations or additions to the deve led by the manufacturer
- ty, also dangerous not to follow closely the installation instruestraint should be kept away from sunlight, When the child restraint is not provided with a textile cover, I
- otherwise it may be too hot for the child's skin;

 
aged, shall be stressed;

- Don't leave your child in the device unaftended;
- Any luggage or other object liable to cause injuries in the event of addision shall be properly secured;
- The ECRS shall not be used without the cover;
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance;
- The instructions shall be retained on the device for its life period or in the vehicle handbook in the case of built-in restraints :
- The user shall also be referred to the vehicle manufacturer's handbook;
- Never use a second-hand product, as you can never be certain what was happened to it.











- ? Not to use in seating positions where an active frontal airbag is installed.
- Only use on this seat if ISOFIX anchorages are fitted

3 2 Adjust the headrest



 As shown in the picture, you can adjust the headrest up and down by pulling on the headrest adjustment tab 0, and adjust the headrest to a position suitable for the child's head.

3.3 Checking the shoulder strap height









 Always check that the shoulder straps • are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

3.4 Usage of buckle



and the right pieces of buckle

insert the two pieces into the slot of the Juckle At the same time, hearing "click" me the buckle gets stuck, pull the pieces of the buckle and check whether the buckle is locked correctly.

Buckle@(sketch map)

* If you want to release the safety belts, it needs to press the red button, then the pieces pop up.

3.5 Adjust the length of harness



Loosen the hamess •


The harness can be slackened by pressing the adjuster(under the seat cover •) on the front of the seat. Press down the adjuster as you grip the two harness with your another hand. Pull the harness towards you to loosen the harness.



- Tighten the harness Pull the harness upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness is fully
- * The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.

 * Check the harness adjuster and tighten each time when
- the child is placed in the seat.

3.6 Adjust the ISOFIX attachments

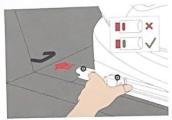

- The ISOFIX attachments can be adjusted for many positions to fit the different positions of ISOFIX @ low anchorages expending from car
- Press down the release button

 to adjust

 ISOFIX attachment of both sides to the longest. Snap the ISOFIX into the ISOFIX Anchor points, Make sure that you have heared a "click" and the ISOFIX latching indication shows GREEN.
- If you want to release the ISOFIX attachments, just installation of the ISOFIX attachments is finished.
- Push the red release button of the ISOFIX chuck at the direction as shown, the ISOFIX chuck will be released.





* After installed the ISOFIX chuck, push the child restraint forwards until it is tight against the car seal. Now, the ISOFIX base is installed in place.

3.7 One click adjustment method: rotation & adjust gear

Pull back and forth to adjust the child seat to gear F1/F2/F3/F4.



Rotate left and right, adjust the child seat to forward-facing (height: 76–105cm) or rearward-facing (height: 40–105cm). When the child seat is rearward-facing, it can also adjust to gear R1/R2/R3/R4.



3.8 Adjust method of top tether





Velcro (see 1);






 Cacondly, press and hold the button of the tather adjuster (see 2) and release the top tother to the appropriate length (see 3);

 


- Thirdly, hang the top tether connector to the top tether anchorage which recommended in the vehicle user manual;
- Finally, tighten the top tether until the adjustment indicator shows green.

151161



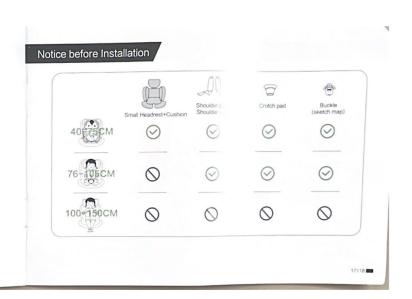





Push ISOFIX on both sides of the base and clip it into the ISOFIX Anchor points. When a "click" is heard, the ISOFIX release button is displayed in green color(),



Usage: ISOFIX+Top tether Height: 40-105cm



Put the child in the safety seat, and lock the buckle $oldsymbol{0}$, tighten the front tether $oldsymbol{0}$.

Number w, suprisen time from temper ©.

On the premise of not causing disconfort to children, sighten the shoulder belt as much as possible.

The crotch strap should be as tow as possible and should be located close to the crotch, not the addorser.

To ensure the comfort of your child, the safety belt must not be bristed.



 
Turn the rotation adjuster \blacksquare and adjust the 90 $^\circ$ hover state to rearward-facing. The vehicle can only drive after hearing the "click" sound.

Pay attention!! Do not drive when the safety seat in the location of 90° hover.



Pull out the top tether strap to a suitable length, and then fix the top tether hook to the top tether anchorage of the car seat

19120





Usage: ISOFIX+Top tether

Height: 76-105cm



Push ISOFIX on both sides of the base and clip it into the ISOFIX Anchor points. When a "click" is heard, the ISOFIX release button (s) is displayed in green color().



Step 2/

Put the child in the safety seat, and lock the

buckle **②**, tighten the front tether **③**.

DUCKEE • alignment time from returner •.

"On the premise of not causing disconfirst to children, tighten the shoulder belt as much as possible." "The criterts rises phould be as low as possible and should be located close to the crotch, not the abdomen. "To ensure the comfort of your child, the safety belt must not be beinded.



Step 3/ Pull out the top tether strap to a suitable length, and then fix the top tether hook to the top tether

anchorage of the car seat

 
4.3 Installed forward-facing



Usage: ① ISOFIX + 3 point belt Height: 100-150cm

- o Push ISOFIX on both sides of the base and clip it into the ISOFIX Anchor points. When a "click" is heard, the ISOFIX release button
- (3) is displayed in green color.
- o Put the child into the safety seat, adjust the headrest up and down according to the height of child.
- Pull out the adult 3-point belt, Clip the vehicle shoulder belt into the belt guide hook of 9the headrest, and then clip vehicle shoulder and lap belt together into the belt guide slot on the side of the seat, finally lock the buckle.







- · Put the child into the safety seat, adjust the headrest up and down according to the height of child.
- o Pull out the adult 3-point belt, Clip the vehicle shoulder belt into the belt guide hook of 6the headrest, and then clip vehicle shoulder and lap belt together into the belt guide slot on the side of the seat, finally lock the buckle.









5.1 Daily maintenance

- o In daily use, check periodically the child seat. The
- o Please keep this child seat in dry and ventilated a to avoid np moldy.
- o If the child seat becomes dusty,clean the seat be and the projectes by swiping them with a damp sponge and let it dry under ambiance.
- o If food or drink drop accidently on the buckle, discounties the coat belt from the child seat and rinse it gently by warm water. Leave it dry under ambiar.
- For cleaning the entire child seat fabric cover,plus a refer to the 5.2 washing instruction.

5.2 Washing instruction




Handwash,water temperature below 30 ℃ Do not bleach



Dryclean, any solvent except trichloroethylene.



X Donot tumble dry Donot iron

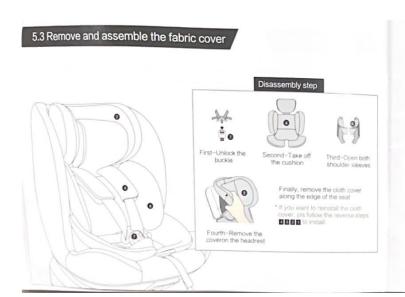



27 (28





- O Distance from front to back of the seat:535mm
- O Distance form left to right of the seat:440mm
- Height of the seat:600mm

Distributed by Baby Factory (NZ) Ltd www.babyfactory.co.nz

