 


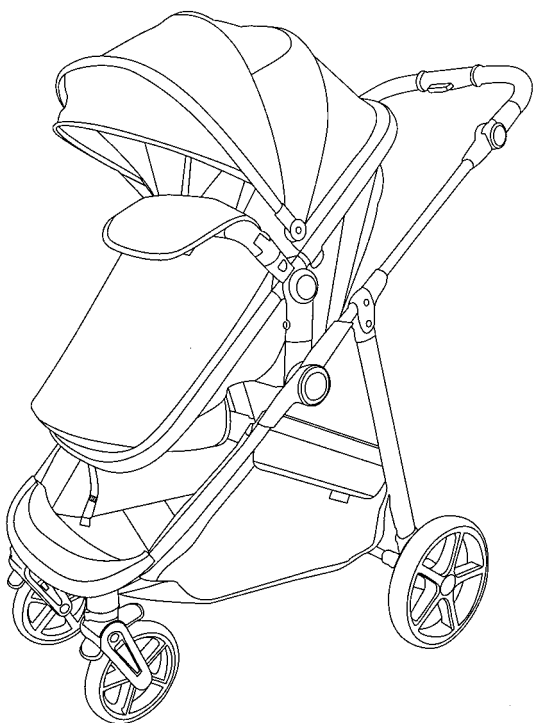

Excursion

i-Size Travel System Instruction Manual



**IMPORTANT:
READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE**

Safety



IMPORTANT:

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instructions.

Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

WARNING! This product is suitable for one child from birth (max. weight 15kg).

WARNING! Suitable from birth in pram mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.

WARNING! Not suitable for children under 6 months in pushchair mode.

WARNING! Follow suitability recommendations given in the separate infant car seat instruction manual.

WARNING! Never leave the child unattended.

WARNING! Ensure all locking devices are engaged before use.

WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING! Do not let your child play with this product.

WARNING! ALWAYS USE THE HARNESS AS SOON AS YOUR CHILD CAN SIT UNAIDED.

WARNING! Always use the crotch strap in combination with the waist belt section of the harness.

WARNING! Check that the pram body or seat unit attachment devices are correctly engaged before use.

WARNING! This product is not suitable for running or skating.

WARNING! Do not let other children play or hang on the product.










Safety

WARNING! Do not use this product if any part is broken, torn or missing.
WARNING! Do not add an additional mattress to the seat unit when in pram mode.

WARNING! Do not place the product near an open fire or other source of strong heat.

- Adult assembly is required.
- Always apply the parking brake when the product is stationary.
- Ensure the parking brake is engaged during the loading and unloading of the child.
- Take extra care in windy conditions.
- Be careful when going up or down kerbs.
- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- Do not use parts or accessories which are not approved by the manufacturer.
- Do not allow your child to climb unassisted into the product.
- Remove your child and fold the product when going up or down escalators and flights of stairs.
- Ensure the basket is emptied and any footmuffs or other accessories are removed prior to folding.
- If this product is used by someone unfamiliar with it e.g. grandparents, always show them how it works.
- A basket is provided for the carriage of 2kg of items evenly distributed.
- Infant car seats should not be used in place of a cot or cot bed. Should your child need to sleep then it should be placed in a suitable pram body, cot or cot bed.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- Never leave the raincover, hood or apron on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding the pushchair.
- Do not place anything on top of the raincover.
- This product conforms to EN 1888-1:2018+A1:2022


Parts List

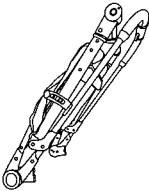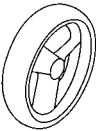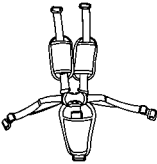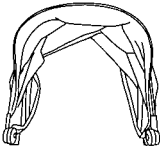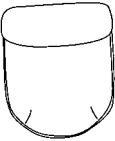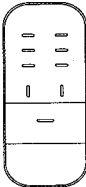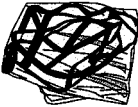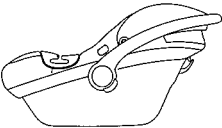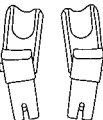A  Chassis x1	B  Front wheels x2	C  Rear wheels x2
D  Bumper bar x1	E  Seat unit x1	F  Harness x1
G  Canopy x1	H  Apron x1	I  Seat liner x1
J  Raincover x1	K  i-Size car seat x1	L  Car seat adaptors x1 set


Chassis Assembly

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.


1a. To release the chassis (A) from the locked folded position, lift the folding latch on the side of the frame.

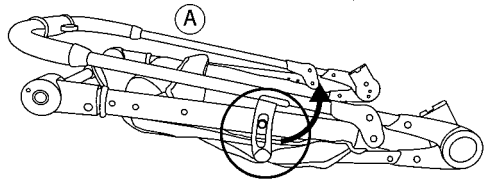

1b. Lift the handle to open the chassis. When the chassis is completely open, you will hear a “click” indicating it is locked into place.

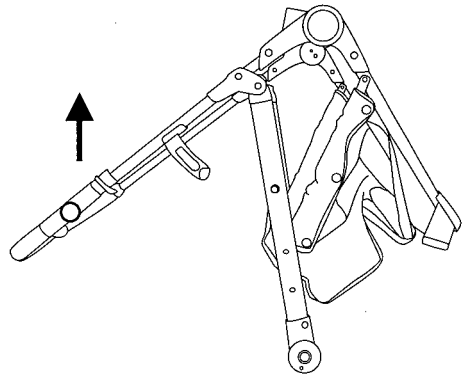


WARNING! Always ensure the opened chassis is locked in place before you use it.

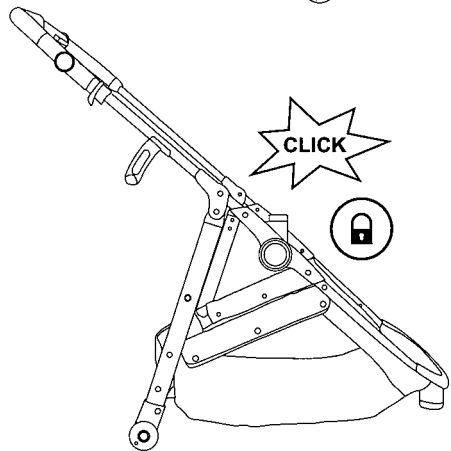


Chassis Assembly


2a. Push each rear wheel (C) into the sides of the rear wheel axle until you hear a “click”.
Give them a tug to ensure they are attached securely.

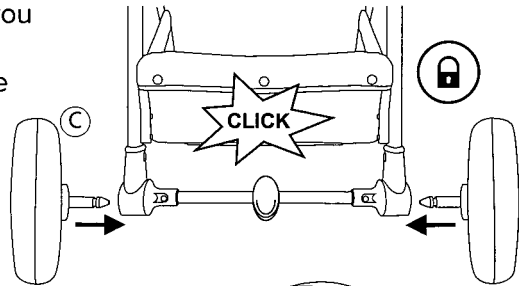

2b. To remove the rear wheels, simply pull out the metal latch located underneath the rear wheel axle and pull the wheel out.

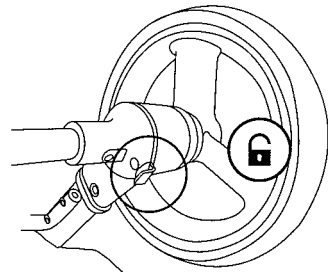

3a. Insert each of the front wheel (B) pins into the center of the socket until you hear a “click”.
Give each wheel a firm tug to ensure they’re securely attached.

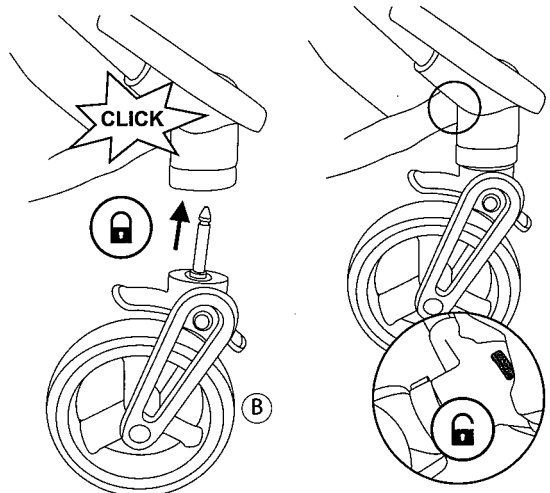


3b. To remove the front wheels, simply press the button at the back of the wheel socket and pull down.


Pram Mode

1. On the rear of the seat unit (E), fasten the hook and loop panels as illustrated.

WARNING! The fabric must cover the metal bracket.

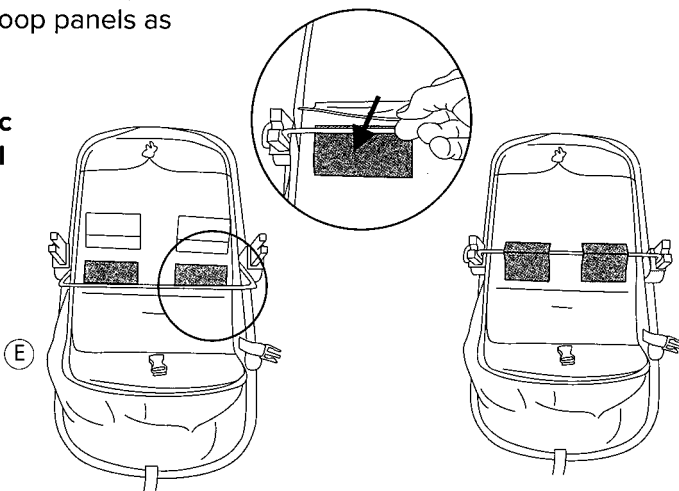


2. Attach the seat unit to the chassis. Line up the seat connectors with the chassis housing and press downwards. Listen for a “click” to signal correct assembly.

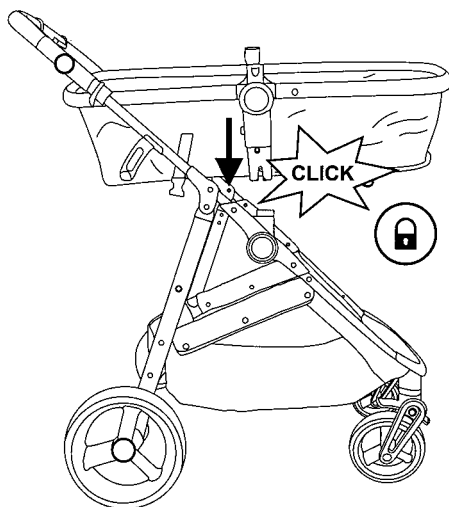


Pram Mode

3. Push the button located both sides of the seat connectors to remove the seat unit from the chassis.

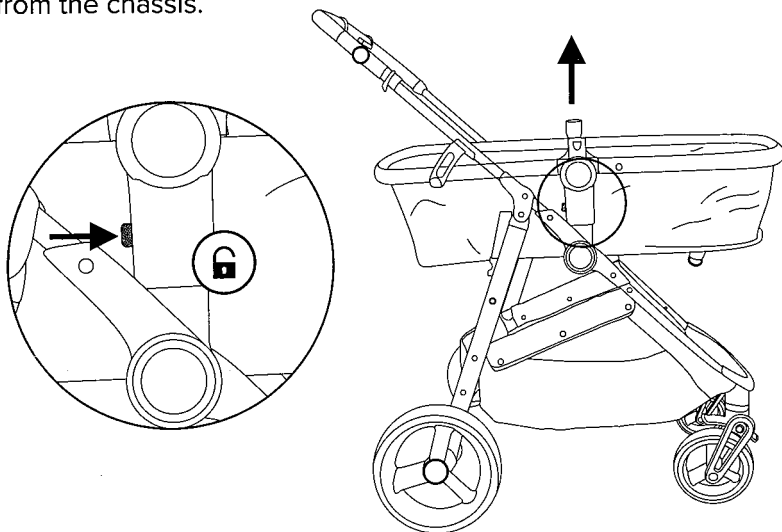

4a. Insert the bumper bar (D) into the seat unit slots ensuring that the release buttons are on the outside and you hear a “click”. Give the bumper bar a tug to ensure it’s securely in place.

4b. To remove the bumper bar, simply press the release buttons on either or both sides and lift up.

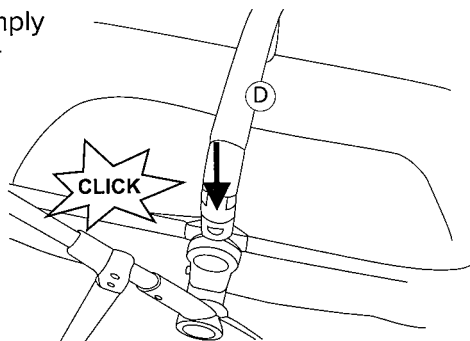


Pram Mode

5. Fasten the apron (H), secure the zip around the side and attach the hook and loop fasteners over the bumper bar.





6. Attach the canopy (G) to the seat unit. First attach the plastic canopy clips to their respective sides, ensuring that they sit over the small plastic guides located on each side of the seat unit frame. Next, secure the canopy to the frame with the zip. Start with the right side (when facing the seat).

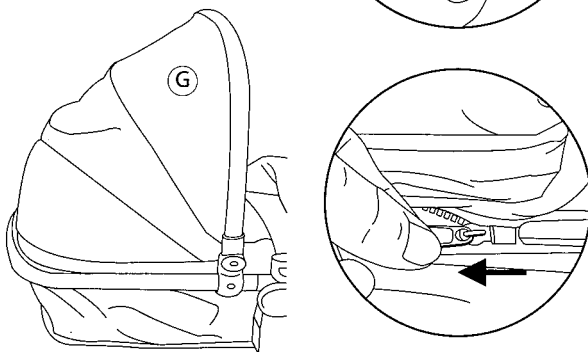

Pram Mode


Suitable from birth in bassinet mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.

WARNING! Never use in pram mode with seat unit forward facing.

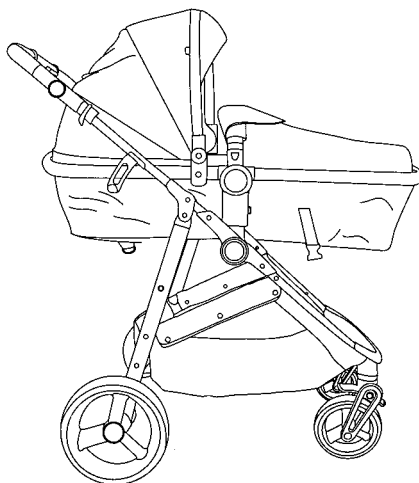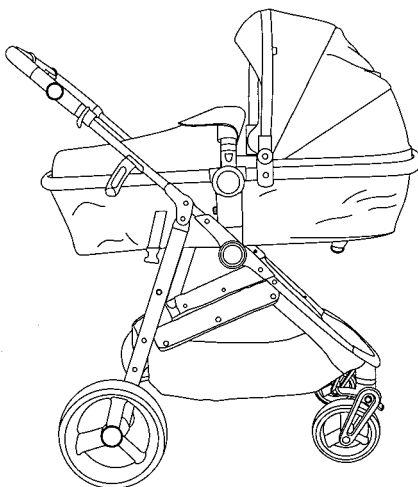


Pushchair Mode

1. Press buttons both sides of the seat connectors to remove the seat unit from the chassis.

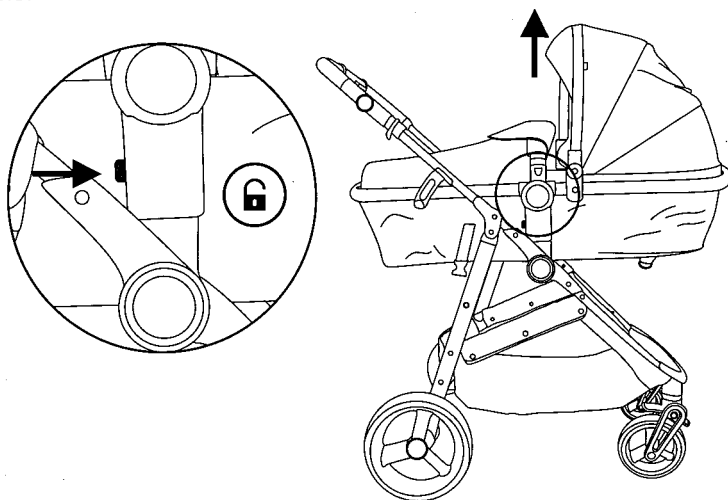


2. Fasten the webbing belts located on the rear side of the seat unit footrest. Listen for the “click” to signal buckles are secure.

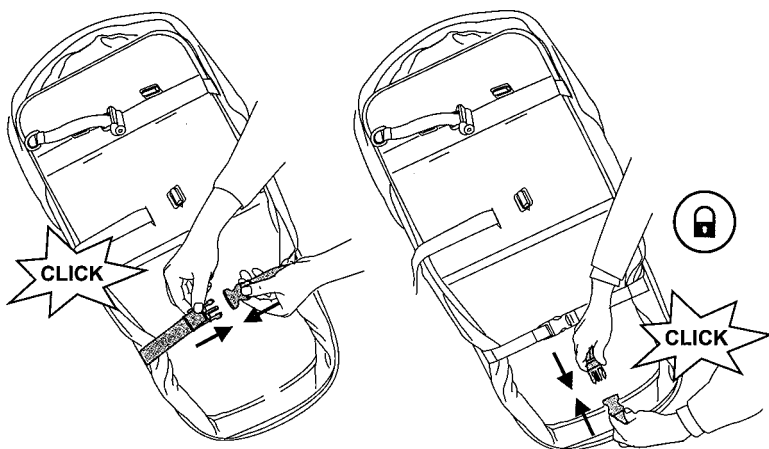


Pushchair Mode

3a. Attach the harness (F) to the seat unit. Thread the shoulder strap retainers under the webbing holders and out through the horizontal slots in the seat unit backrest.

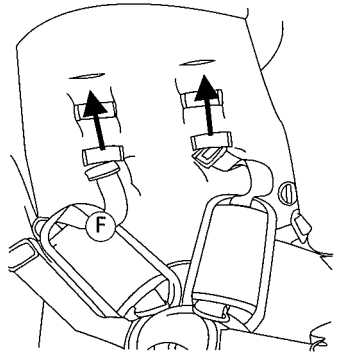


3b. Thread the waist strap retainers through the vertical slots in the seat unit backrest and thread the crotch strap retainer through the horizontal slot at the centre of the seat unit.

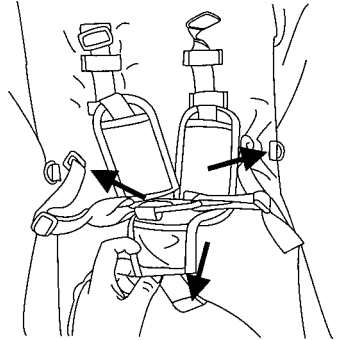



WARNING! Ensure the strap retainers are fully through and secure at the rear of the seat unit.

3c. To remove reverse the above process.

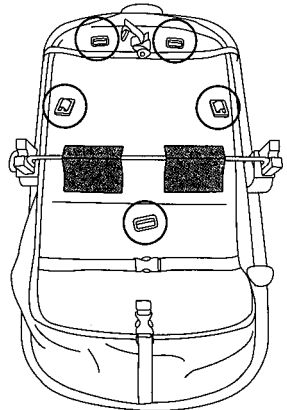



Pushchair Mode

4. Re-attach the seat unit to the chassis. Locate the backrest adjustment mechanism at the rear of the seat unit. Squeeze the clip on the reclining harness and gently pull up the backrest.

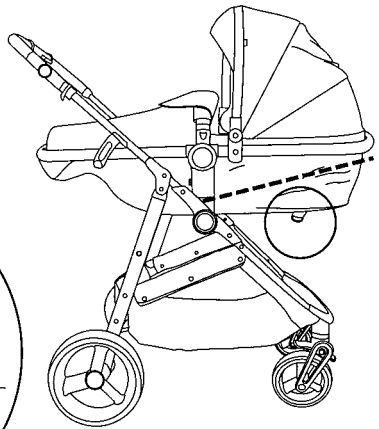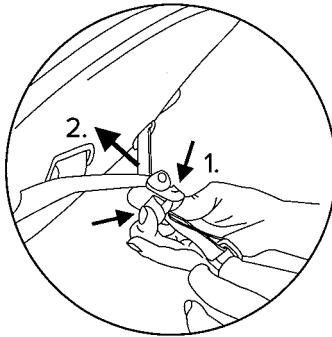


5. Press buttons both sides of the seat connectors to adjust the seat unit recline. Ensure you hear a “click” as the seat engages at your desired position.

WARNING! The seat unit is not suitable in pushchair mode for children under 6 months.

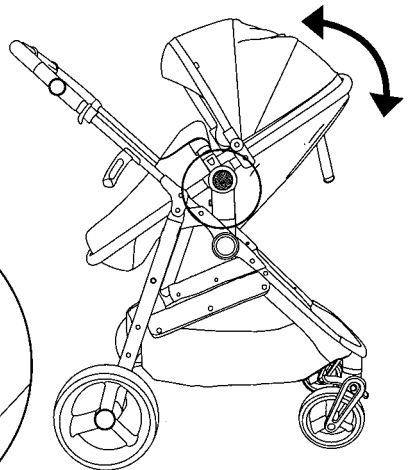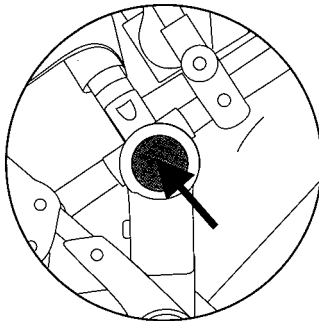

Pushchair Mode


6a. The seat unit is reversible in stroller mode. It can be forward or parent facing.

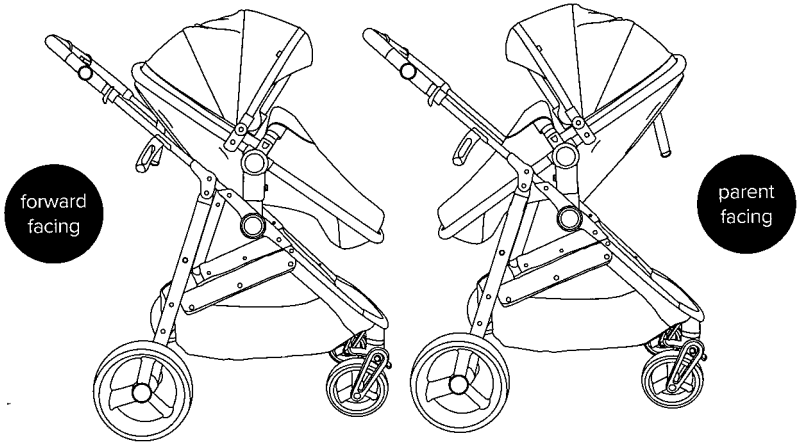

6b. Press the buttons both sides of the seat connectors to remove the seat unit from the chassis.


To re-attach the seat unit to the chassis, line up the seat connectors with the chassis housing and press downwards. Listen for a "click" to signal correct assembly.

WARNING! Always use the restraint system.

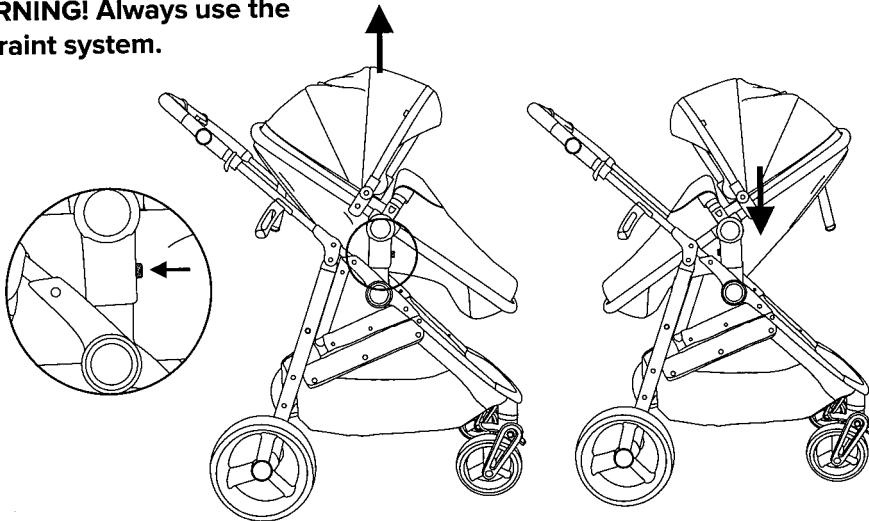


Harness

1. Slide the shoulder strap buckle onto the housing of the waist strap buckle.
Repeat for the opposite side.

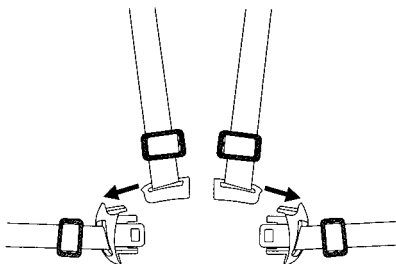


2. Insert the completed buckle into the buckle housing until it engages securely in place. Listen for the “click”.
Repeat for the opposite side.

WARNING! Always use the restraint system.

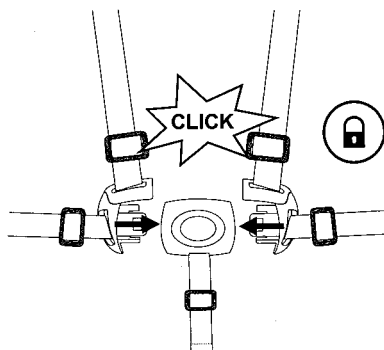


3. Press the centre button to release child from harness.

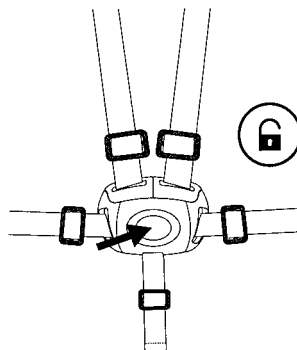


Harness

4. To adjust the shoulder straps, move the slides as shown.


WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

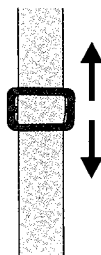

5. There are 3 shoulder height positions. Undo the harness and remove the shoulder pads to adjust the shoulder height.

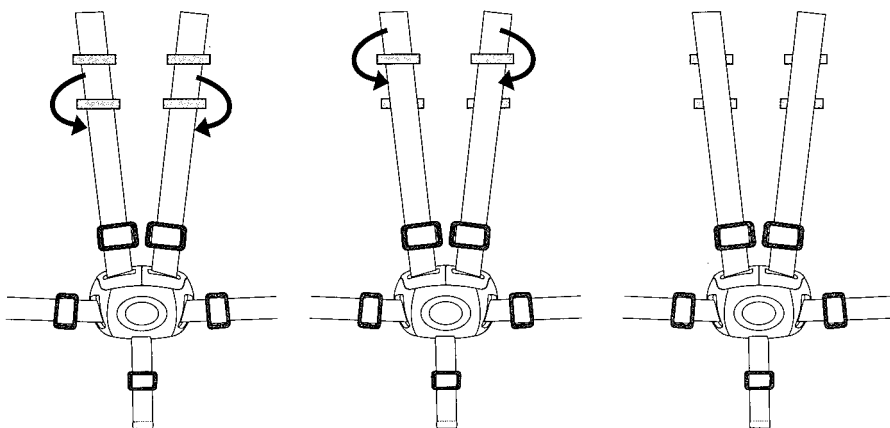


WARNING! Always adjust the shoulder strap height according to baby height.

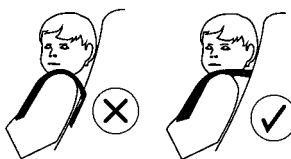


Canopy

1. The canopy can be opened or closed by pulling forward or backward on the canopy rim.

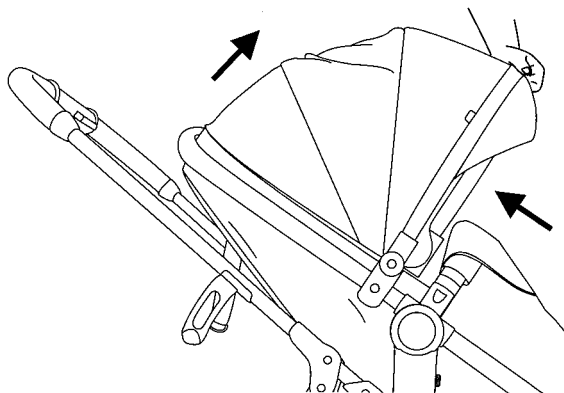


2. The canopy features a window to keep an eye on baby in forward facing position.
Lift the flap to reveal the window.

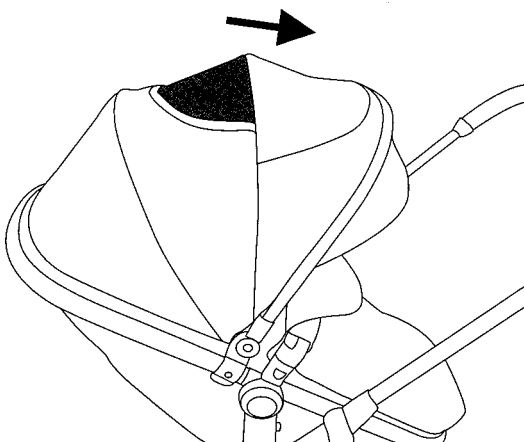

Handle Adjustment


Push and hold the handle height adjustment buttons.
At the same time adjust the handle up or down.
Release buttons at your
desired position. Listen for the
"click" to ensure the handle
is secure.

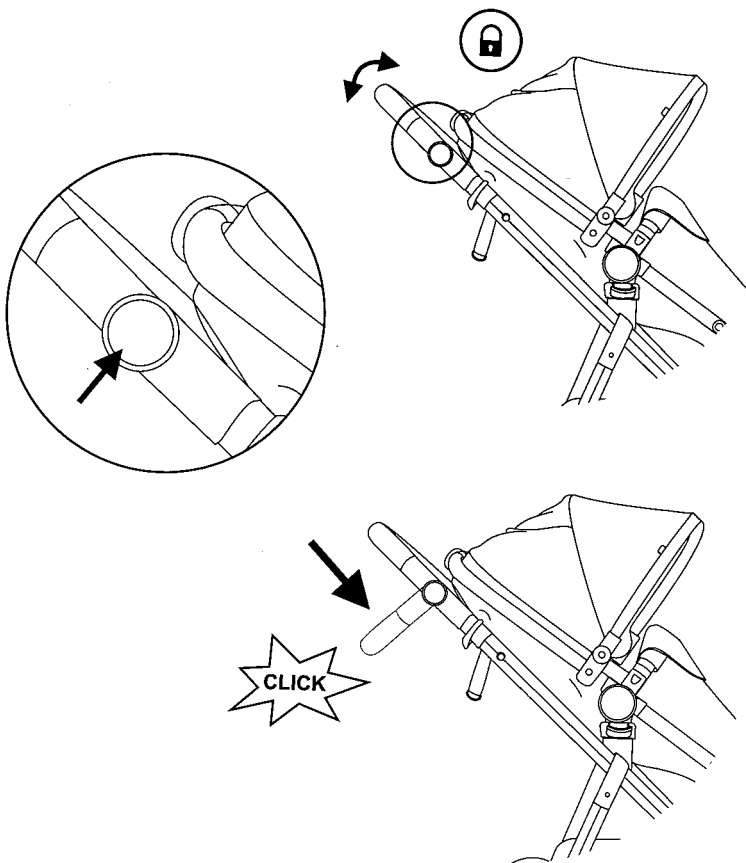

Swivel Wheels


To lock the front swivel wheels into place, twist the top of the wheel socket so the notch is towards the front.

To enable 360° swivel movement, twist top of the wheel socket so the notch is towards the back.

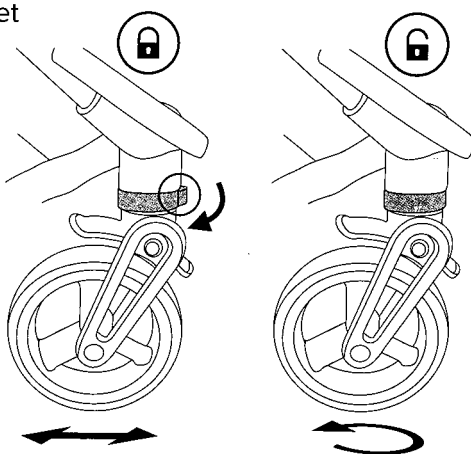

Brakes


Press down on the brake pedal to engage the brake.
Listen for the “click” signalling that the brake is locked.

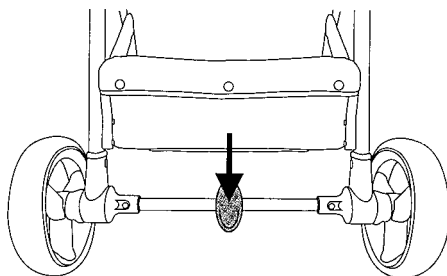

Push the brake pedal upwards to disengage the brake.

WARNING! Always apply the parking brake when the pram is not moving.


WARNING! Always apply the brake when you are placing and removing the child.

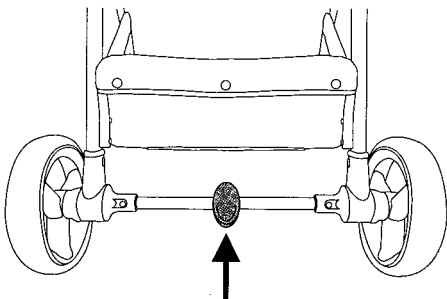

Seat Liner

1. There is a seat liner (I) included for the seat unit.

Undo the harness and remove the chest pads and crotch pad.

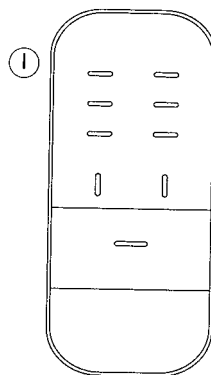


2. Thread the harness through the slots in the seat liner allocated for the waist, shoulder and crotch straps.

WARNING! Ensure to thread the shoulder harness through the corresponding slot height of the seat unit.




3. Re-attach the chest pads and the crotch pad. Repeat the process to remove the seat liner.

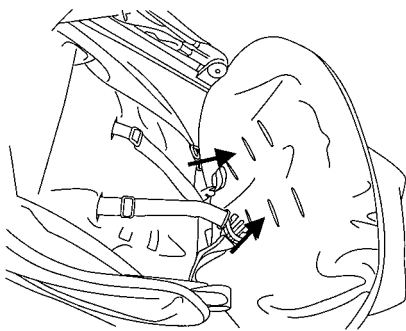


Raincover

Locate the raincover (J). Pull the raincover down over the stroller starting at the top of the canopy and pulling down towards the footrest.

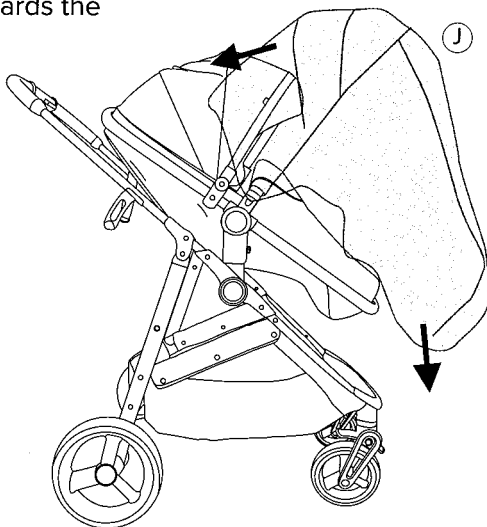


NOTE. The raincover will fit the seat unit in both pram and pushchair mode.

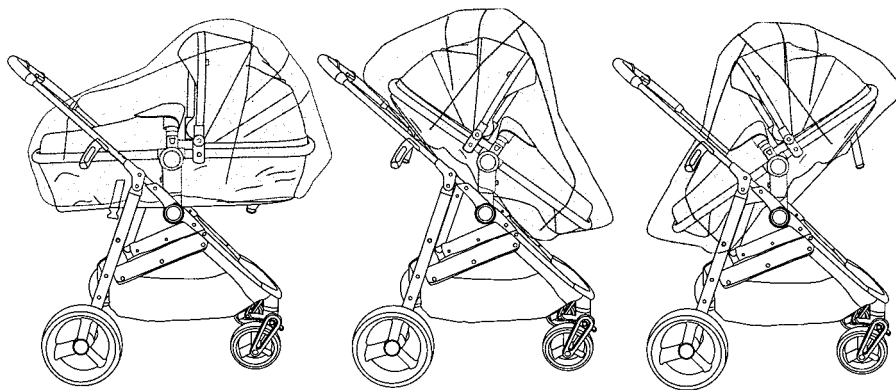

Travel System


1. A car seat (K) and set of adaptors (L) are included to complete the travel system.

Remove the seat unit from the chassis to fit the adaptors. Line up the adaptors with the chassis housing and press downwards. Listen for a “click” to signal correct assembly.

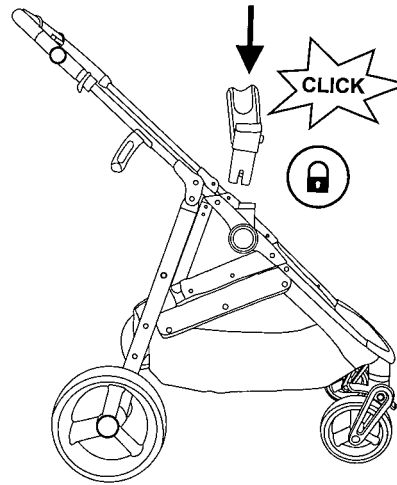


2. Place the car seat (K) onto the adaptors. Push down to “click” into place. Lift by handle to ensure car seat is secure. Alternatively, attach the adaptors to the car seat first and then attach the car seat to the chassis.

WARNING! Never attach the car seat forward facing.

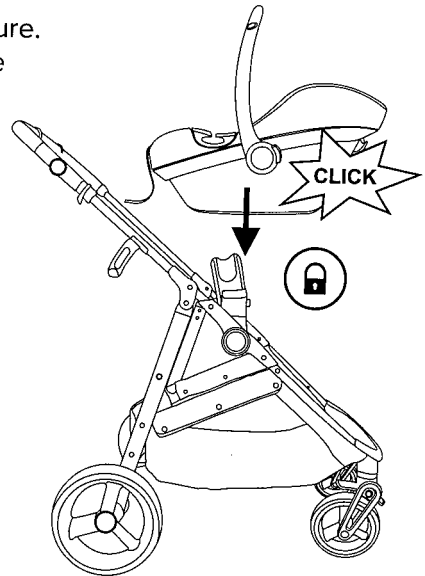


Travel System

3. Press the button located on the side of the car seat and pull upwards to remove.

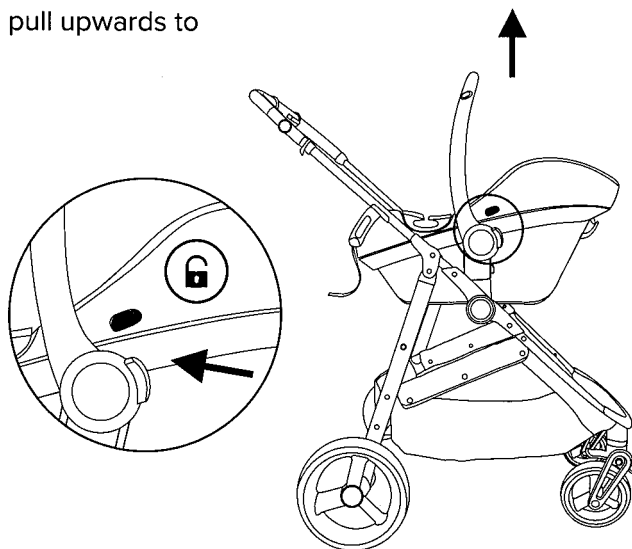

4. Press button on both sides of the adaptors to remove the adaptors from the chassis.

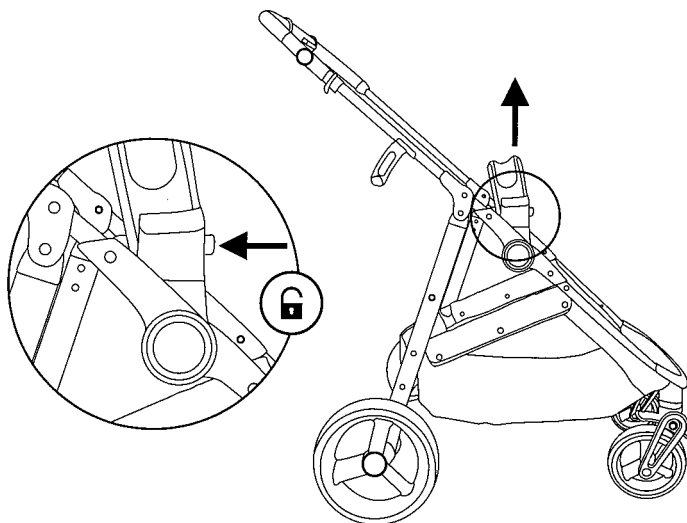


Folding


1. For a more compact fold, remove the seat unit before folding. Otherwise, the chassis can only fold forward facing.

NEVER fold chassis with the car seat attached.

ALWAYS fold the canopy before folding and apply the brakes.

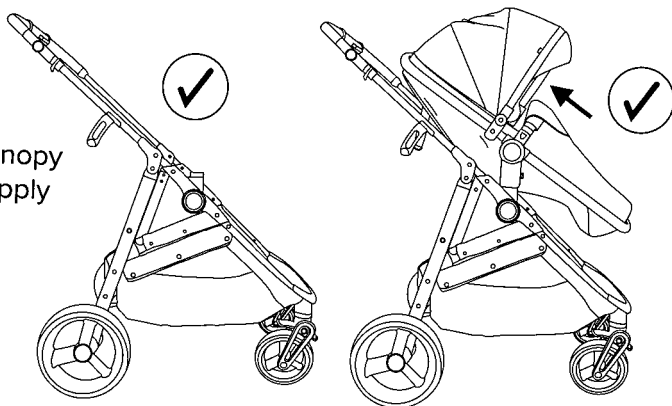


2. If the swivel wheels are locked, twist the top of the wheel socket so the notch is towards the back. This will ensure the wheels can move and do not touch the bar when the chassis is folded.

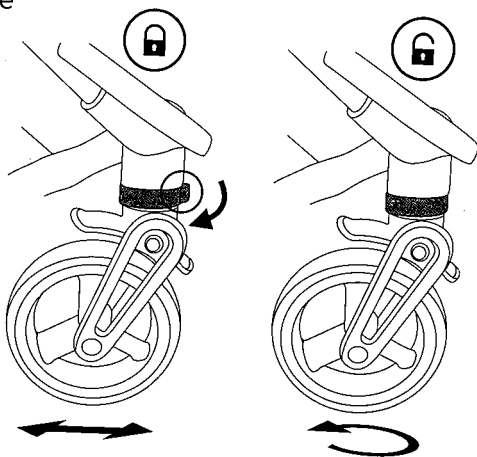

Folding


3. Located on the handle, slide the folding lock button across to the right. At the same time, push up the safety lock.

Push the handle down to a close.

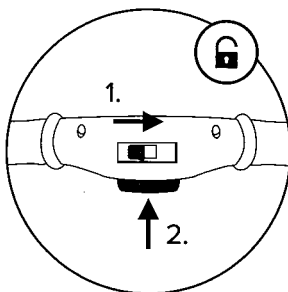


WARNING! Remove your child and fold the product when going up or down escalators and flights of stairs.

WARNING! Ensure the basket is emptied and any footmuffs or other accessories are removed prior to folding.

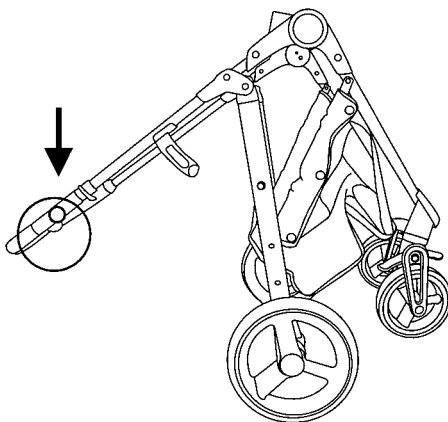

4. The locking catch will engage automatically.

WARNING! To avoid injury ensure that your child is kept away when unfolding and folding this product.

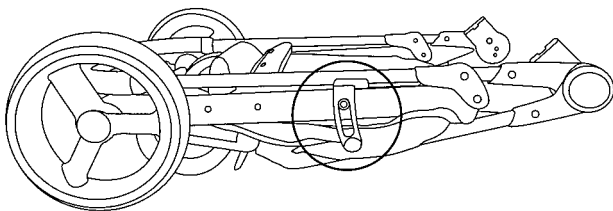

Care

Maintenance

- This product requires regular maintenance to ensure correct and safe performance.
- All assembly fittings are to be tightened properly.
- Always check your pram for loose screws, worn parts, torn material or stitching.
- Replace or adjust parts as needed.
- Lubricate moving parts regularly, especially the wheels.

Cleaning

- Wipe metals and plastics clean with a damp cloth.
- Sponge clean fabrics with warm soapy water. Rinse well with clean water to avoid staining. Dry in shade.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Do not use abrasive pads, bleach or strong household cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.