



Hook-on Highchair PRIMO

Model # 041125

IMPORTANT: READ INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN FOR FUTURE REFERENCE

Safety Precautions

Read all instructions before assembly and use of the highchair. Keep instructions for future use.

WARNING

WARNING! Keep coverings away from children to avoid suffocation, if any plastic or impermeable materials are used for covering and for packaging.

WARNING! Never leave the child unattended in this table mounted chair.

WARNING! Do not use the table mounted chair if any components are broken or missing.

Do not use replacement parts other than those approved by the manufacturer or distributor.

Check that the table will not tip when the table mounted chair, attached to it, is in use.

The thickness of the supporting surface to which the table mounted chair can be attached is a minimum of 25mm and maximum of 45mm.

Do not use tablecloths or other objects on the support surface which might interfere with the proper functioning of the anchoring elements. Keep the table structure and surface clean and dry.

Routinely check any clamping screws and re-tighten them, if required. Check also the suction pads

Do not attach the table mounted chair where the child might use its feet to push against a part of the table, another chair or any structure, as this could cause the table mounted chair to come off the table.

Always activate the adjustable lock with child's weight in it.

The table mounted chair shall not be used by children weighing more than 15kg and less than 6 months of age.

This product is not suitable for use on all tables. Do not use on glass topped tables, tables with loose table tops, table leaves, single pedestal tables, card tables or camping tables.

Make sure that you correctly fit the child's safety harness when using the hook-on highchair.

The table mounted chair is not suitable for children who cannot sit unaided.

Your child may be hurt if you do not follow the instructions.

How to care for your Childcare Hook-on Highchair

Cleaning

To ensure the long-lasting use of your highchair wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your highchair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands.



Hook-on Highchair PRIMO

Model # 041125

Assembly / Operating Instructions

Adding hook-on highchair to surface

1. Fully open highchair. Ensure the pins on each side leg are correctly located in the downward position.
2. Press the side button and unfold locking arms.



3. Slide top arms of the hook on the chair on an angle over the table, until the front edge of the table is flush with the crotch strap.
4. Mount securely to table surface and release locking arm. Tighten the arm onto the table by screwing adjusters upwards.



5. Place the child in the hook-on highchair and secure child with harness.



6. Ensure that both adjuster knobs and both front feet are in tight contact with the underside of the table.

PLEASE NOTE: Do not over tighten the adjusters



Ensure positive and secure contact