

# mother's choice egg highchair

## instruction MANUAL



low chair



booster seat

**IMPORTANT! KEEP FOR  
FUTURE REFERENCE**

Illustrations and designs may vary.



follow us on  
[motherschoice.com.au](https://www.motherschoice.com.au)

the only choice

# contents

<i>assembly and usage</i>	
Warnings	<b>3</b>
Components list	<b>4</b>
Assembling footrest	<b>5</b>
Attaching legs	<b>6</b>
Attaching/removing tray table	<b>7</b>
Inserting/removing tray insert	<b>8</b>
Low chair mode	<b>9</b>
Securing your child	<b>10</b>
<i>contacts</i>	
Product registration	<b>11</b>
Customer service	<b>12</b>

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.

# **WARNINGS**

## **TO AVOID INJURY OR DEATH**

### **HIGHCHAIR MODE:**

**FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**

**DO NOT LEAVE CHILDREN UNATTENDED.**

**THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED.**

**MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.**

**POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.**

The weight of the child using the highchair should not exceed **15kg**.

The child should be secured in the highchair at all times by the restraining system.

It is recommended that the highchair be used only by children capable of sitting upright unassisted.

Not recommended for a child under 6 months old.

Check that the highchair is fully erected and ensure that all locks are engaged before placing a child in it.

Ensure that the highchair is placed on a flat, even, horizontal and stable surface.

Do not elevate the highchair on any structure or table.

To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces, hot liquids, window coverings, window cords and electrical cords. Position the highchair away from furniture when the chair is not being used at a table with the tray removed.

Do not raise, lower, fold or move the highchair when a child is in it.

Make sure children and their fingers are clear of any moving parts.

Do not allow children to stand on the seat, as the highchair may become unstable.

To avoid danger of suffocation, keep any plastic bags away from babies and children.

Regularly inspect the highchair for any part that is loose, broken, torn or missing.

Attend to the problem as soon as it is noticed.

Do not use the highchair if it is not working correctly and immediately seek repair.

Use only those accessories which are supplied by Dorel Australia and approved for use with this highchair.

This product is not intended for commercial use.

Do not use the high chair unless all components are correctly fitted and adjusted.



# WARNINGS

## BOOSTER SEAT MODE:

### PREVENT SERIOUS INJURY OR DEATH FROM SLIDING OUT, FALLS, OR TIPPING OVER.

- **ALWAYS** secure child in the restraint until child is able to get in and out of the booster seat without help (about 2 1/2 years old). The tray is not designed to hold the child in the booster.
- **ALWAYS** use the restraint system and ensure it is correctly fitted.
- **ALWAYS** use **BOTH** set of chair attachment straps to secure this product to an adult chair.
- **ALWAYS** check the security and the stability of the chair mounted seat before use.
- **ALWAYS** use the booster on a chair with seat dimensions larger than the booster.
- **NEVER** leave the child unattended.
- **NEVER** allow child to push away from table.
- **NEVER** lift this product with your child in it.
- **DO NOT** use for a child who cannot sit up unassisted.
- **DO NOT** use in motor vehicles.
- **DO NOT** use the chair mounted seat on stools, benches, unstable chairs or folding chairs.
- **DO NOT** use if any part is missing, torn or broken.
- **DO NOT** use any accessories or replacement parts unless specifically identified by the manufacturer.

This product is intended for children able to sit up unaided and up to 3 years old or a maximum weight of 15kgs.

## components list

egg highchair




Seat x 1



Tray table x 1



Tray insert x 1

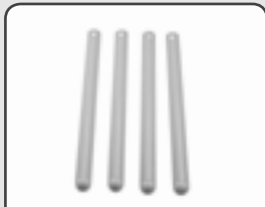

Lower legs x 4



Upper legs x 4



Footrest bar x 1



## WARNINGS



### TO AVOID INJURY OR DEATH:

#### In highchair and low chair mode:


Please ensure the booster seat straps are securely stored underneath in the seat storage compartment to avoid a potential strangulation hazard.

### Step 1: assembling footrest


1. Push in the pop pin of the upper leg located on the top of the bar.

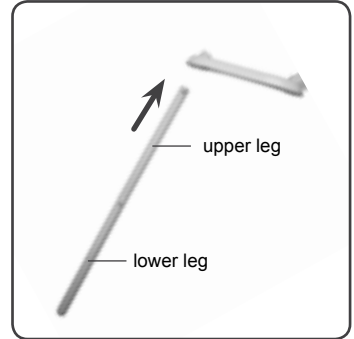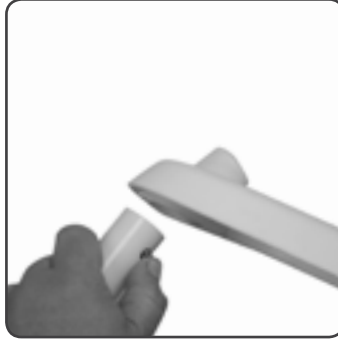

2. Slide the leg through the Footrest bar. Repeat for the second upper leg.

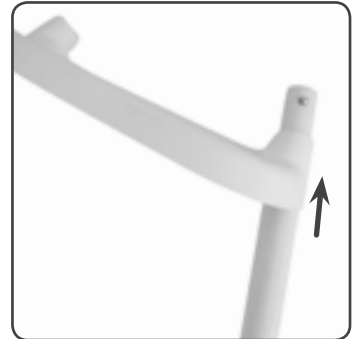

3. Your highchair should resemble the image to the right.

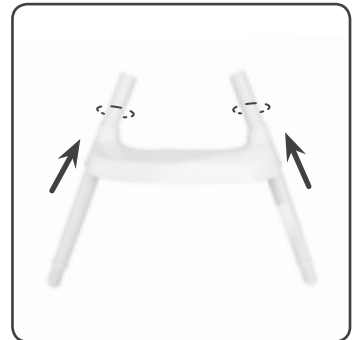




### Step 2: attaching legs

- Insert four (4) **Upper Legs** into the bottom of the **Highchair Seat** in the corresponding holes, ensuring the locking pins on each leg are secured in place.
- Ensure that the 2 upper legs with the footrest fitted are positioned to the front of the highchair.
- Attach four (4) **Lower Legs** to the upper legs, ensuring the locking pins on each leg are secured in place. The spring of the lower leg will 'pop' out of the higher legs.




### attaching tray table

- Insert the Tray Table into the slots (**Figure A**) and push down gently until the tray clicks into place and is level with the seat. (**Figure B**)
- Place the tray insert into place and push down gently. (**Figure C**)

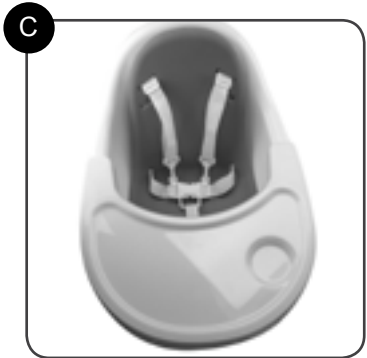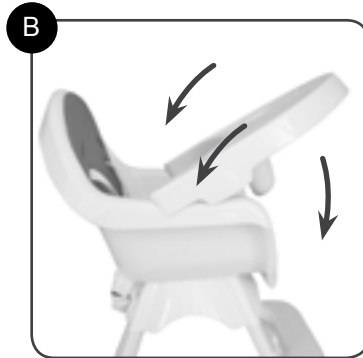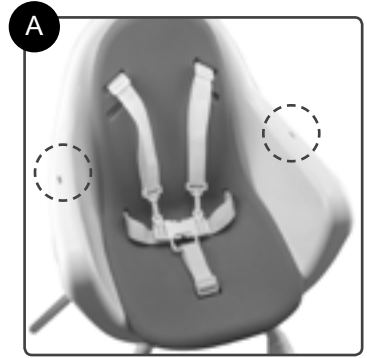

### removing tray table


- Pull outward and upward on the hook moulding on both sides of the tray insert. (**Figure D**)
- Simply lift the tray up away from the highchair. (**Figure E**)

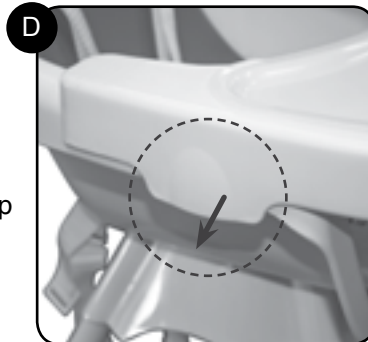



### inserting tray insert


- The insert tray snaps onto the tray table and is held into place by the tab at the rear of the insert.

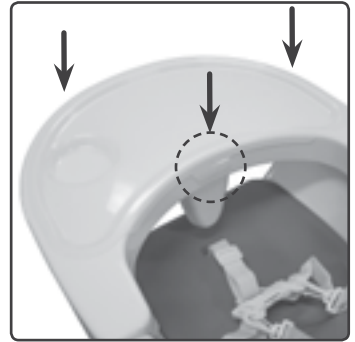

Tray table with insert fitted

### removing tray insert

- To remove the tray insert, unsnap the tab at the rear of the tray and pull up.

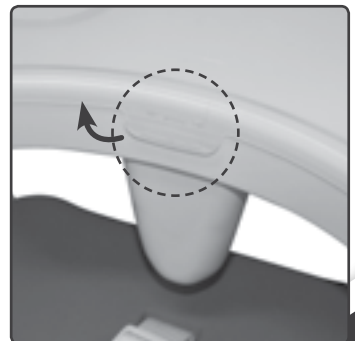

## low chair mode

egg highchair



### *mother's choice tip...*

This seat can be used as a lowchair by simply removing the four (4) lower legs. The footrest is optional in lowchair mode.





### WARNINGS

- **ALWAYS** use both sets of chair straps to completely secure booster to the chair.
- If chair is cushioned and cushion cannot be removed, **BE CERTAIN** that the bottom chair strap is fastened snugly after putting child in seat.
- Make sure all pieces are assembled correctly. Test for proper assembly before placing child in seat.
- ALWAYS secure child in booster seat using restraint straps.
- ALWAYS ensure that all chair protector pads are located completely on the adult chair surface.

### using booster seat

- Remove the legs from the bottom of the highchair seat (**Figure A**).




## booster seat mode

egg highchair

- The straps for the booster seat function are located underneath the seat in two storage areas. When the booster seat mode is not in use, the straps **MUST** be securely stored in the storage areas 1 & 2 as shown.



- To access the booster seat straps, squeeze the small plastic clips and open one storage area (**figure.B**) and remove all the straps. Repeat on the second storage area.

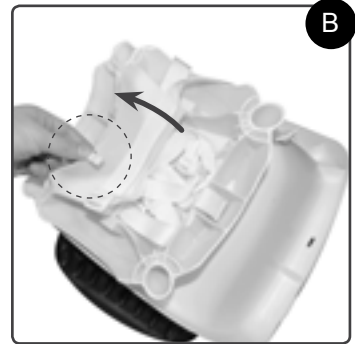

- Ensure storage areas are closed before booster seat is used.




## booster seat mode

egg highchair

- Place the booster seat on a sturdy dining chair. Pass the bottom chair straps underneath the chair and fasten securely.



- Ensure the strap is tightened underneath the chair securely using the adjustment straps (**figure.D**).

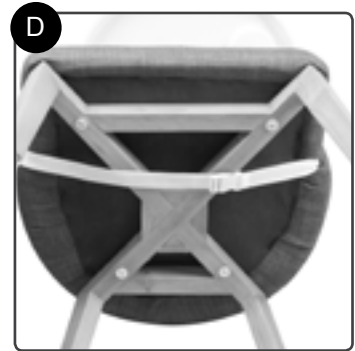



- Pass rear strap around the rear of the chair and secure buckle.



## booster seat mode

egg highchair

- Ensure you tighten chair strap for security.

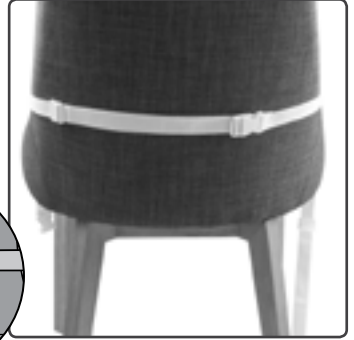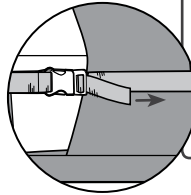



- To securely store the booster seat straps in the storage areas, squeeze the small plastic clip and open one storage area. Ensure all straps fit snugly inside the secured compartment storage areas.



- On the back of the storage area door you can feed the back strap under the plastic clips to ensure the strap is taut.



- Ensure the compartment clicks into place when closed to ensure straps are locked away securely (**figure.E**).

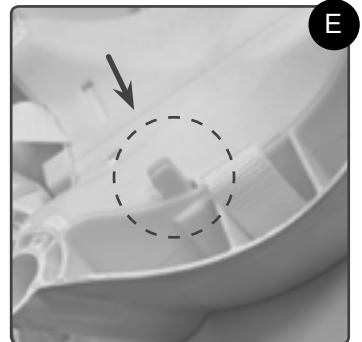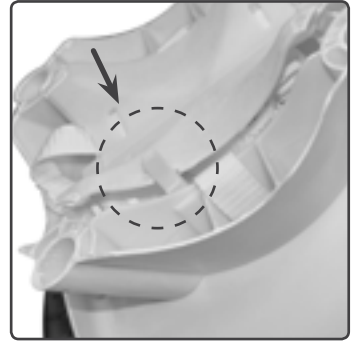



### securing your child

- The harness strap can be adjusted by moving each strap's slider.
- The buckle is released by squeezing the buckle tongues together.



### **WARNING**

Use this harness at all times.

A five-point harness is provided to secure your child.

When not in use disconnect shoulder straps from the waist strap and buckle.

### care and maintenance

- Always store the unit in a clean and dry place.
- Wipe with soft, damp cloth and warm, soapy water and allow to dry.
- A mild disinfectant may be used if desired.
- Do not use abrasives, spray lubricants, bleach or strong detergents.
- Regularly check for loose parts and tighten when required. Damaged or broken parts should be replaced.
- The tray table and insert are both dishwasher safe.
- Harness and crotch straps should be surface washed and air dried only.
- Do not place harness in washing machine or dryer.



## *mother's choice tip...*

Visit us online to register your new Mother's Choice product.



follow us on  [motherschoice.com.au](https://www.motherschoice.com.au)

[www.motherschoice.com.au/product-registration](https://www.motherschoice.com.au/product-registration)

## *benefits of registration*

- Your safety - allows us to contact you with important product notifications.
- Confirmation of ownership - provides a record in case of product loss or theft.
- Improved product development - helps us continue to design products that meet your needs.

*to prevent loss or fading,  
please attach your receipt here:*

[illegible]

[illegible]

[motherschoice.com.au](http://motherschoice.com.au)

DOREL AUSTRALIA PTY LTD  
655-685 Somerville Road  
Sunshine West Victoria 3020  
Email: [customerservice@dorel.com.au](mailto:customerservice@dorel.com.au)  
Phone: 1300 809 526  
Hours: 8:30 am - 5:00 pm Monday to Friday

IGC DOREL NEW ZEALAND LTD  
14 Sir William Avenue  
East Tamaki Auckland 2013  
Email: [customerservice@dorel.co.nz](mailto:customerservice@dorel.co.nz)  
Phone: 0800 628 000 (toll free)  
Hours: 8:00 am - 5:00 pm Monday to Friday



Specifications are subject to change without notice.  
Copy or reproduction without permission is prohibited.  
© 2017 Dorel Australia Pty Ltd. All Rights Reserved.

[www.dorel.com.au](http://www.dorel.com.au)