

**Safety** 1st<sup>®</sup>  
Discover life safely

# MELODY GARDEN 3-IN-1 ACTIVITY CENTRE

Suitable for children between 6kg and 12kg



**⚠ WARNING:**

**PLEASE READ THIS MANUAL IN ITS ENTIRETY BEFORE ASSEMBLING THE PRODUCT AND FOLLOW ALL INSTRUCTIONS CONTAINED HEREIN. DO NOT USE IF ANY PART IS BROKEN, TORN, OR MISSING. PLEASE RETAIN INSTRUCTIONS FOR FUTURE USE.**

Illustrations, designs, and colours may vary.

---

## Table of Contents

• WARNINGS	page 3
• WARNINGS (cont)	page 4
• Component list	page 5
• Assembling the activity centre	page 6
• To attach casters	page 7
To attach the toys	
• Battery warnings	page 8
• To use the music function	page 9
To adjust the seat height	
• To use the rocking function	page 10
• To swivel the seat	page 11
• Product care and maintenance	page 12
• Customer service	page 16

 
 
BEFORE ASSEMBLING THIS WALKER,  
PLEASE READ AND UNDERSTAND THE INSTRUCTIONS AND ENSURE THAT THEY ARE FOLLOWED AT ALL  
TIMES. INCORRECT ASSEMBLY COULD MAKE THE WALKER UNSAFE.  
RETAIN THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

## WARNINGS


- **WARNING** - NEVER leave child unattended and always keep child in view while using walker.
- **WARNING- STAIR HAZARD:** Avoid serious injury or death. Block stairs and steps securely before using walker.
- Use only on flat surfaces free of objects that could cause the unit to tip over. Never use near stairs, thresholds, hills, roadways or pools.
- To avoid burns, keep the child away from hot liquids, stoves, radiators, space heaters, fireplaces, barbeques and similar hazards.
- Prepare rooms to prevent collisions with glass, windows and furniture.
- Ensure that the swivel seat is in the locked position when using walker function.
- Do not allow other children to push the walker when a child is in the walker.
- Do not carry or adjust the walker while a child is in it.
- Do not lift the walker by the tray, toy tray or toys.
- To reduce the chance of the child slipping out of the seat, check that both feet are touching the floor.
- This walker is intended for one child only.
- Do not suspend strings, such as hood strings or pacifier cords, on the walker or attach strings to toys. String can wrap around a child's neck and cause choking.
- The walker & toys must be assembled by an adult.

- 
- Check that the walker is fully erected and that the frame has locked in place before placing a child in the walker.
  - Discontinue use of the walker when the child can stand unaided or walk unassisted.
  - Discontinue use of the walker when the child can stand unaided or walk unassisted.
  - Do not use until baby can sit up by itself.
  - To avoid danger of suffocation, keep any plastic bags away from babies and children. Plastic bags can block nose and mouth and prevent breathing. Bags are not toys. Please dispose of waste packaging thoughtfully.
  - Only use the walker if your child can support their body weight with their legs, weight between **6kgs** and **12kgs**, and is less than **80cms** high.
  - Do not use the walker if it is damaged or broken.
  - Clean the friction strips regularly with a damp cloth to maintain stopping performance.
  - This product is not intended for commercial use.


# Component list:

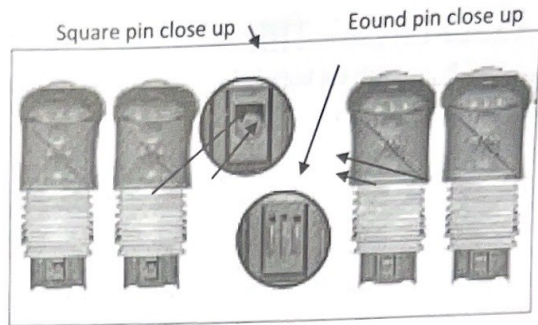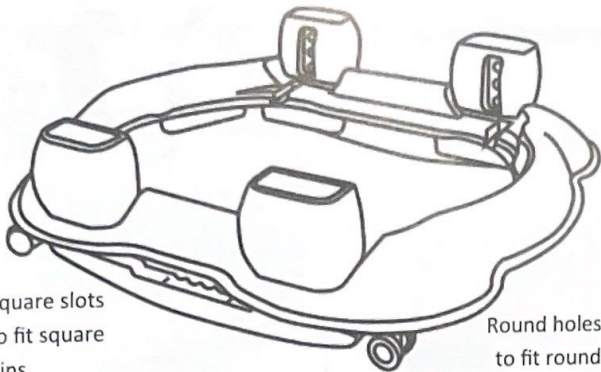


Legs x 4

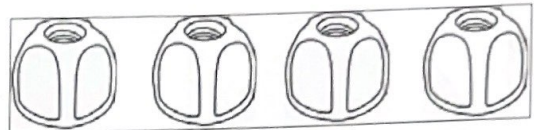


Base

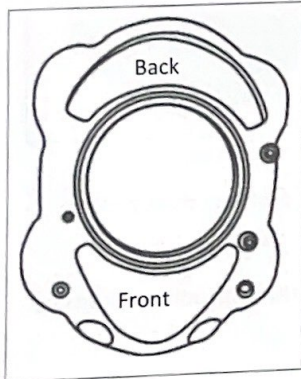


Tray

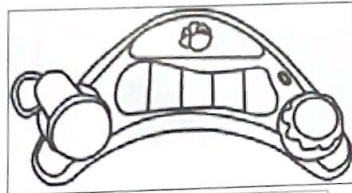


Toy trays x 2

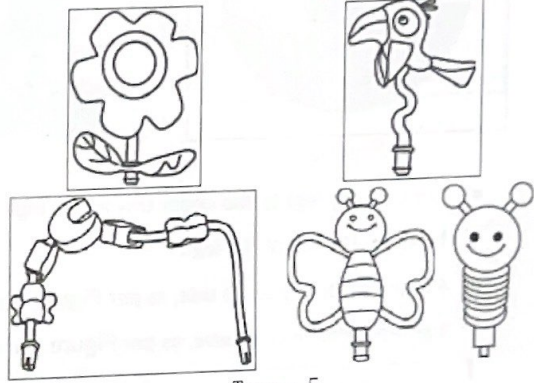

Toys x 5

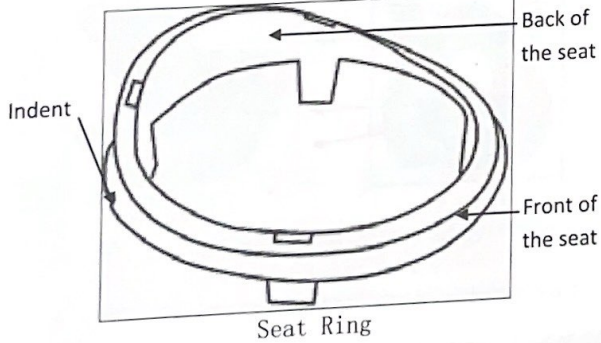

Seat Ring

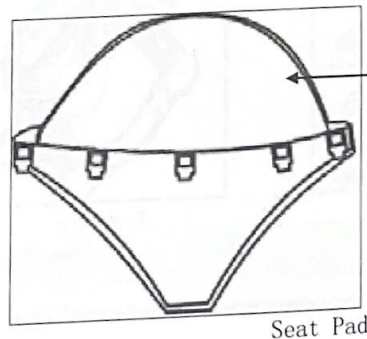

Seat Pad

# Assembling your Activity Centre

## ASSEMBLING THE ACTIVITY CENTRE

- Press each leg button and insert the leg firmly into the mounting hole at the base as per Figure 1.

- Legs with square pins enter the square holes of the base, as per Figure 2
- Legs with round pins enter the round holes at the base, as per Figure 3

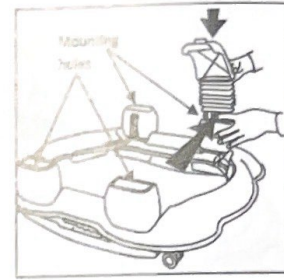


Figure 1

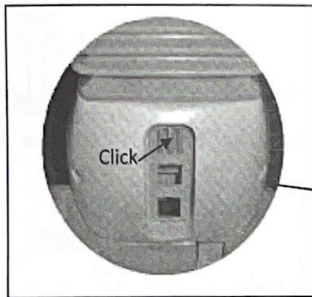


Figure 2

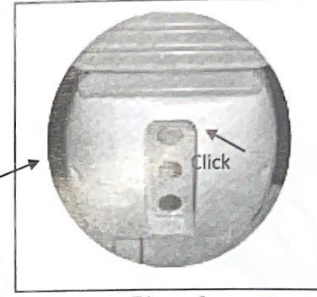
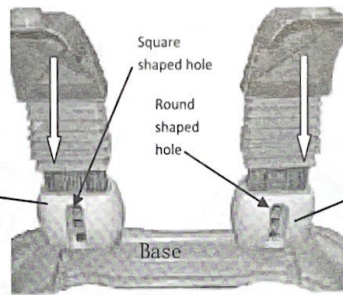


Figure 3

- Connect the legs to the upper tray as per Figure 4 so that the screws on the upper tray protrude through the holes on the top of the legs.
- Put the assembly on its side, as per Figure 5 and connect the four large plastic nuts on the protruding threads by tightening them clockwise, as per Figure 6 and Figure 7.

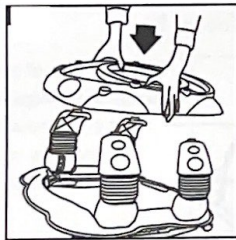


Figure 4

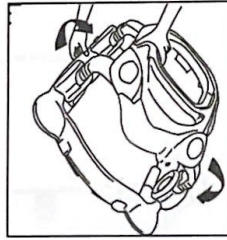


Figure 5

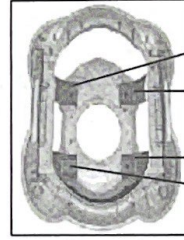


Figure 6

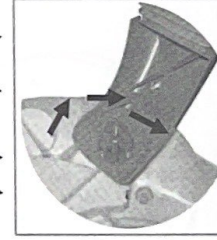


Figure 7

## Assembling your Activity Centre (cont.)

- Inserting the tabs on the seat pad into slots located around the seat ring, as per Figure 8.
- Slide tabs through holes and insert the seat to the upper tray, as per Figure 9.

Elevated side of seat pad fabric must match with elevated side of seat ring

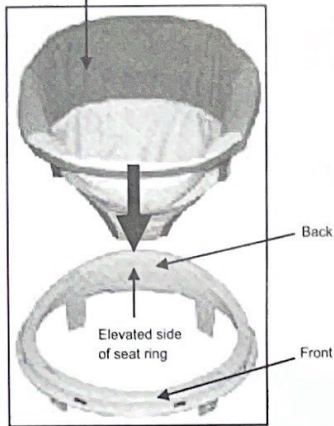


Figure 8



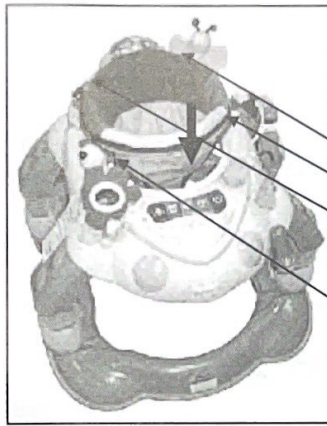


Figure 9

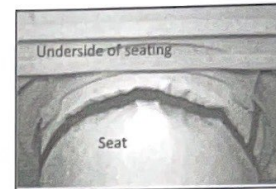

Make sure the four tabs found on the 'white' seat ring are secured under the tray

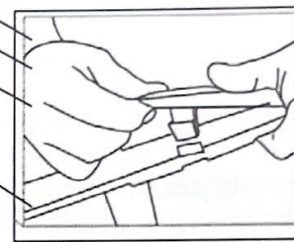

### TO ATTACH THE TOYS

✦ The toy tray requires two AA batteries (not included).

- Use a Philips head screwdriver to unfasten battery cover, insert batteries and replace cover as per Figure 11.
- Insert and snap the toy trays into upper tray at designated cavities as per Figure 12.

✦ To release the toy tray, lay the activity centre upside down and press the yellow tabs underneath the toy tray firmly.

## Assembling your Activity Centre (cont.)

- ⚠ Battery removal and replacement must be carried out by an adult. Batteries should be inserted with the correct polarity, observing (+) and (-) marks on the batteries and product.
- ⚠ Only use batteries of the same or equivalent type to those recommended.
- ⚠ Avoid short-circuiting the terminals in the battery compartment, or the battery terminals.
- ⚠ Do not mix old (used) and new batteries, or batteries of different types, for example: alkaline and rechargeable.
- ⚠ Remove exhausted batteries from walker. Battery leakage and corrosion can damage this walker.
- ⚠ Remove the batteries if storing product for long periods of non-use.
- ⚠ Dispose of exhausted batteries, and never dispose of batteries in a fire.
- ⚠ Never attempt to recharge non-rechargeable batteries.
- ⚠ Adult supervision is required when charging rechargeable batteries.

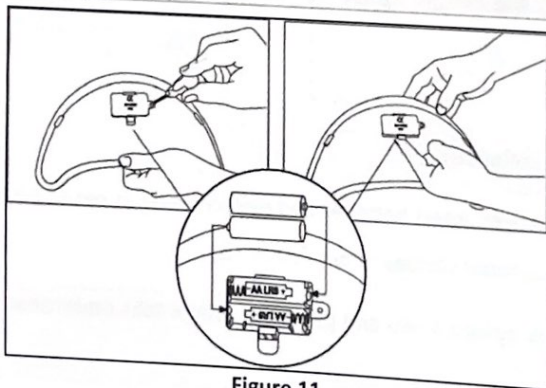


Figure 11

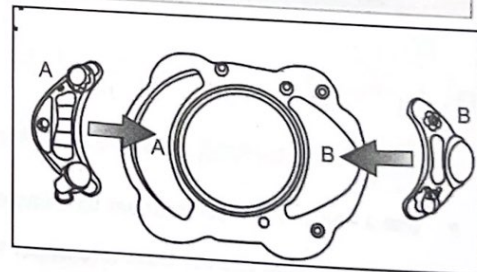


Figure 12



## Assembling your Activity Centre (cont.)

- Insert toys into the designated cavities as per **Figure 13**, and be sure they are securely connected.

✦ Toy B comes with a small 'C' shaped plastic part which securely holds the toy underneath the main tray.

- Place the 'C' shaped part at the end of Toy B once this is inserted in its designated hole, as per **Figure 14**.

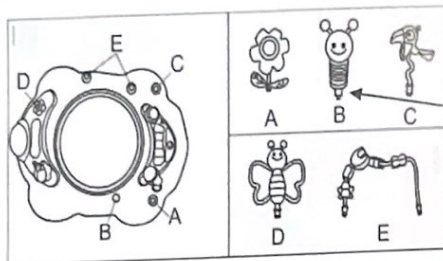


Figure 13

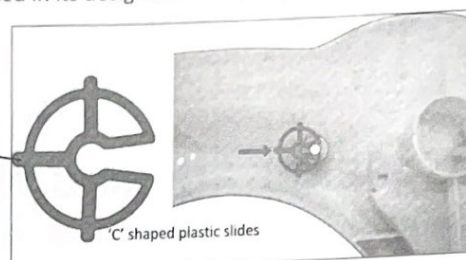


Figure 14

### TO USE THE MUSIC FUNCTION

- Switch the music function on by activating the 'on/off' switch.
- Select the multi-music by pushing the Bee to the left and right, as per **Figure 15**.
- The keyboards and drum button also plays various music when pressed.

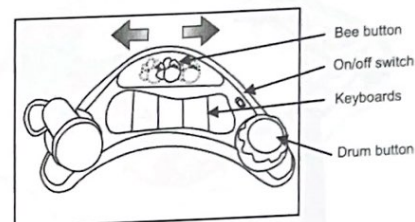


Figure 15

### TO ADJUST THE SEAT HEIGHT

- ✦ The activity centre can be adjusted to 3 different height levels.
- Make sure all legs are adjusted to the same height level when adjusting the height of the seat.
- Adjust one leg at a time.

- Press leg button located on each leg, as per **Figure 16 (1)**.
- Raise or lower the leg to the desired position, as per **Figure 16 (2)**.
- Make sure each leg securely clicks into the slot at the mounting hole base.

# Assembling your Activity Centre (cont.)



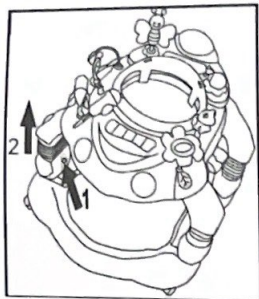


Figure 6

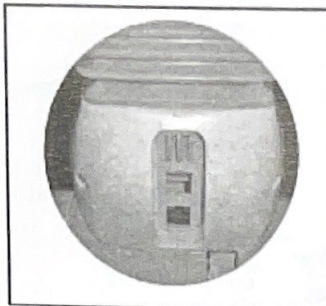


## TO USE THE ROCKING FUNCTION

Fold wheels firstly, then set rock bar as below figs.

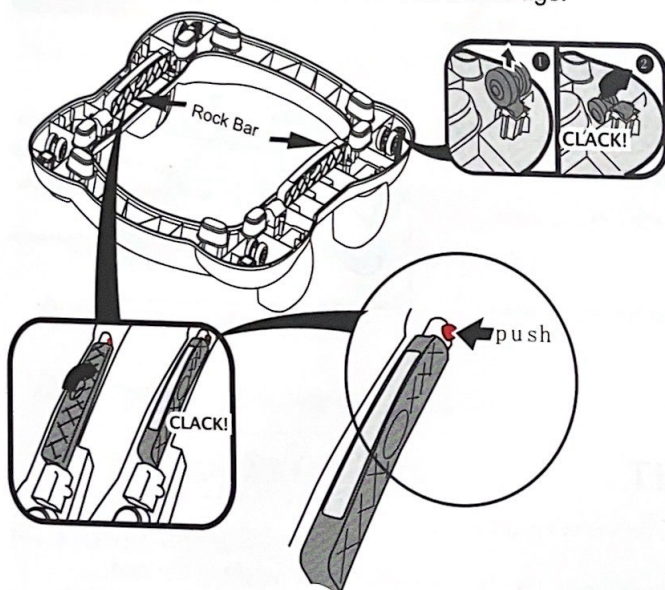

TO USE WALKER FUNCTION : Fold rock bar firstly, then pull all wheels straight as below figs.

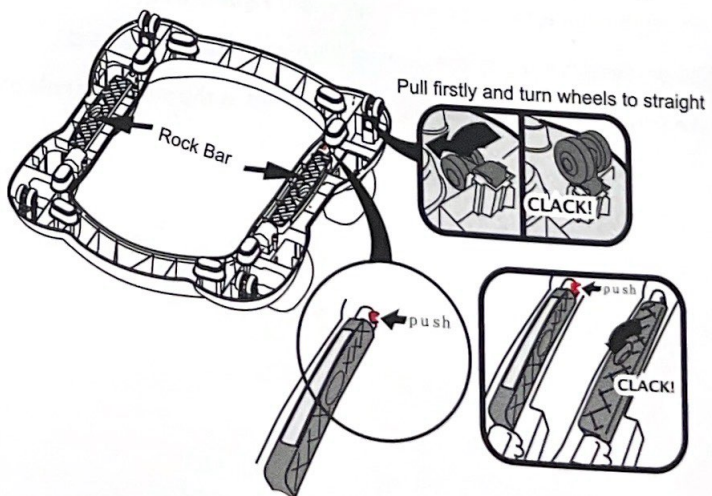

# Assembling your Activity Centre (cont.)

## TO SWIVEL THE SEAT

- Line the red knob with the indent in the white seat ring, as per Figure 20.

Lift and rotate the red knob in position, as per Figure 21.

To unlock the swivel seat, lift and rotate red knob in position, as per Figure 22.

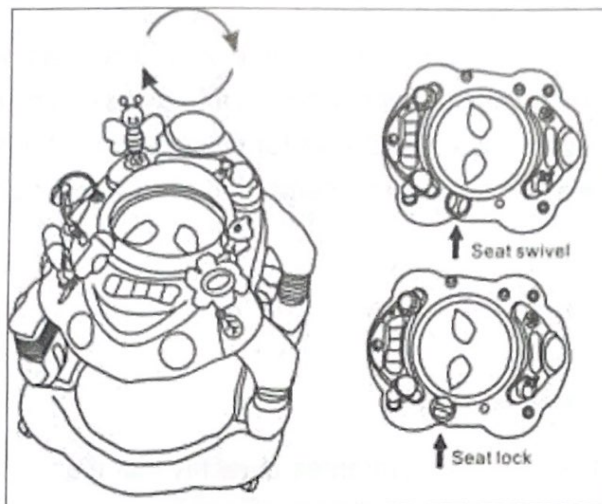


Figure 20

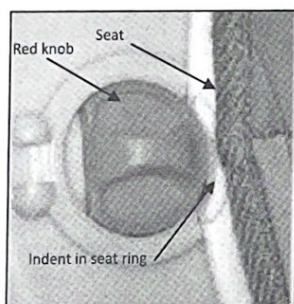


Figure 21 (seat in lock position)

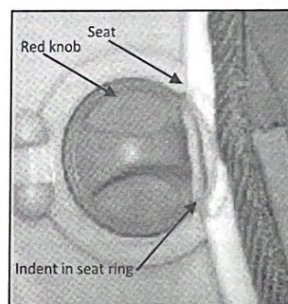


Figure 22 (seat in swivel position)

⚠ Ensure that the swivel seat is in the locked position when using walker function.

## Product care and maintenance

---

- Always store the unit indoors in a clean and dry place.
- Do not use abrasives or detergents on the unit's surface.
- Scuff marks can be removed with mild soap and warm water. Dry with a soft towel.
- Check regularly for loose, damaged or broken parts, these should be tightened if loose and replaced if damaged or broken.
- Replacement parts are available from the Dorel Australia customer Service Team.
- Clean the friction strips regularly with a damp cloth to maintain stopping performance.
- Do not bleach. Do not dry clean ☒. Do not tumble dry. Dry in the shade thoroughly before storage or use and avoid direct heat and exposure to sunlight.

## Guarantee

---

This product carries a twelve month guarantee to rectify manufacturing defects. It does not cover problems arising from accidental damage or product misuse. Specifications are subject to change without notice.



**safety1st.com.au**

DOREL AUSTRALIA PTY LTD  
655-685 Somerville Road  
Sunshine West Victoria 3020  
Email: [customerservice@dorel.com.au](mailto:customerservice@dorel.com.au)  
Phone: 1300 809 526  
Hours: 8:30 am - 5:00 pm  
Monday to Friday

IGC DOREL NEW ZEALAND LTD  
14 Sir William Avenue  
East Tamaki Auckland 2013  
Email: [customerservice@igc.co.nz](mailto:customerservice@igc.co.nz)  
Phone: 0800 628 000 (toll free)  
Hours: 8:00 am - 5:00 pm  
Monday to Friday



Specifications are subject to change without notice.  
Copy or reproduction without permission is prohibited.  
© 2016 Dorel Australia Pty Ltd. All Rights Reserved.

[www.dorel.com.au](http://www.dorel.com.au)