

# SNACK HIGHCHAIR



**IMPORTANT: KEEP FOR FUTURE  
REFERENCE. READ CAREFULLY**

# safety

---

- Ensure your highchair is fully erected before placing your child inside.
- Do not allow your child to climb unassisted into, play with or hang onto the highchair. This is not a toy.
- All additional hazards such as electrical flex should be kept out of the reach of children in the highchair.
- Adult assembly is required.
- When using the highchair at a table, ensure your child can not push against the table or another surface as this could result in the chair tipping.

# care & maintenance

---

- Ensure all locking devices work correctly and regularly check the locks and fittings for security.
- Regularly check all parts for wear and tear.
- Do not use spray lubricants, simply wipe clean after use.

# cleaning

---

- The highchair can be cleaned by sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.
- Stubborn marks may be removed with a non abrasive cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

# safety

THANK YOU FOR CHOOSING OUR PRODUCT. PLEASE TAKE A LITTLE TIME TO READ THE IMPORTANT SAFETY NOTES BELOW. THIS WILL ENSURE MANY YEARS OF HAPPY AND SAFE USE.

**WARNING:**

**WARNING!** Do not use the highchair until your child can sit up unaided (6-36 months).

**WARNING!** Do not leave the child unattended.

**WARNING!** Ensure your child wears a correctly fitted and adjusted harness at all times.

**WARNING!** Do not use the highchair unless all components are correctly fitted and adjusted.

**WARNING!** Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. or where a child could gain access to any other kind of hazard, in the vicinity of the highchair.

**WARNING!** Do not use if any part is broken, torn or missing.

**WARNING!** Do not move or carry the highchair with your child inside.

- Use only on a level and stable surface.
- Never move or carry the highchair whilst the baby is in it.
- Ensure children are clear of all moving parts before making any adjustments.
- Do not use near stairs or steps.
- When in use, store away from children.
- Designed and manufactured to **BS EN 14988:2006 + A1:2012**.
- Use the highchair on a flat, even and horizontal floor and do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords, electrical cords. Position the highchair away from furniture when the chair is not being used at a table with the tray removed.
- The highchair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- Do not use the highchair if it is not working correctly, the owner should seek repairs.

**WARNING!** Follow the manufacturers instructions.


**WARNING!** The harness must always be used and correctly fitted, most injuries from highchairs are caused by falls.

**WARNING!** Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.

**WARNING!** Not to be used by children over 15kg due to its construction, strength and design.

- Ensure all users are familiar with the products operation.


# parts

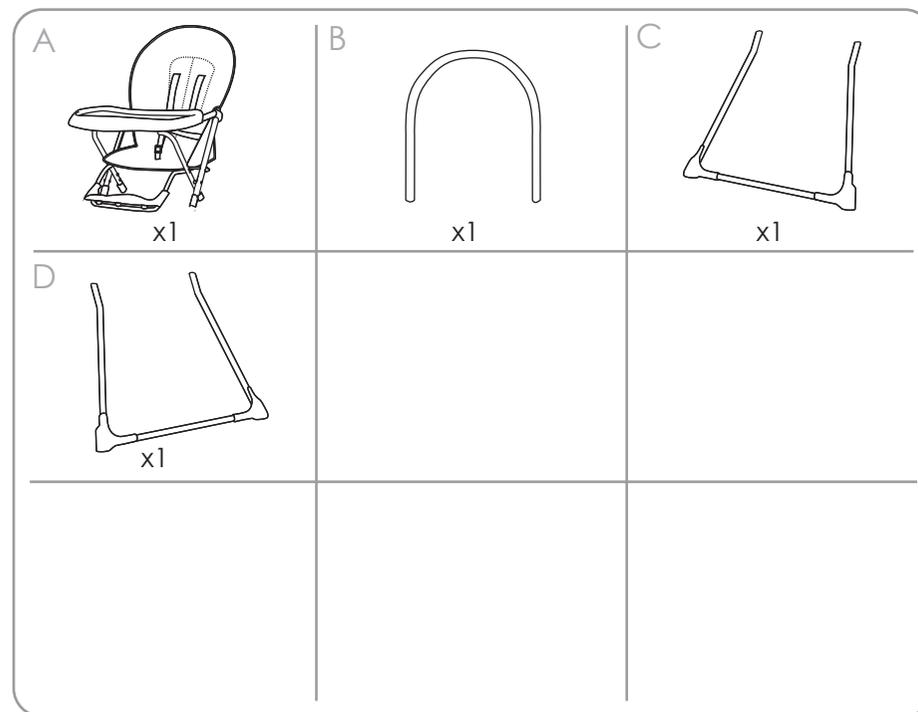


# assembly

---

1. The backrest frame and legs attach using the system shown. The silver button (a) is squeezed and the tube end inserted into the outer tube until the silver button appears through corresponding hole (b).

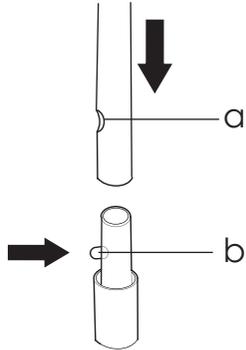


2. Fit the backrest tube to the seat frame as described above, in step 1 (fig 2).

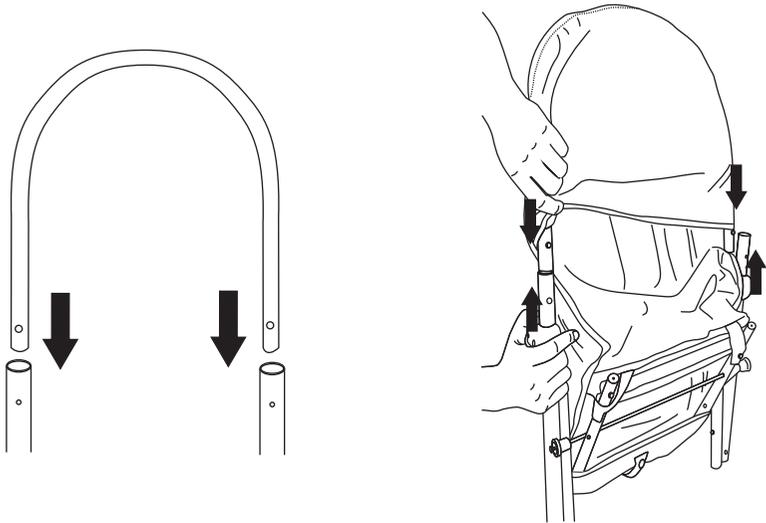

# folding

---

9. To fold, release the press stud (g) on the webbing strap underneath the tray. Lift the tray firmly to release the clips from the tube, and fold the legs together.

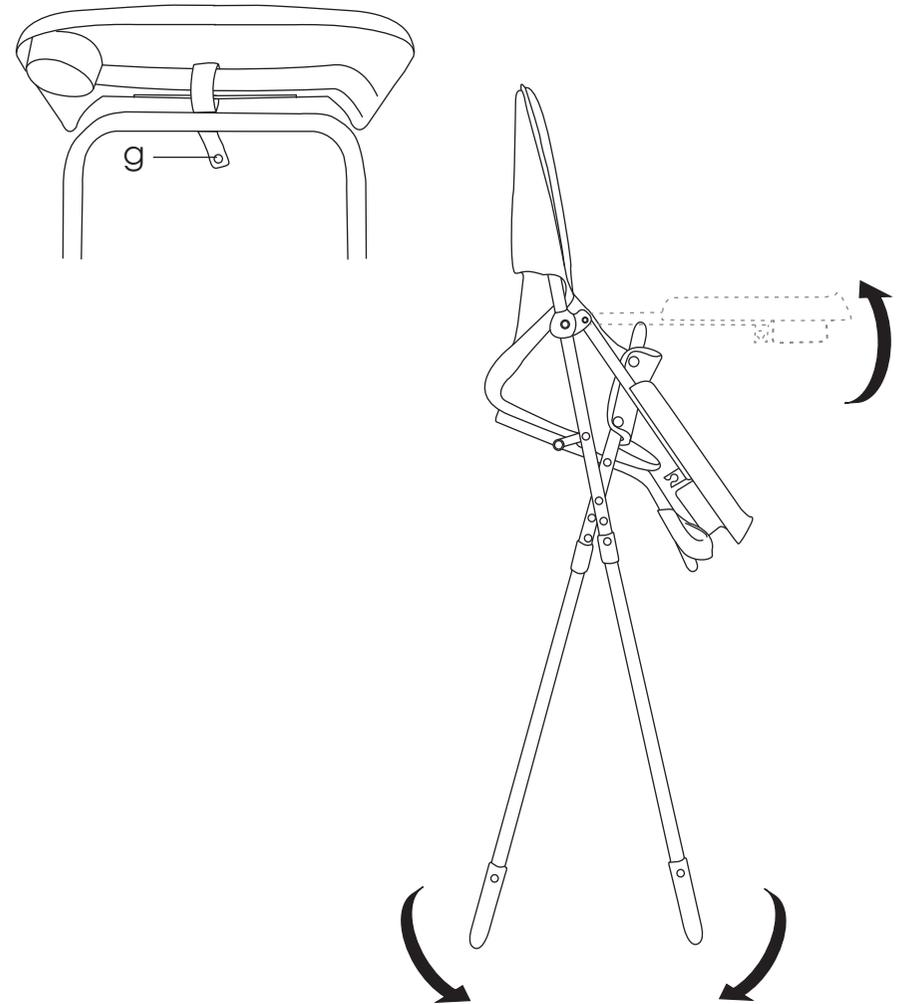

# in use


**8.** A five point safety harness is provided to restrain your child and should always be worn.

Sliding adjusters, (A) are fitted and should be carefully adjusted so the harness fits your child comfortably.

To fasten the harness, push the side pieces into the centre buckle.

To release, press parts (B) and remove from the buckle (fig 11).


'D' rings are fitted at the end of each waist strap should you wish to attach a separate harness complying with BS EN 13210.

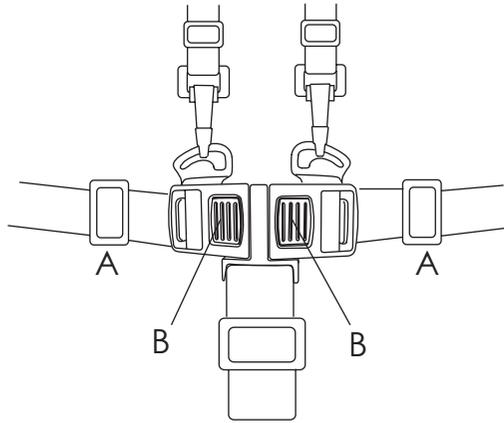

# assembly


**3.** Open the seat frame. Slide the pocket of the seat back over the curved back frame. Fasten the press stud (c) at each side of the seat.

Secure the seat sides by wrapping them around the frame and fastening press (d) at each side of the seat.

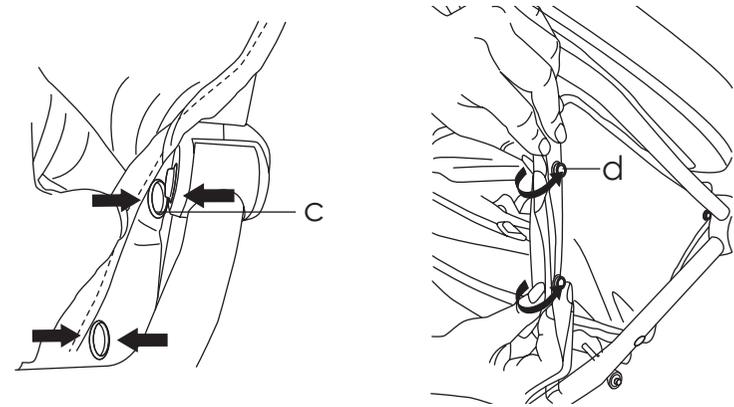

**4.** Open the seat frame fully and press the tray down firmly to fasten the clips to the tube underneath.


Wrap the webbing strap around both tubes under the tray and fasten press stud (e).

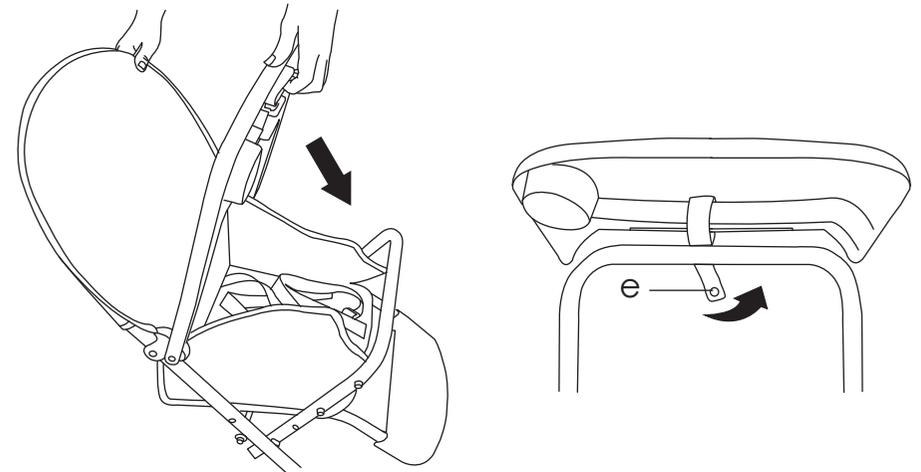

# assembly


5. Noting the front legs are wider at the top than the rear legs, press the silver buttons on the legs inwards, and push the legs onto the frame tubes (1).

Repeat for the narrower rear legs that fit onto frame tubes (2).

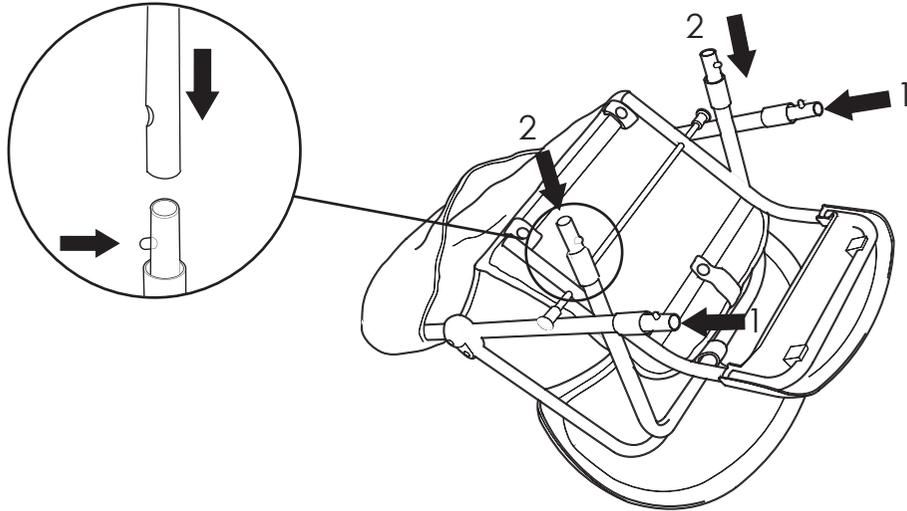

6. The harness comes part fitted to the seat. Ensure the waist straps and crotch strap are fed through the slots in the seat unit.

The shoulder straps are prefitted but can be height adjusted by pulling the straps through the slots in the seat and re-inserting through the preferred slots.

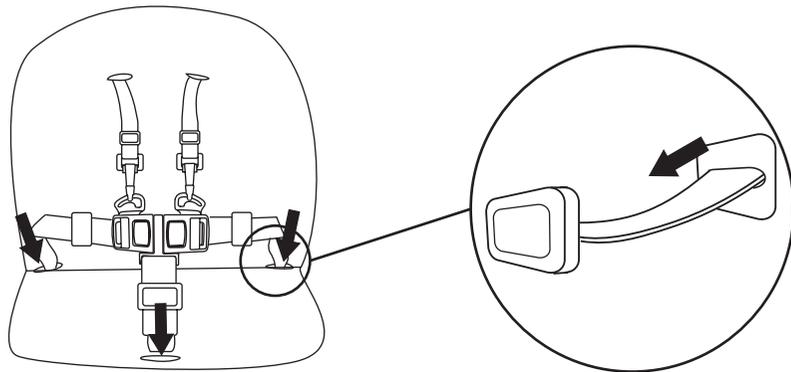

# assembly

7. With the highchair upturned, wrap the split metal rings at the end of each strap around the corresponding support bars and thread the webbing through the small gap in the metal ring (f), so it is attached as shown.

