

Edinburgh

For your child's safety



please read these instructions carefully before use


TRAVEL SAFE
ISIZE CAR SEAT

**INSTRUCTION
MANUAL**

Height:40-135cm

01	PRODUCT OVERVIEW	01-02
02	SAFETY WARNING	03
03	USAGE	
	3.1 Install position of the child seat in vehicle	-04
	3.2 Adjust the headrest	-05
	3.3 Checking the shoulder strap height	-05
	3.4 Usage of buckle	-06
	3.5 Adjust the length of harness	-06
	3.6 Usage of reclining system	-07
	3.7 Remove the shoulder strap	-07
	3.8 Remove the Cheat pad and Cheat strap	-08
	3.9 Remove the crotch pad and locker	-08
04	INSTALLATION	
	Installed rearward-facing (Height:40-105CM, Weight: 0-18kg)	10-12
	Installed forward-facing (Height: 100-135CM, Weight: 15-36kg)	14
05	MAINTENANCE AND CLEANING	15
	5.1 Daily maintenance	
	5.2 Washing instruction	
	5.3 Remove and assemble the fabric cover	
06	THE MAIN TECHNICAL PARAMETERS	16

01 PRODUCT OVERVIEW

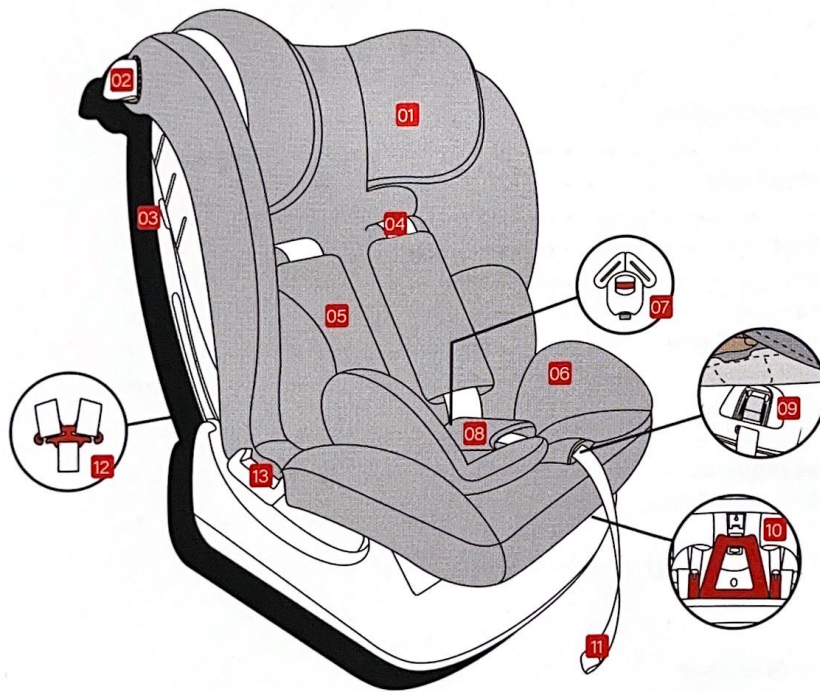

- 01 Headrest
- 02 Belt guide hook
- 03 Belt clip
- 04 Shoulder strap
- 05 Chest pad
- 06 Comfortable cushion
- 07 Buckle
- 08 Crotch pad
- 09 Adjuster button
- 10 Body Angle adjuster
- 11 Harness adjuster strap
- 12 Harness connector
- 13 Belt slot

“ UNIVERSAL BELTED ” NOTICE

- This is Universal Belted Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

“ I - SIZE BOOSTER SEAT ” NOTICE

- This is a i - Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in " i - Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

*** DO NOT use the car seat in seating positions where an active frontal airbag installed.**


- This car seat can be rearward-facing used by 5-point safety system for children with a height of 40-105cm (Weight: 0-18kg, about 0-4 years old), using adult three-point belt to fix the child restraint system;
- This car seat can also be forward-facing for children with a height of 100-135cm (Weight: 15-36kg, about 4-12 years old), using adult three-point belt to fix the child restraint system;
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint;
- Please keep for future reference, a storage compartment for the instructions is located on the back of the car seat;
- Do not use this car seat at home. It has not been designed for home use and should only be used in your car;
- Do not use rearward facing car seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur;
- For the reason of safety, the car seat must be fixed inside the vehicle using adult three-point belt even if you do not put your child inside the car seat;
- The rigid items and plastic parts of a child seat shall be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle;
- Any straps holding the restraint to the vehicle should be tight ;
- Any straps restraining the child should be adjusted to the child's body ;
- Straps should not be twisted ;
- Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged;
- The car seat should be replaced when it has been subject to violent stresses in an accident ;
- When the car seat is not provided with a textile cover, the car seat should be kept away from sunlight, otherwise it may be too hot for the child's skin;
- Don't leave your child in the car seat unattended;
- The car seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance ;
- The instructions shall be retained on the device for its life period or in the vehicle handhook in the case of built-in restraints ;
- Never use a second-hand car seat, as you can never be certain what was happened to it.

3.1 Install position of the car seat in vehicle




✓ Proper installation ✗ Improper installation

Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ECE Regulation No.16 or other equivalent standards.

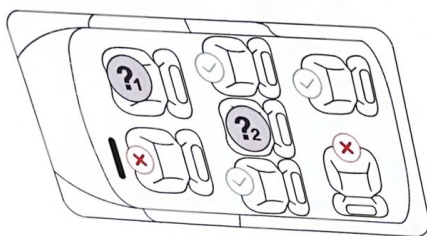

- ❓1 Not to use rearward-facing in seating positions where an active frontal airbag is installed.
- ❓2 Only use on this seat if a lap and diagonal seat belt is fitted.

3.2 Adjust the headrest

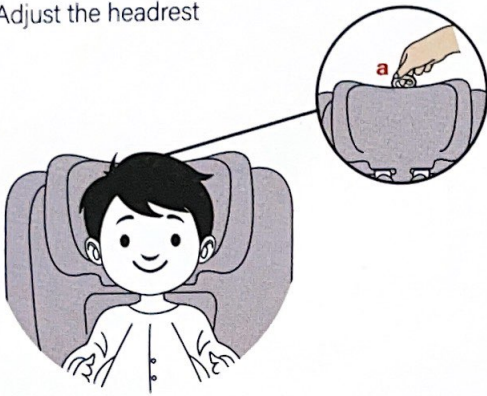

- As shown in the picture, you can adjust the headrest up and down by pulling on the headrest adjustment tab **a**, and adjust the headrest to a position suitable for the child's head.

3.3 Checking the shoulder strap height



✘ too low



✘ too high



✔ slightly higher

- Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

3.4 Usage of buckle



Buckle 08 (sketch map)

- Get the left and the right pieces of buckle together.
- Insert the two pieces into the slot of the buckle. At the same time, hearing "click" means the buckle gets stuck, pull the pieces of the buckle and check whether the buckle is locked correctly.
- **If you want to release the safety belts, it needs to press the red button, then the pieces pop up.**

3.5 Adjust the length of harness



- Loosen the shoulder strap 05
The shoulder strap can be slackened by pressing the adjuster (under the seat cover 10) on the front of the seat. Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the harness towards you to loosen the shoulder strap.

3.6 Usage of reclining system




- Tighten the shoulder strap **05**
Pull the shoulder strap upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness adjuster strap **12** is fully tightened.

*** The shoulder strap should be adjusted as tightly as possible without causing discomfort to your child. A loose shoulder strap can be dangerous.**


*** Check the shoulder strap adjuster and tighten each time when the child is placed in the seat.**

3.7 Remove the shoulder strap

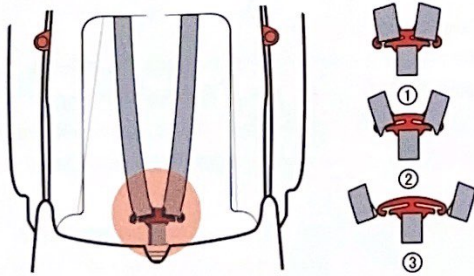


- Loosen the shoulder harness turn the car seat to the back. Slide the chest straps and shoulder straps off the harness connectors. (As shown in figure ①②③)

3.8 Remove the Chest pad and Chest strap

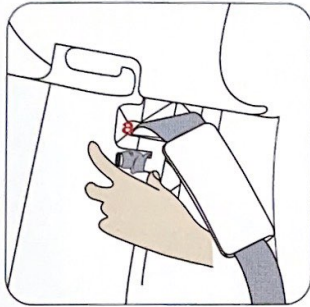

- Loosen the cloth cover inside the seat and adjust the headrest to the highest position (see page 5, 3.2 of the manual). Pull out the shoulder cover and shoulder strap from the headrest hole **a** as shown in Figure 1.

3.9 Remove the crotch pad and locker

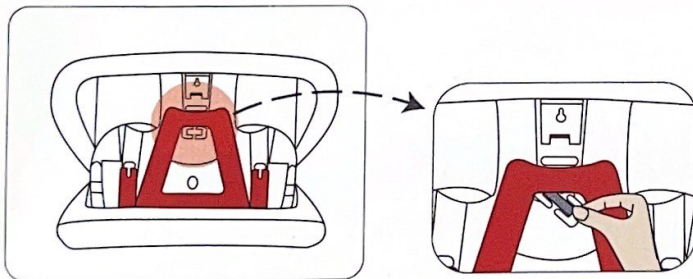


- Adjust the car seat to position 4 and turn it to the bottom. Turn the harness locking clip on their narrowest end and thread it through the slot under the bottom of the car seat. So the crotch pad and locker as well as harness straps can be removed.

04

40-105CM INSTALLATION


Installed rearward-facing (Height:40-105CM, Weight: 0-18kg)

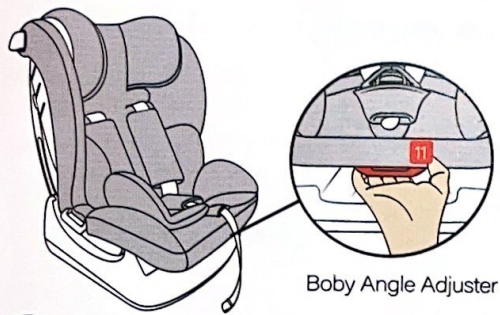

Boby Angle Adjuster



- Method: Pull out the Bobby Angle Adjuster **11** under the seat, adjust to the most inclined gear, and hear a sound of "click".
- Put the car seat rearward facing on the seat and make sure that the front of the car seat is firmly pressed against the seat backrest.

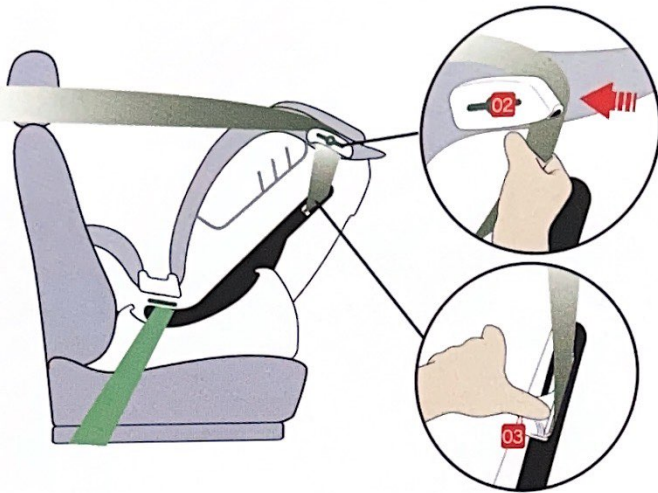

Shoulder belt
 Lap belt

- As shown in the figure, firstly, snap the vehicle shoulder belt into the child restraint system's belt guide hook **02** and belt clip **03** on the same side, and then pass the vehicle lap strap through the guide hook over the side of the child restraint base.


 - Insert the diagonal belt together with lap belt into car seat belt buckle until you hear a "click" sound. Check the car seat belt buckle is correctly locked by pulling the seat belt upwards.
- * When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If in doubt, pls contact the manufacturer of the child restraint system.



- Put your child into car seat.
- * Check the height of shoulder belts on the correct position and fasten the buckle **08**.
- * Check that the harness has not been twisted.
- * Check that the cover is not impeding the movement or fit of the harness in anyway.

IMPORTANT:


The 3-point adult belt passes through the backrest as the picture shown:

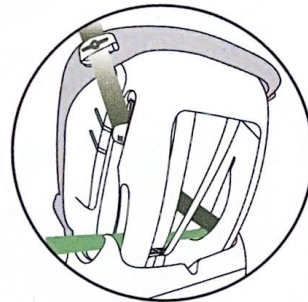

05

105-135CM INSTALLATION

Installed forward-facing (Height: 100-135CM, Weight:15-36kg)

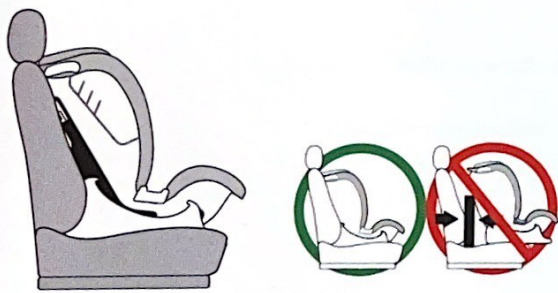

- Put the car seat forward facing on the seat and make sure that the front of the car seat is firmly pressed against the seat backrest.

■ Shoulder belt ■ Lap belt



- Place the child on the restraint system and adjust the height of the headrest. Make sure that the headrest is at the height of the child's shoulder and is fixed;
- Pull out the 3-point adult belt, the shoulder strap must pass through the headrest, and then pass through the belt slot **03** together with the lap belt, insert it into the buckle slot.

*** Make sure the car seat belt is not slack or twisted.**

*** When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system.**

5.1 Daily maintenance

- In daily use, check the car seat periodically. The car seat should be replaced after an accident.
- Please keep this car seat in dry and ventilated place to avoid damp moldy.
- If the car seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambience.
- If food or drink drop accidentally on the buckle, disassemble the seat belt from the car seat and rinse it gently by warm water. Leave it dry under ambience.
- For cleaning the entire car seat fabric cover, please refer to the 5.2 washing instruction.

5.2 Washing instruction

- Never use any solvent, chemical detergent or lubricant on any part of your child seat.



Hand wash, water temperature below 30°C



Do not bleach



Dry clean, any solvent except trichloroethylene.



Do not tumble dry




Do not iron

5.3 Remove and assemble the fabric cover

- Firstly, remove the crotch pad and buckle of the child seat and then remove the shoulder straps and comfortable cushion.
- Remove the fabric cover of the child seat.

*** To install the fabric cover, please operate follow the above instructions in reverse order.**

06 THE MAIN TECHNICAL PARAMETERS

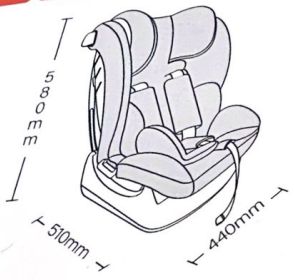

- Distance from front to back of the seat: 510mm
- Distance from left to right of the seat: 440mm
- Height of the seat: 580mm
- Weight of the seat: 5.9±0.5kg

Supplied by
Baby Factory (NZ) LTD
58 Stonedon Drive, East Tamaki, Auckland, 2013
09 274 4986
[WWW.babyfactory.co.nz](http://www.babyfactory.co.nz)