

CHILD INFORMATION
(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)
NAME:

.....

DATE OF BIRTH (DD/MM/YYYY):

.....

ADDRESS:

.....
.....
.....

ALLERGIES/MEDICAL CONDITIONS:

.....
.....
.....

EMERGENCY CONTACT 1:

NAME:

.....

PHONE NUMBER:

.....

EMERGENCY CONTACT 2:

NAME:

.....

PHONE NUMBER:


.....

IMPORTER: EURO STOCK TRADERS LTD
UNIT 25 PEDMORE ROAD INDUSTRIAL ESTATE, PEDMORE ROAD,
BRERLEY HILL, WEST MIDLANDS, DY9 1TJ UK
TEL: +44 (0)1902 494 905 Email: enq@cozynsafe.com

EU Authorised Representative Service
EURO STOCK VENTURE TRADERS LTD
UNIT 1.3 O'CONNELL SQUARE, EDENDERRY.CO. OFFALY,
R45 YR13 Republic of Ireland
TEL: +44 (0)1902 494 905 Email: enq@cozynsafe.com

COMET (T)

User Manual

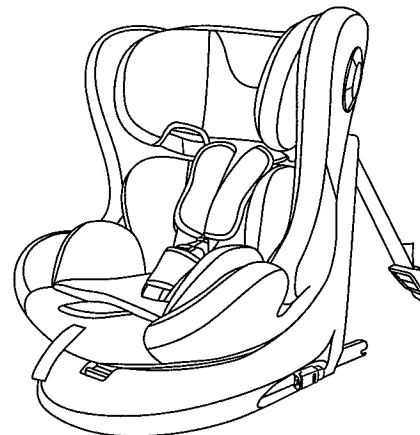

ECE R129-03

WWW.COZYNSAFE.COM

Please read this manual carefully before use!

Contents

1.Introduction.....	2
2.Warnings.....	3-4
3.Part list.....	5
4.Fitting options.....	6
5.Use in the vehicle.....	7
6.1 Height adjustment for head support and shoulder harnesses.....	8
6.2 Using the buckle.....	9
6.3 Unlock ISOFIX.....	9-10
6.4 Adjust the backrest angle.....	11
6.5 Instructions for seat rotation.....	11-12
7.1 Installation(40-105CM).....	12-17
(Children between 40 and 105 cm in height, ISOFIX + Top Tether + harness)	
7.2 Installation(76-105CM).....	18-21
(Children between 76 and 105cm in height, ISOFIX+Top Tether+ harness)	
7.3 Installation(100-150CM).....	21-26
(Children between 100 and 150cm in height, Only Vehicle belt or ISOFIX +Vehicle belt)	
8. Remove the fabric cover.....	26-27
9. Maintenance and cleaning.....	27-28
10.Warranty.....	28

1. Introduction

Congratulations on your purchase of COZY N SAFE car seat. Please read this instruction manual carefully before use.If you have any questions concerning the use of this child seat,please do not hesitate to contact us.

Notice

Notice regarding i-Size category Enhanced Child Restraint Systems (40-105cm)

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual. If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Notice regarding i-Size booster seat category Enhanced Child Restraint Systems(100-150cm)

This is an i-Size booster seat Enhanced Child Restraint System.It is approved according to UN Regulation No. 129, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer

"IMPORTANT – DO NOT USE FORWARD FACING BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (Refer to instructions)".

NOT TO USE REARWARD FACING ECRS IN SEATING POSITIONS WHERE THERE IS AN ACTIVE FRONTAL AIRBAG INSTALLED.

2. Warnings

For your child's safety, please read these instructions carefully before use and keep them for future reference. Failure to follow the instructions contained in this manual could result in serious injury to your child.

1. This child safety seat can only be used with the harness for children 40-105cm height.
2. This instruction manual can be retained in the special space of the child seat for its life period.
3. Do not use this child car seat at home. It has not been designed for home use and should only be used in your car.
4. Never leave your child unattended in the child restraint system even for a short time.
5. The child safety seat should be changed when it has been subject to violent stresses in an accident.
6. This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child safety seat may injure other occupants.
7. Always make sure that any straps holding the seat restraint to the vehicle shall be tight, any straps restraining the child should be adjusted to the child's body, and check that the straps shall not be twisted.
8. **IMPORTANT!** Ensuring that any lap straps is worn low down, so that the pelvis is firmly engaged.

9. Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint, when in doubt, please contact the child restraint manufacturer.

10. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

11. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle.

12. To prevent from fall, your child should always be fastened.

13. It is dangerous to make any alteration or additions to the device without the approval of the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.

14. This child safety seat is designed for children from 9 to 36 kg. Never overload the child safety seat more than one child or with other loads.

15. The child restraint must not be used without the cover.

16. The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.

17. Before you adjust any movable or adjustable parts of your child safety seat, you must remove your baby from the child safety seat.


18. The child safety seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.

19. Never use a second-hand product, as you can never be certain what has happened to it.





20. **Notice:** Do not use in any configuration not shown in the instructions.

21. **Importance!** Before using ISOFIX child restraint system, please read carefully the manual of automobile manufacturer about the instruction of ISOFIX fix point.

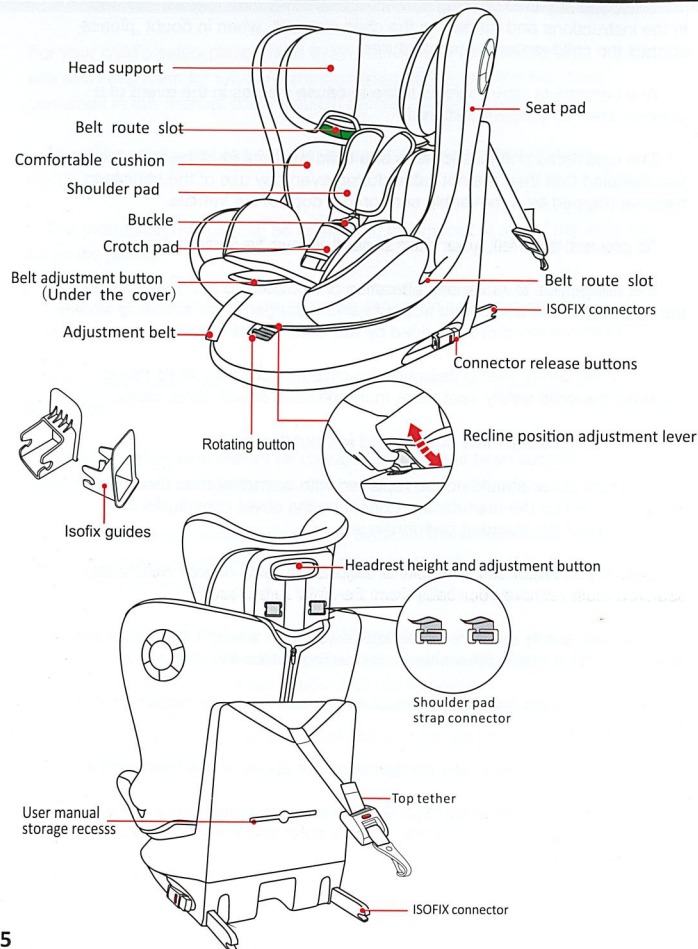
3. Part list

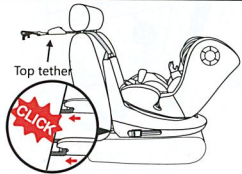

4. Fitting options

Tested and approved according to ECE R129/03 i-Size	
Body size Installation direction	Installation method
40-105cm ≤ 18kg rearward facing	 <p>Installation : isofix+top tether Securing the child: 5-point harness Recline Positon 4</p>
76-105cm ≤ 18kg forward facing	 <p>Installation : isofix+top tether Securing the child: 5-point harness Recline Positon 1,2,3</p>
100-150cm forward facing	 <p>Installation 1 : ISOFIX+Vehicle belt Securing the child: Vehicle belt Recline Positon 1</p>
	 <p>Installation 2 : Vehicle belt Securing the child: Vehicle belt Recline Positon 1</p>


5. Use in the vehicle

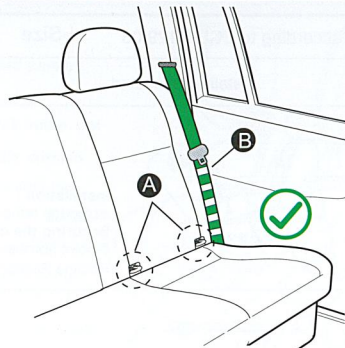

- A ISOFIX Attachments
- B 3-point Safety Belt

When using as i-Size

This ECRS system is suitable for vehicles equipped with the R16 requirements. And only after installed ISOFIX, then can use on it

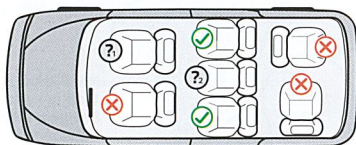


- ✓ You can install this position
- ✗ Unable to install the position
- ⓧ When front the of the seat with opened airbag, cannot install in this place.
- ⓧ Only with ISOFIX attachments can intall in this place.

6.1 Height adjustment for head support and shoulder harnesses

Please adjust the head support and check if the shoulder harnesses are at the correct height for your child.

Notice: When used rear facing and forward facing, the shoulder harness height must be even with or just above the child's shoulders

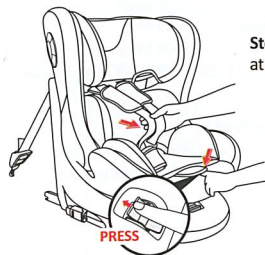


Step 1: Press the adjuster button under the cover and at the same time pull both shoulder straps forward.





Note! The height for the harness is adjusted by lifting the headrest.

Step 2: Pull the height adjuster to adjust the height of the harness and the headrest according to the child's height.

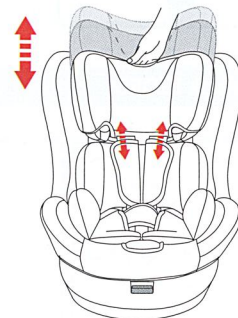

Step 3: Pull the adjuster strap until the harness is fully tightened.

6.2 Using the buckle

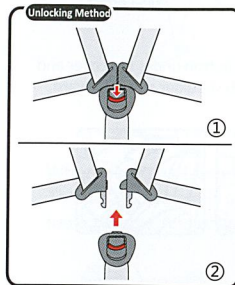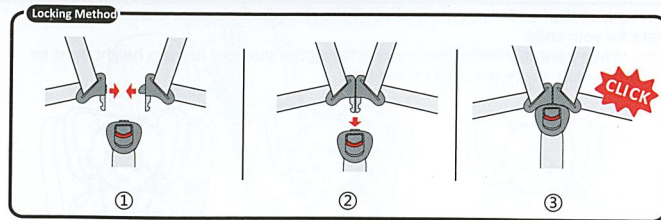


Locking Method:

Align the left and right buckle tongues to one tongue and insert into the buckle until you hear a "Click"

Unlocking Method:

You can press the red button of the buckle downwards, the two metal sections will be pop up.


6.3 Unlock ISOFIX

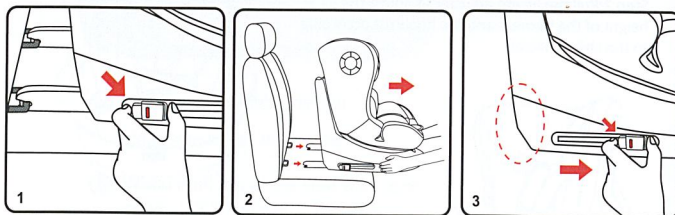


To remove from the vehicle press the ISOFIX adjuster button (fig.1) and pull the base back from the seat (fig.2)

Transit to prevent damage during. Press the ISOFIX adjuster button and fold the connector completely (fig.3)



In order to lock the isofix connector to the steel point successfully, it can use isofix guide.

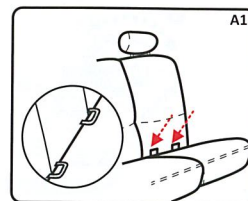

Step 1: Find out ISOFIX connection in the car.

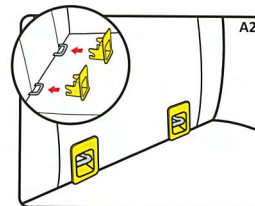

Step 2: Insert ISOFIX guides to assist with installation

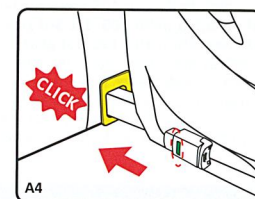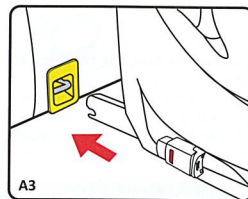


Step 3: Make sure that both ISOFIX connectors are securely attached to their ISOFIX anchor points.

Notice 1: Make sure that both ISOFIX connectors are securely attached to their ISOFIX anchor points. The colors of the indicators on the both ISOFIX connectors should be completely green

Notice 2: Check to make sure the base is securely installed by pulling on the both ISOFIX connectors.

6.4 Adjust the backrest angle

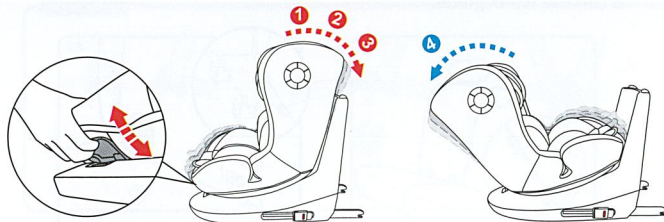

The forward and rearward installation of the safety seat has three adjustable angles. Please select the appropriate tilt angle according to the following different installation groups.

Rearward installation 40-105cm: 4th gear


Forward installation 76-105: 1st-3rd gear

Forward installation 100-150: 1st gear

NOTICE: When the safety seat is installed in rearward direction, the tilt angle can be adjusted in three gears, but only the 4th gear can be used.

How to use: lift up the angle adjusting handle under the front of the seat, then pull it forward or push it backward. When the desired gear is reached, release the angle adjusting handle, and finally push the seat until the "click" sound is heard.


6.5 Instructions for seat rotation

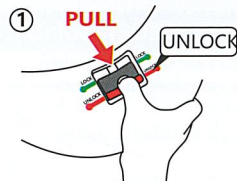

Step 1: Move the rotation lock button to the unlock position.

Step 2: Use another hand to rotate the child car seat.

NOTICE : Please pull the rotation lock button into the lock position again so that the child car seat is secure.

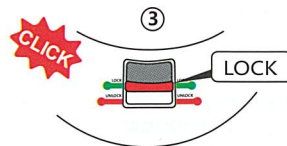

Step 3: When the "CLICK" is heard the base is locked.

NOTICE : Please make sure the seat is locked and can not rotate before driving

WARNING : Please take care when rotating the seat as your fingers could become trapped.




⚠ WARNING

- During driving, seat is not allowed to rotate to the side facing position. Side facing position will not protect the child in case a collision.
- Backrest can only be locked with base when turn to forward facing and rearward facing and it can not be locked when turn to the side.


7.1 Installation(40-105CM)

* Removing sleeping pad

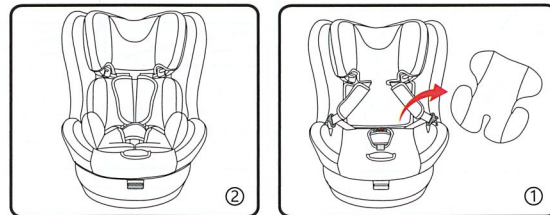


NOTICE: When your child's height exceed 75cm, remove the sleeping pad.


Installed in Rearward facing position with ISOFIX and top tether(40-105cm)

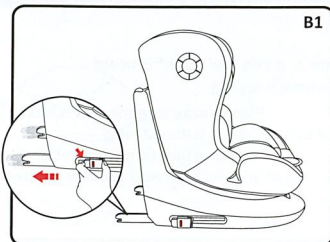


Step 1: Press the ISOFIX adjuster button to extend the ISOFIX(B1)

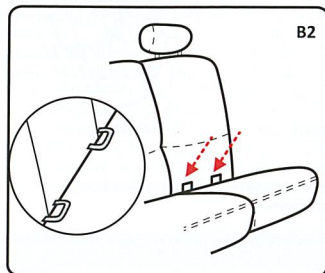


Step 2: Find out ISOFIX connection in the car(B2).

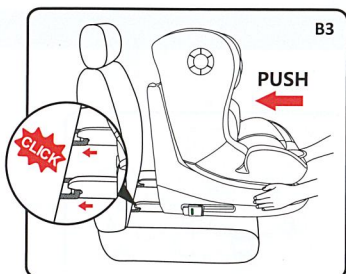

Step 3: Push child seat follow the direction ,until isofix connectors are completely locked with the connection device of car (B3).

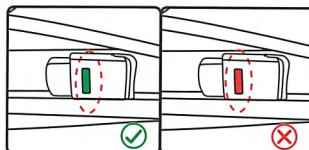


NOTICE: Make sure that both ISOFIX connectors are securely attached to their ISOFIX anchor points. The colors of the indicators on the both ISOFIX connectors should be completely green

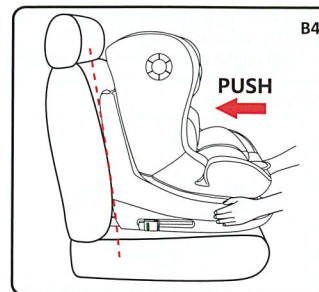


Step 4: child safety seat must be against the car seat firmly(B4) .


Notice: The child safety seat not be against the car seat, It is very dangerous.

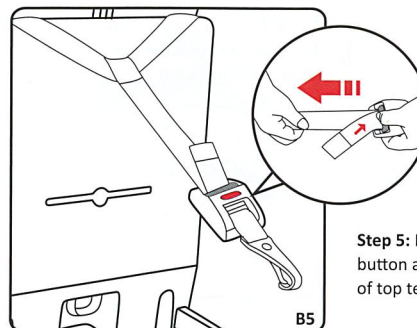



Step 5: Press the adjusting button and adjust the belt of top tether to the longest(B5).

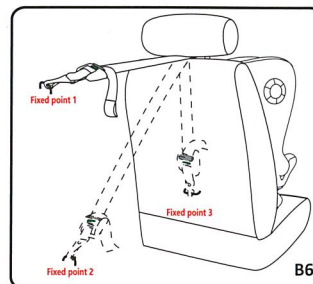




Step 6: Connect top tether with the fixing point on the car(B6)

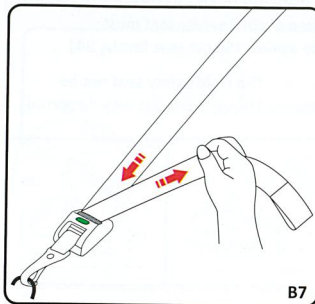


Step 7: String the belt of top tether until the adjuster shows green(B7).
⚠️ Roll up the extra ribbons and put them away to prevent baby from playing, It is very dangerous .

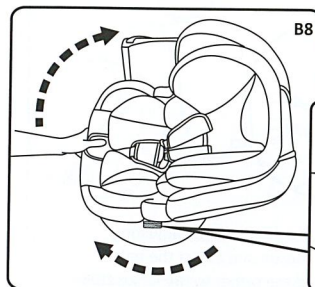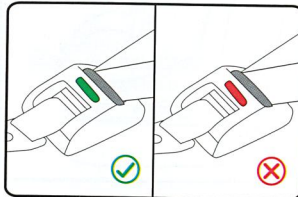


Step 8: Pull the button, rotate the baby car seat to the side facing position(B8,B9).

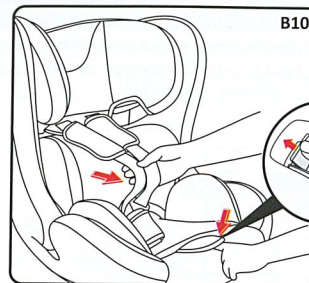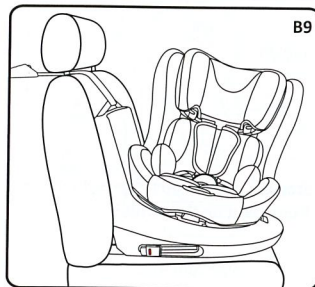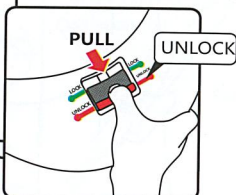

Step 9: Press the webbing adjustment button, while pulling out the shoulder harnesses to the proper length(B10)

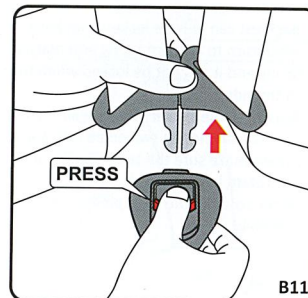


Step 10: Unlock the buckle of the harnesses by pressing the red button(B11)

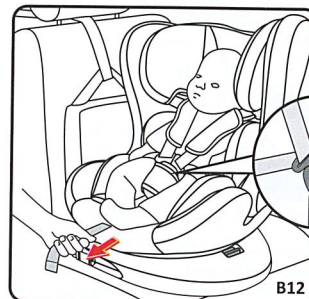

Step 11: Put the child into the seat and fasten the harness, then pull the adjuster strap until the harness is fully tightened(B12).



Notice 1: Check that the harness does not twisted.

Notice 2: During driving, seat is not allowed to rotate to the side facing position. Side facing position will not protect the child in case a collision.

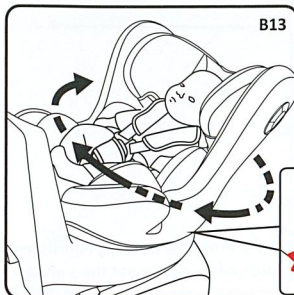

B13


Step 12: Use one hand to pull out the adjuster, meanwhile use the other hand to rotate the seat. Keep the seat in rearward position (B13).

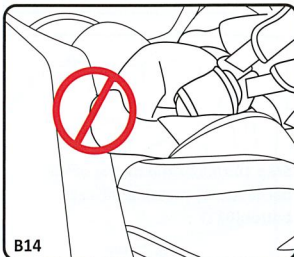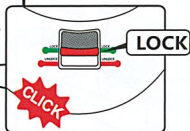

B14

! NOTICE:

1. backrest can only be locked with base when turn to forward facing and rearward facing and it can not be locked when turn to the side.
2. Please pull the swivel button again, when the seat can not be swivelled into place.
3. Please make sure the seat is locked and can not rotate before driving
4. When rotating the seat, please take care of the child's feet.

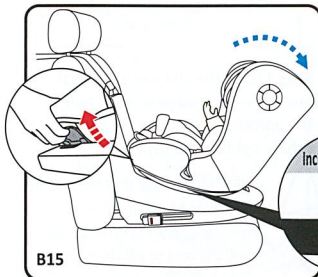

B15

Step 13: Finally, put the safety seat tilt angle adjustment to reverse 4th gear


NOTICE: When the safety seat is installed in rearward direction, the tilt angle can be adjusted in three gears, but only the 4th gear can be used.

Important -Do not using forward-facing before the child's weight exceeds 9 kg.


7.2 Installation(76-105CM)

Installed in forward facing position with ISOFIX and top tether(76-105cm)


IMPORTANT: Do not use forward facing before the child's age exceeds 15 months

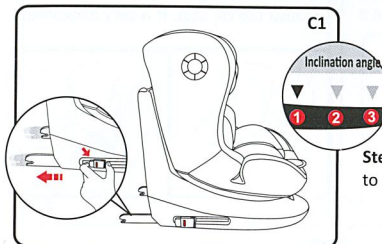


Step 1: Press the ISOFIX adjuster button to extend the ISOFIX (Fig.C1)

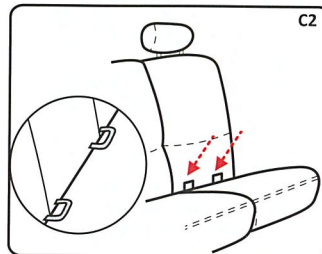


Step 2: Find out ISOFIX connection in the car (C2).

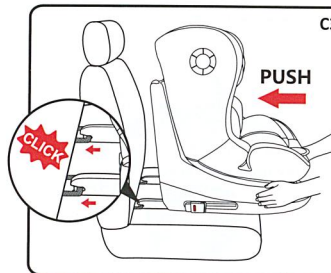

Step 3: Push child seat follow the direction, until ISOFIX connectors are completely locked with the connection device of car.

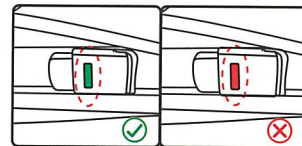



NOTICE: Make sure that both ISOFIX connectors are securely attached to their ISOFIX anchor points. The colors of the indicators on the both ISOFIX connectors should be completely green

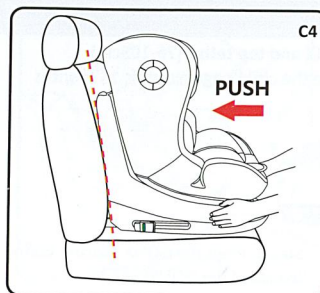

C4


Step 4: child safety seat must be against the car seat firmly(C4) .

Notice: The child safety seat not be against the car seat. It is very dangerous

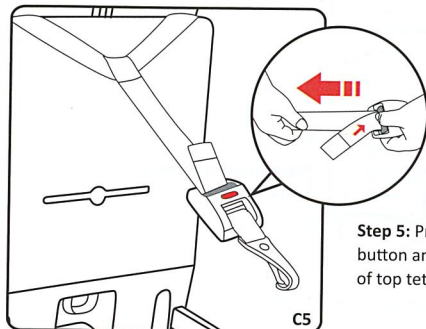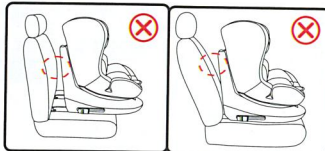


C5

Step 5: Press the adjusting button and adjust the belt of top tether to the longest(C5).

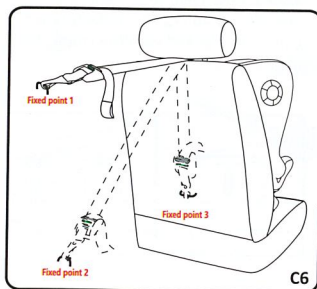



C6

Step 6: Connect top tether with the fixing point on the car

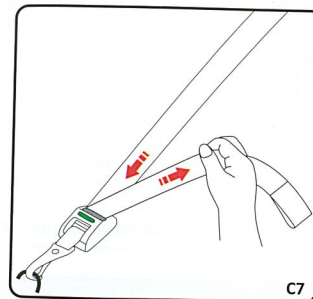


C7

Step 7: String the belt of top tether until the adjuster shows green(C7).
⚠️ Roll up the extra ribbons and put them away to prevent baby from playing. It is very dangerous .

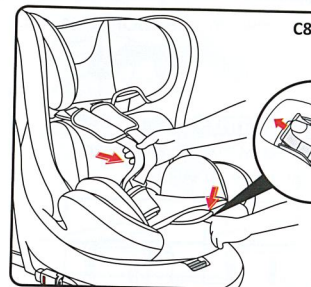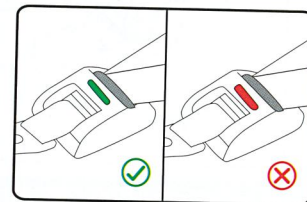


C8

Step 8: Press the webbing adjustment button, while pulling out the shoulder harnesses to the proper length(C8)

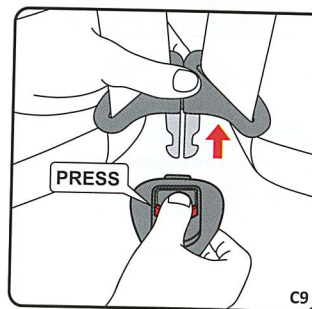

C9

Step 9: Unlock the buckle of the harnesses by pressing the red button(C9)

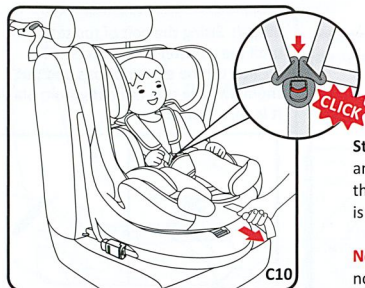


Step 10: Put the child into the seat and fasten the harness, then pull the adjuster strap until the harness is fully tightened(C10).

Notice: Check that the harness does not twisted.



7.3 Installation(100-150CM)

The baby car seat installation can choose to use ISOFIX or not.

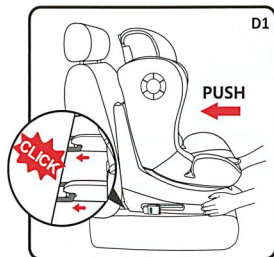


1.Using ISOFIX:

Connect ISOFIX with anchorage point on the car seat(D1)

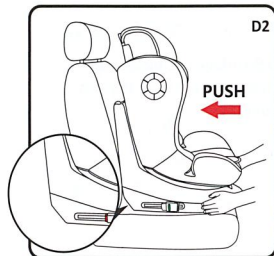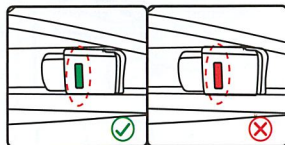


2.Not using ISOFIX:

Hide ISOFIX in the booster. Put the seat against the car seat(D2)

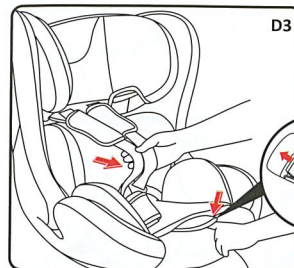

16.1 Hide 5-point harness system


Step 1: Press the webbing adjustment button, while pulling out the shoulder harnesses to the proper length(D3)

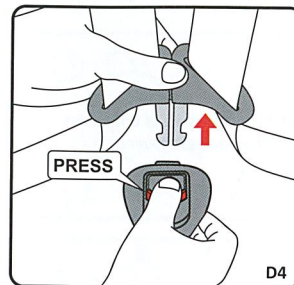


Step 2: Release the buckle(D4)




Step 3: Pass the seat belt in the direction of the arrow and remove the shoulder guards on both sides(D5).

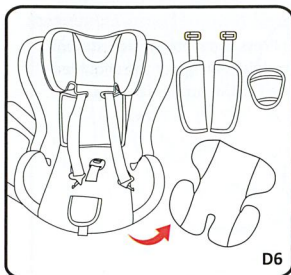


Step 4: keep the removed cushion and accessories well(D6).

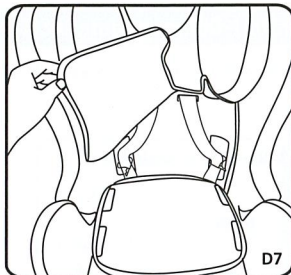

Step 5: Hide the strap of both sides behind the backrest cover.(D7).

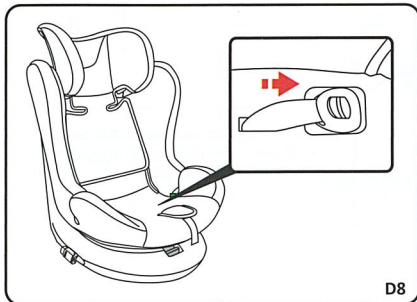

Step 6: Place the buckle in the booster (under the cover)(D8).

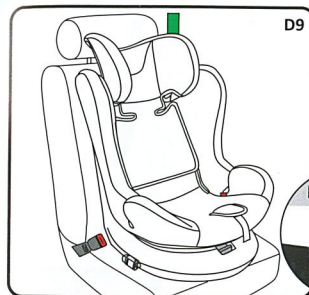


16.2 Securing the child


Step 1: Put the seat against the car seat(D9)

Notice: The child safety seat not be against the car seat. It is very dangerous


Notice: Adjust the seat angle to first gear.

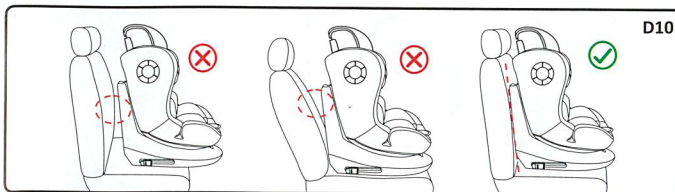

Step 2: Put the child in the seat (D11) and follow D12,D13 routine①②③ to securing the child.

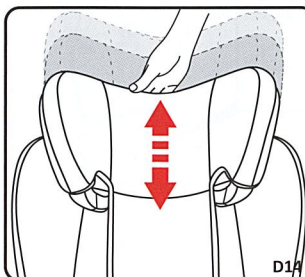


Step3:Use the height adjuster to adjust the height of the headrest according to the child's height. The gap between head belt guide and baby is 2 finger width. The harness straps should be level with or just above the child's shoulders (D14,D15).

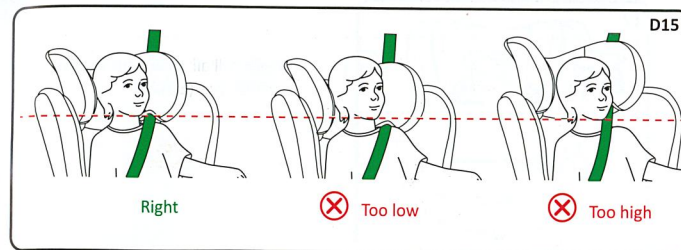


Step 4: Fasten vehicle belt and make sure, it is tight enough. (D16)

Important:Ensuring that any lap straps is worn low down,so that the pelvis is firmly engaged,shall be stressed.


8. Remove the fabric cover

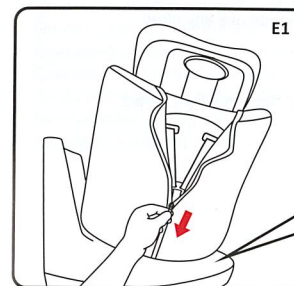

Step 1:Pull the button ,rotate the baby car seat to the side facing position(E1).

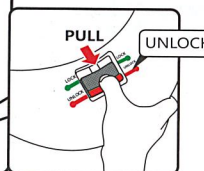

E2

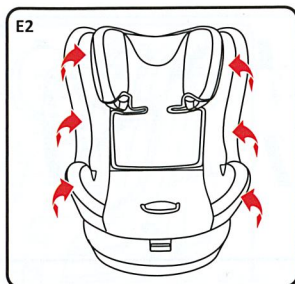

Step 3: pull all directions to take out the cover(E2).

※ Repeat the process in reverse to replace the cover.

9. Maintenance and cleaning

CARE AND MAINTENANCE

Periodically inspect your child seat for worn or damaged parts. If damaged parts are found, replace the child seat. Keep the child seat clean. Do not lubricate any parts of the child seat. To prolong the life of your nursery product, keep it clean and do not leave it in direct sunlight for extended periods of time. Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from direct sunlight.

CARE AND MAINTENANCE

Food, drink, or other debris may collect inside the harness buckle which can affect proper functioning. Wash in warm water until clean. Be sure you can hear an audible click to make sure the buckle is working properly.

CLEANING THE HARNESS AND SHELL

Sponge clean using warm water and mild soap; do not use any other cleaning agents.

STORAGE

Store in a safe, dry place and away from heat and direct sunlight. Avoid placing heavy objects on top of the seat.



Hand wash,
water
temperature
below 30°C



Do not bleach



Dry clean, any
solvent except
trichloroethylene



Do not tumble dry



Do not iron

10. Warranty

To activate the extended warranty for your COZY N SAFE products, please complete the warranty registration form provided on www.cozynsafe.com within 30 days of purchase or receipt. The initial 12-month warranty will then be extended to 24 months from the date of purchase and is applicable only to the original buyer; it cannot be transferred. Warranty claims are accepted only for products without existing warranty coverage. In case of defects, consumers should return the product to the retailer with a complete and detailed description of the issue, along with the valid purchase receipt. The retailer will then facilitate the return of the product to the manufacturer. Replacement or return of the product is not guaranteed. Maintenance of the product does not extend the warranty period. The manufacturer is not responsible for any damage resulting from misuse of the product.

Below situations can not warranty

Do not provide the complete valid purchasing receipt to the manufacturer.

Do not deviate from the instructions provided in the manual.

Operating or maintaining the product incorrectly may result in defects.

Carelessness can also lead to product defects.

Avoid damaging or erasing the product series number label.

Normal wear during daily use of the product is expected.

Failure to meet warranty requirements may result in denial of the warranty claim.