

NAME: _____

DATE OF BIRTH (DD/MM/YYYY): _____

ADDRESS: _____

ALLERGIES/MEDICAL CONDITIONS: _____

EMERGENCY CONTACT 1:	EMERGENCY CONTACT 2:
NAME: _____	NAME: _____
PHONE NUMBER: _____	PHONE NUMBER: _____

Cozy N Safe:


UNIT 25 PEDMORE ROAD INDUSTRIAL ESTATE, PEDMORE ROAD, BRIERLEY HILL, WEST MIDLANDS, DY5 1TJ, UK

EU Authorized Representative: Authorized Representative service,
EURO STOCK VENTURE TRADERS LTD UNIT 1, 3 O'CONNELL SQUARE, EDENDERRY, CO. OFFALY, R45 YR13 Republic of Ireland

Tel: +44 (0) 1902 494905 Fax: +44 (0) 1902490211 Email: enq@cozynsafe.com

Instruction Manual

COSMO i-Size
EST - 711B

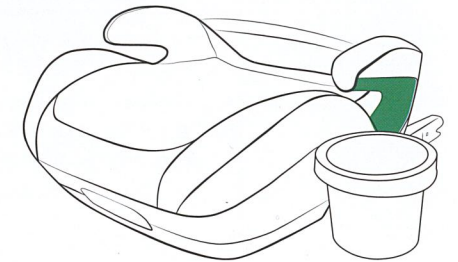

Suitable for children
125-150cm

Thank you for purchasing this car seat.

Please take the time to read and understand these instructions fully. Failure to follow these instructions may affect your child's safety.

If you are not completely satisfied with the car seat or you would like to change any accessory or obtain any help about the car seat, and you have any doubt, you can contact our customer services department.

Warranty Card

This warranty card is to confirm the warranty of this product for a period of 12 months from the date of purchase.

Please retain your 'Proof of Purchase' for the warranty period and present this to the retailer/manufacture if and when required.

Contents

Notice	02
Vital information-READ NOW	03
Safety notice	05
Child seat parts introduction	06
Installation method	07
Detach from car seat	10
Adjust the recline, position	11
Maintenance and cleaning	12

01

Notice


Notice

This is a Universal booster cushion Enhanced child Restraint system. It is approved according to UN Regulation No.129 or use in i-size compatible and universal vehicle seating positions as indicated by vehicle manufacturer in the vehicle user's manual. If in doubt, consult the Enhanced Child Restraint System manufacturer or the retailer.

Vital information-READ NOW

- The rigid components and plastic parts of an Enhanced Child Restraint System must be positioned and installed so they are not at risk of being trapped by a movable seat or vehicle door during normal use.
- Straps securing the restraint to the vehicle must be tightened, support legs should be in contact with the vehicle floor, and any straps or impact shields restraining the child should be adjusted properly to fit the child's body. Straps should never be twisted.
- Ensure that the lap strap is positioned low on the child's body.
- It is dangerous to modify or add to the device without approval from the Type Approval Authority, and equally important to strictly follow the installation instructions provided by the manufacturer.
- Never leave children unattended in their Enhanced Child Restraint System.
- Secure all luggage or objects that could cause injury in the event of a collision.
- Do not use the Enhanced Child Restraint System without its cover.
- Only use the cover recommended by the manufacturer, as it is an integral part of the system's safety performance.

DIRECTION	SIZE RANGE	INSTALLATION METHOD TYPE	TYPE
Forward facing	125-150CM	ISOFIX+3-point Belt	Universal booster cushion
Forward facing	125-150CM	3-point Belt	Universal booster cushion

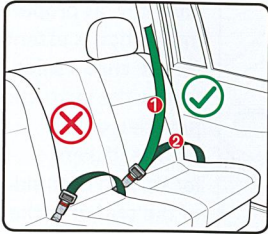

⚠ WARNING
Only suitable if the approved vehicles are fitted with 3 point safety belts.approved to UN/ECE Regulation No.16 or other equivalent standards.

- ① Diagonal belt
- ② Lap belt


The vehicle rear seat is the most safe position for kids under 12 years This child seat must be installed with forward facing.Rearward facing and sideward facing is strictly prohibited.Do not install the child safety seat at the front seat with airbag

✔ You can install this position
✘ Unable to install the position
② Do not install the child safety seat at the front seat with air bag.
② Only with the three point safety belt can this location.


⚠ WARNING

Please read the instruction manual carefully before use.Incorrect installation could cause serious injury.if in this case,the manufacturer shall not be responsible for any kind of responsibility.

Safety notice

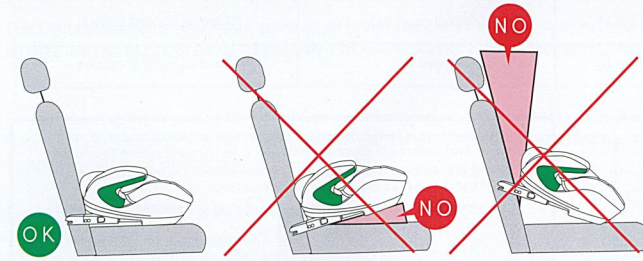


Ensure that the safety seat is installed correctly, as proper installation is essential for the child's safety. Follow the instructions provided on the belting stickers located on both sides of the seat or in the instruction manual for correct installation.

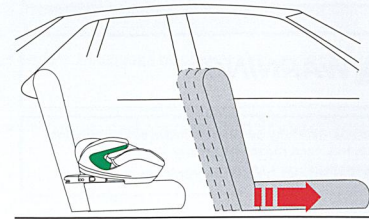

Move the front seat as far forward as possible to provide sufficient legroom for the baby, ensuring a comfortable space.

05

Child seat parts introduction

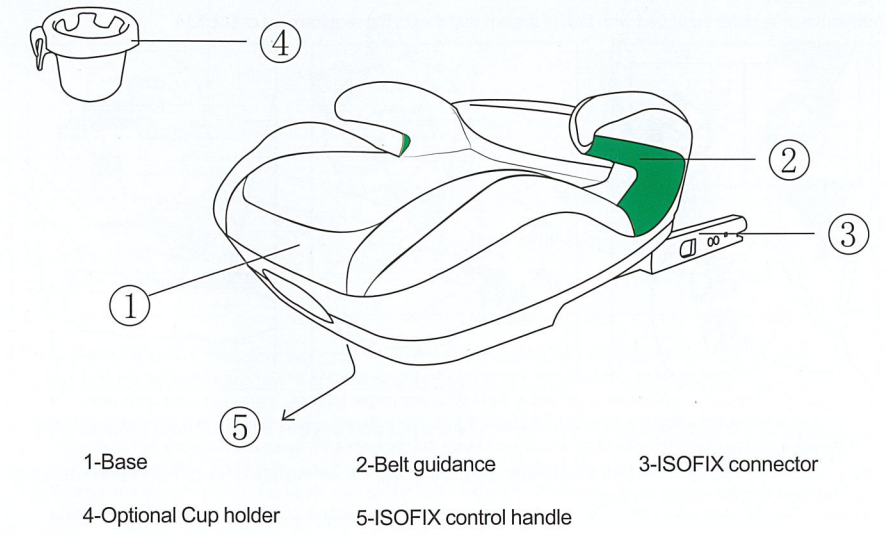


06

Installation method

ISOFIX+3 point safety belt

Applicable to vehicles equipped with ISOFIX system that meets the requirement of ECE R14.

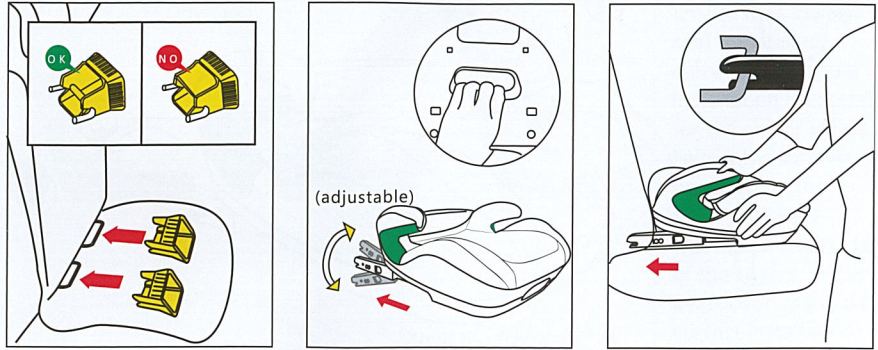


- 1) Locate the ISOFIX anchorage points in your vehicle, and attach the two guide sleeves to these points to assist with the installation.
- 2) Pull the handle to extend the ISOFIX connectors, and slide them outward to adjust the connectors on both sides of the seat to their maximum length.
- 3) Connect the ISOFIX connectors on the seat to the vehicle's ISOFIX anchorage points until you hear a "click."

****Tip:** For the location of the ISOFIX anchorage points, refer to your vehicle's user manual or contact the car manufacturer or your local dealer.

07

3 point safety belt

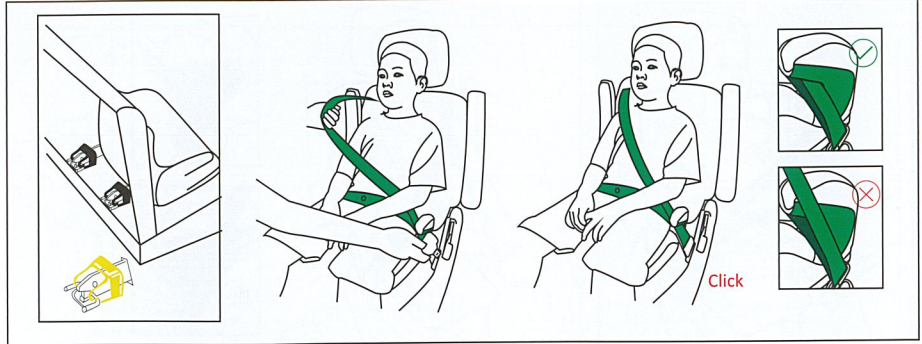


- 1) Adjust the length of the safety belt guide hook. The car's shoulder belt should pass through the guide hook and over the top of the armrest, while the waist belt should pass through the guide groove.
- 2) Have the child sit in the safety seat and adjust the safety belt guide hook according to the child's height.
- 3) Pull out the car's 3-point safety belt. The shoulder belt should pass through the guide hook and over the armrest, while the lap belt should pass through the guide grooves on both sides of the seat. Secure the belt into the car's buckle, and ensure you hear a "click" sound to confirm the buckle is properly locked.
- 4) Retract and tighten the car seat belt. Adjust the belt's tightness according to the child's size. Ensure the belt is not twisted, and position the waistband as low as possible on the child's pelvis for better fixation.

08

3 point safety belt


Suitable for vehicles equipped with an ISOFIX system that complies with ECE R14 requirements.

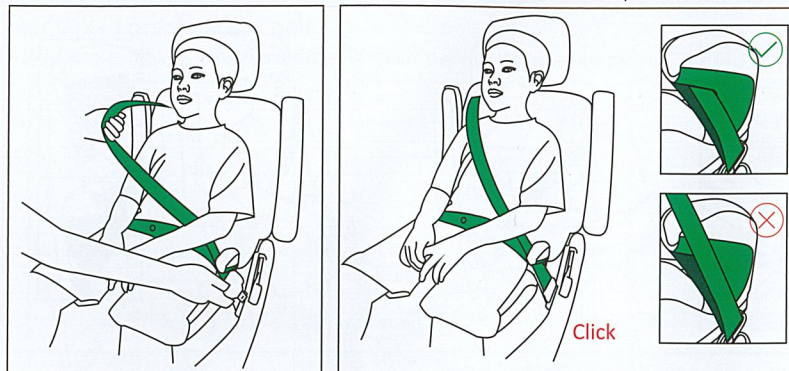

- 1) Ensure that the ISOFIX connector of the safety seat is retracted into the base. Place the safety seat on both sides of the rear row.
- 2) Have the child sit in the safety seat and adjust the length of the safety belt guide hook according to the child's height.
- 3) Pull out the car's 3-point safety belt. The shoulder belt should pass through the guide hook and over the armrest, while the lap belt should pass through the guide grooves on both sides of the seat. Secure the belt into the car's buckle, and ensure you hear a "click" sound to confirm the buckle is securely locked.
- 4) Retract and tighten the car seat belt. Adjust the belt's tightness according to the child's size. The belt must not be twisted. Ensure the lap belt is positioned as low as possible on the child's pelvis to provide better fixation.

09

Detach from car seat

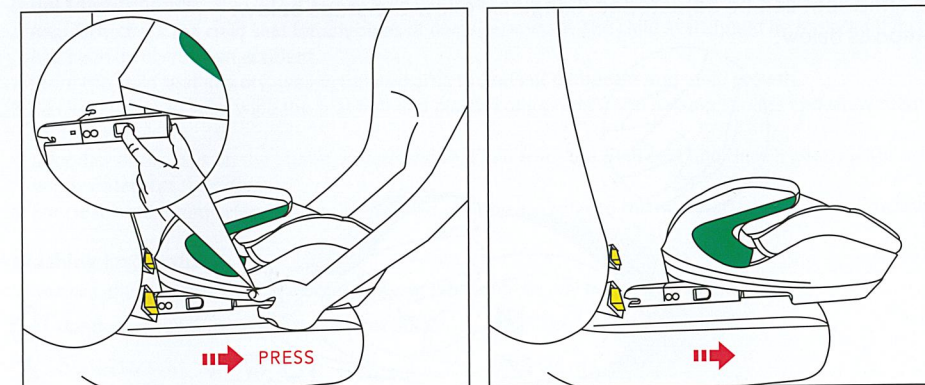


- 1) As shown in the image above, press the ISOFIX unlock switch with both hands. The ISOFIX lock indicator will turn red, indicating that it is unlocked.
- 2) Pull the safety seat outward to remove it from the vehicle.

10

Adjusting the recline position

The child seat can be adjusted to 4 angles. Follow the steps below:

Method as below:

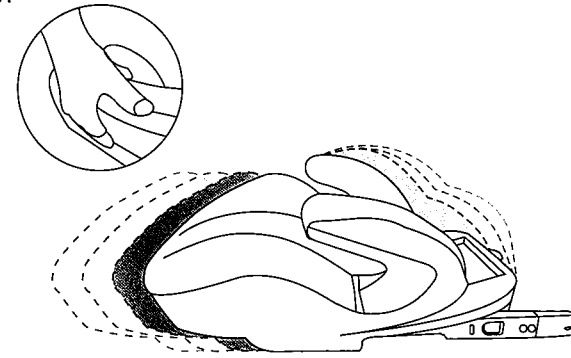

1. With one hand, press the front of the seat and pull back the seat angle adjustment handle (part no. 14).
2. Push the seat backwards in the direction of the arrow to adjust the angle.
3. Release the handle once the seat reaches the desired recline angle.

11

Maintenance and cleaning

Daily Maintenance:

1. Regularly check the child seat for any signs of damage or wear. The child seat should be replaced if it has been involved in an accident.
2. Store the child seat in a dry, well-ventilated area to prevent dampness and mold growth.
3. To clean the child seat, wipe the seat belt and plastic components with a damp sponge and allow them to dry naturally.
4. If food or drink spills on the buckle, detach the seat belt from the child seat and rinse it gently with warm water. Let it air dry.
5. For cleaning the entire fabric cover of the child seat, please refer to the manufacturer's care instructions.

Washing Instructions:

Never use any solvents, chemical detergents, or lubricants on any part of the child seat.

- | | |
|--|---|
|  Hand wash, water temperature below 30° C |  Do not tumble dry |
|  Do not bleach |  Do not iron |
|  Dryclean, any solvent except trichloroethylene | |

Remove and assemble the fabric cover

1. First, remove the crotch pad and buckle of the child seat, followed by the shoulder straps and comfort cushion.
2. Remove the fabric cover from the child seat. To reinstall the fabric cover, simply reverse the steps outlined above.

12