

CHILD INFORMATION
(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)
NAME:

.....

DATE OF BIRTH (DD/MM/YYYY):

.....

ADDRESS:

.....

.....

ALLERGIES/MEDICAL CONDITIONS:

.....

.....

.....

EMERGENCY CONTACT 1:

NAME:

.....

PHONE NUMBER:

.....

EMERGENCY CONTACT 2:

NAME:

.....

PHONE NUMBER:

.....

IMPORTER: EURO STOCK TRADERS LTD
UNIT 25 PEDMORE ROAD INDUSTRIAL ESTATE, PEDMORE ROAD,
BREKLEY HILL, WEST MIDLANDS, DY5 1JLK,
TEL: +44 (0)1902 494 905 Email: eng@cozynsafe.com

EU Authorised Representative Service
EURO STOCK VENTURE TRADERS LTD
UNIT 1, 3 O'CONNELL SQUARE, EDENDERRY, CO. OFFALY,
R19 YR3 Republic of Ireland
TEL: +44 (0)1902 494 905 Email: eng@cozynsafe.com

Vesta i-Size

User Manual



ECE R129-03

WWW.COZYNSAFE.COM

Please read this manual carefully before use!

Contents

1.Introduction.....	2-3
2.Warnings.....	4-5
3.Part list.....	6
4.Fitting options.....	7
5.1 Installing the insert.....	8
5.2 Adjusting the safety harness.....	9-10
5.3 Headrest height.....	10-11
5.4 Backrest angle of incline adjustment mechanism.....	11
5.5 Rotating the seat.....	12
6.1 Installation using the ISOFIX system.....	13-14
6.2 Installing the "Top Tether".....	14-16
6.3 Installation in the vehicle.....	16-22
(Children between 40 and 105 cm in height, ISOFIX + Top Tether + harness)	
(Children between 76 and 105cm in height, ISOFIX+Top Tether +harness)	
(Children between 100 and 150cm in height, ISOFIX+ Vehicle belt)	
(Children between 100 and 150cm in height, only Vehicle belt)	
7. Stowing away the five-point safety harness.....	22-23
8.1 Removing the car seat (ISOFIX system).....	23
8.2 Removing the cover.....	24
9. Maintenance and cleaning.....	25
10.Warranty.....	26

1. Introduction

Congratulations on your purchase of COZY N SAFE car seat. Please read this instruction manual carefully before use.If you have any questions concerning the use of this child seat,please do not hesitate to contact us.

Notice

Notice regarding i-Size category Enhanced Child Restraint Systems (40-105cm)

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual.If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Notice regarding i-Size booster seat category Enhanced Child Restraint Systems(100-150cm)

This is an i-Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

"IMPORTANT – DO NOT USE FORWARD FACING BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (Refer to instructions)".

NOT TO USE REARWARD FACING ECRS IN SEATING POSITIONS WHERE THERE IS AN ACTIVE FRONTAL AIRBAG INSTALLED.


Please read all the instructions in this manual before installing and using the product.

**! IMPORTANT: KEEP FOR FUTURE REFERENCE.
PLEASE READ CAREFULLY.**


Please keep the instruction manual in the storage compartment at the bottom of the base as right figure.

or

Please keep the instruction manual at the bottom of the soft goods.

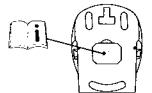

NOTE: The product graphics are for illustrative purposes!

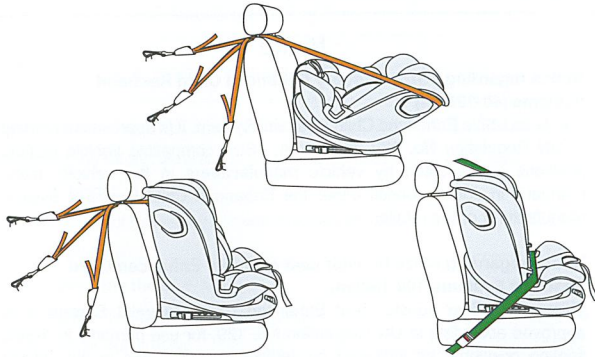

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No.129/03, for use in i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Do not position the seat forward-facing until the child is 15 months old and 76 cm tall.

The car seat can be installed in the car in the positions indicated by the manufacturer in the vehicle manual. It is required to read the vehicle user's manual.

Please refer to the chart on the next page for correct installation instructions.

2. Warnings

For your child's safety, please read these instructions carefully before use and keep them for future reference. Failure to follow the instructions contained in this manual could result in serious injury to your child.

1. This child safety seat can only be used with the harness for children 40-105cm height.
2. This instruction manual can be retained in the special space of the child seat for its life period.
3. Do not use this child car seat at home. It has not been designed for home use and should only be used in your car.
4. Never leave your child unattended in the child restraint system even for a short time.
5. The child safety seat should be changed when it has been subject to violent stresses in an accident.
6. This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child safety seat may injure other occupants.
7. Always make sure that any straps holding the seat restraint to the vehicle shall be tight, any straps restraining the child should be adjusted to the child's body, and check that the straps shall not be twisted.
8. **IMPORTANT!** Ensuring that any lap straps is worn low down, so that the pelvis is firmly engaged.

9. Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint ,when in doubt ,please contact the child restraint manufacturer.

10. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

11. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable,during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle.

12. To prevent from fall, your child should always be fastened.

13. It is dangerous to make any alteration or additions to the device without the approval of the competent authority,and a danger of not following closely the installation instructions provided by the child restraint manufacturer.

14. This child safety seat is designed for children from 9 to 36 kg.Never overload the child safety seat more than one child or with other loads.

15. The child restraint must not be used without the cover.

16. The seat cover should not be replaced with any other than the one recommended by the manufacturer,because the cover constitutes an integral part of the restraint performance.

17. Before you adjust any movable or adjustable parts of your child safety seat,you must remove your baby from the child safety seat.



18. The child safety seat should be kept away from sunlight if the seat is not provided with a textile,otherwise it may be too hot for the child's skin.

19. Never use a second-hand product,as you can never be certain what was happened to it.







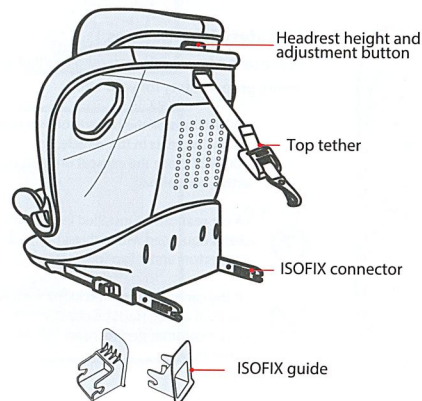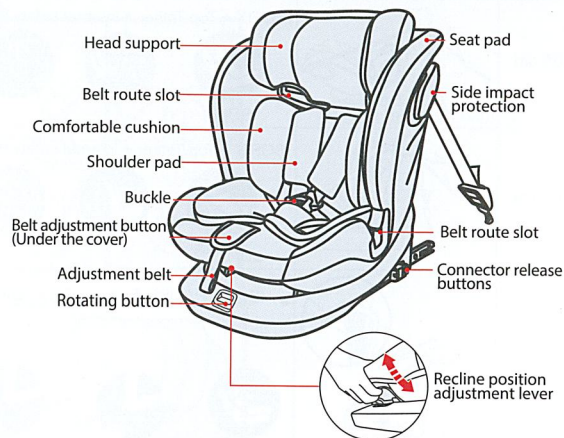





20.**Notice:** Do not use in any configuration not shown in the instructions.

21. **Importance!** Before using ISOFIX child restraint system,please read carefully the manual of automobile manufacturer about the instruction of ISOFIX fix point.

3. Part list








4. Fitting options

Child's height	Car seat orientation	Car seat installation	
40-105 cm		ISOFIX + Top Tether + internal safety harness  +  + 	
76-105 cm		ISOFIX + Top Tether + internal safety harness  +  + 	
100 – 150 cm		ISOFIX+Vehicle Belt  + 	Only Vehicle belt 




1.1 Safety Instructions

Please take a few minutes to read this instruction manual to ensure proper safety for your child.


-  • DO NOT install the car seat on rearward facing or sidefacing seats in the vehicle.
-  • DO NOT place the car seat on seats equipped with an active front airbag.
-  • A car seat can be installed in the middle seat only if the seat is equipped with a three-point car seat belt, ISOFIX connectors and a Top Tether strap.
-  • If the car seat is installed in the front seat of the vehicle, the front airbag must be deactivated.
-  • It is recommended to install the seat only in the rear seats of the car.

5.1 Installing the insert


Use the additional insert until the child reaches 76 cm.

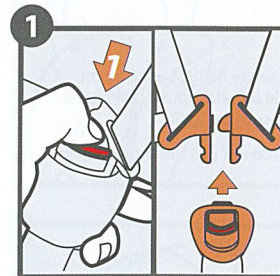

1. Detach the safety harness

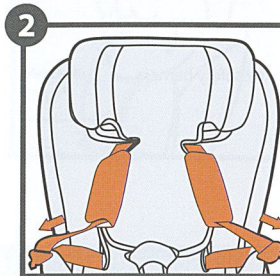


2. Move the seat belt to the sides of the car seat

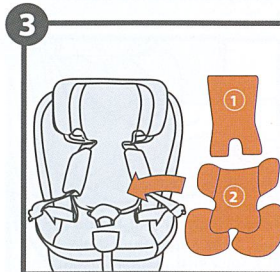

3. Put the insert in place


5.2 Adjusting the safety harness

Securing the child with the internal safety harness

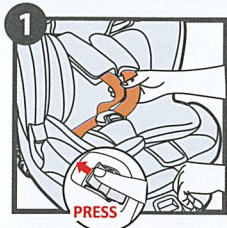


1. Press the safety harness adjustment button while simultaneously pulling the safety harness to the limit.

Remember: do not pull the shoulder pads.

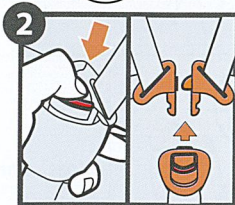


2. Unbuckle the safety harness

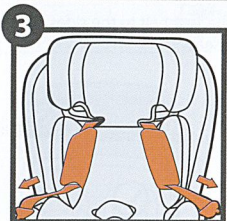


3. Move the safety harness to the sides of the car seat



4. Place the child in the car seat, Fasten the safety harness, Then adjust the safety harness to the child by pulling the safety harness adjuster strap

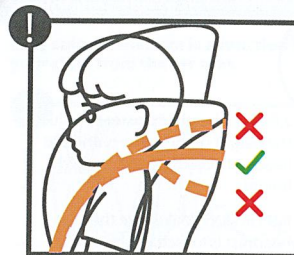


The appropriate height of the shoulder straps should be set so that the belt enters the backrest of the seat flat, horizontally just above the child's shoulders.

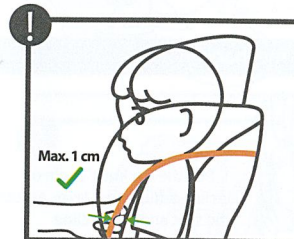

Make sure that the straps are tightened so that there is no more than 1cm of slack between them and the child.

IMPORTANT! Make sure the safety harness is not twisted.

5.3 Headrest height

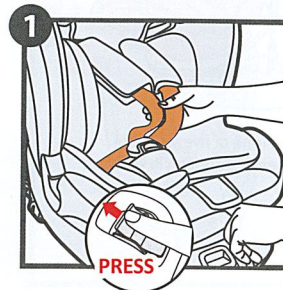

1. Press the adjuster button under the cover and at the same time pull both shoulder straps forward. Remember! Do not pull on the shoulder pads

2



2. Pull the height adjuster to adjust the height of the harness and the headrest according to the child's height

IMPORTANT: Make sure the seat headrest is locked in place

5.4 Backrest angle of incline adjustment mechanism



1. Pull the backrest angle of incline adjustment lever Adjust the seat angle of incline

2. Release the lever in the required position (one of five available options), Move the seat slightly until you hear a distinct "click" sound

Suitable position:

Rearward facing 40-105cm: position rearward


Forward facing 76-105cm: position 1-4

Forward facing 100-150cm: position 1

5.5 Rotating the seat

Easy spin mechanism is a function that helps you comfortably place or remove your child from the car seat.

1

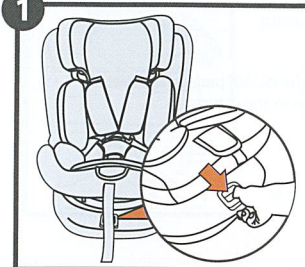

1. Pull the car seat easy spin lever

2



2. Rotate the car seat to the side of your choice. You will hear a "click" indicating that the car seat is locked in the selected position


3



3. Place your child in the car seat and secure the child with the safety harness

Pay attention to the audible sound of the rotation lock


6.1 Installation using the ISOFIX system

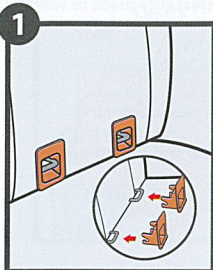

1. Attach the ISOFIX pads to the seat connectors in the vehicle.



2. Place the Top Tether strap on the headrest and do not block access to it at a later stage of the car seat installation.

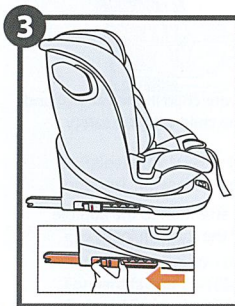


3. Press both sides of the ISOFIX release button and extend the ISOFIX connector arms to their maximum length.

13




4. Grip the car seat with two hands and slide both latches into the car seat mountings. When you hear the "click" of each ISOFIX latches, push the car seat against the backrest by applying firm, even pressure on both sides.


 Pay attention to the sound of ISOFIX connectors snapping and grasp the car seat and check if it is securely fastened and if it is not too loose. If it moves and the ISOFIX latches slip out, repeat the previous steps.

NOTE: The locking latches are only properly attached when both button indicators are completely green.

6.2 Installing the "Top Tether"

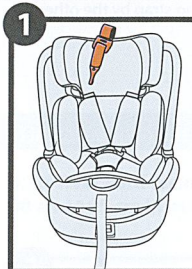


1. Pull out the Top Tether strap

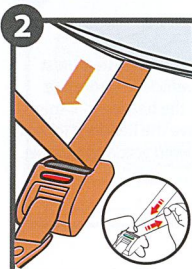


2. Press the buckle release button to loosen it (the length of the strap must allow the hook to be placed to the installation point located at the rear of the vehicle seat or in the trunk).

14

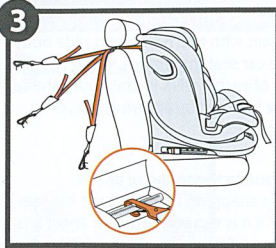


3. Attach the mounting hook of the strap to the vehicle's attachment point (it is necessary to refer to the vehicle's manual).

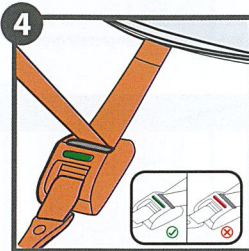

4. Pull the mounting strap by the other end to tighten it.




IMPORTANT: The Top Tether strap must not pass over the vehicle's headrest. It should pass under the headrest - if this is not possible, remove the headrest (check whether this is allowed according to the vehicle's manual).

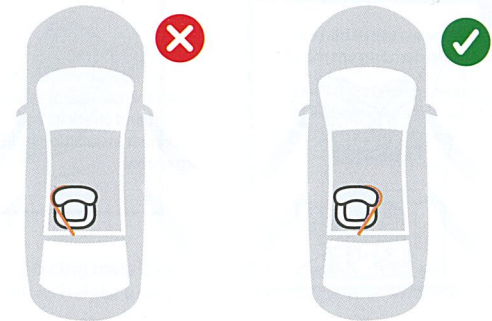

REMARK! To use the rotation system, the Top Tether belt must be mounted on the inside of the vehicle (opposite side from the door)

6.3 Installation in the vehicle

6.3.1 Rearward facing installation of the car seat for children between 40 and 105 cm in height using the ISOFIX + Top Tether + harness.

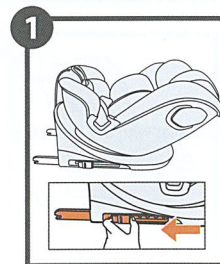


1. Install the car seat on the seat using the ISOFIX connectors rearward facing (if the car seat is already installed using the ISOFIX connectors, change its position using the easy spin mechanism).

2




2. Push the car seat as far as possible into the seat and check its correct installation - the correct installation indicators should turn green.

3

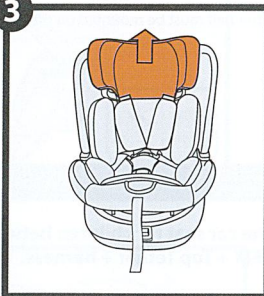


3. Adjust the headrest to the child's height.

4

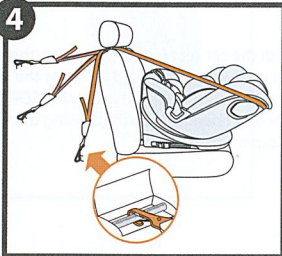

4. Secure the car seat with the Top Tether strap.

5

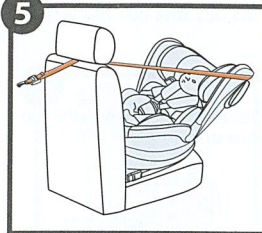


5. Place the child in the car seat, Secure the child with the internal safety harness.

IMPORTANT: If the child has already reached 76 cm, remove the insert before placing the child in the car seat.

6.3.2 Forward facing installation of the car seat for children between 76 and 105 cm in height using the ISOFIX+Top Tether +harness.

1

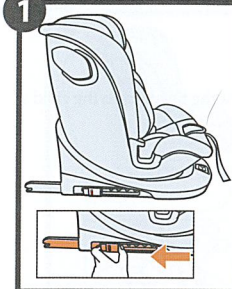


1. Install the car seat forward-facing using the ISOFIX connectors. If the car seat is already installed using the ISOFIX connectors, change its position to forward-facing using the easy spin mechanism.


2




2. Push the car seat as far as possible to the seat of the vehicle and check its installation - the correct installation indicators should turn green.

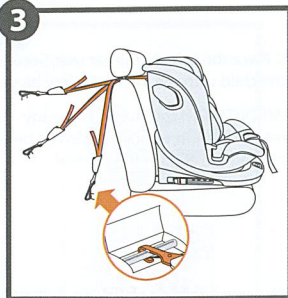

3. Secure the car seat with the Top Tether strap.

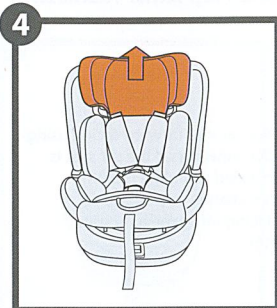


4. Adjust the headrest to the child's height.

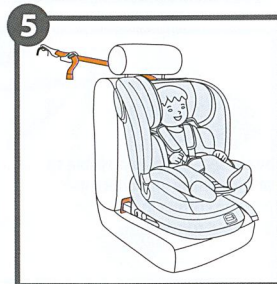

5. Place the child in the car seat, Secure the child with the internal safety harness


6.3.3 Forward facing installation of the car seat for children between 100 and 150 cm in height using the ISOFIX+ Vehicle belt.

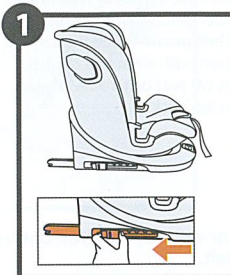

1. Install the car seat forward-facing on the seat of the vehicle using the ISOFIX connectors.



2. Push the car seat as far as possible to the seat of the vehicle and check its installation - the correct installation indicators should turn green.

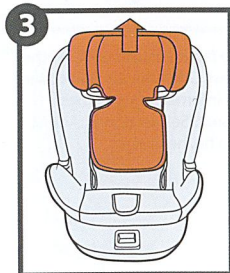

3. Unfasten the fasteners and uncover the car seat backrest, Open the car seat cover and fasten the internal safety harness inside the car seat.(See section 4.0), Adjust the headrest to his/her height.




4. Place the child in the car seat. Guide the shoulder belt through the green shoulder belt guide. Guide the car seat belt through both waist belt guides. Fasten the car seat belt. You will hear a characteristic "click".

6.3.4 Forward facing installation of the car seat for children between 100 and 150cm in height using Vehicle belt.



1. Push the car seat to the seat. (without using the ISOFIX system)

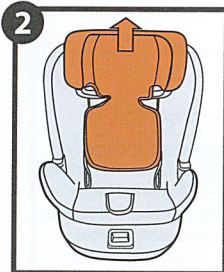


2. Unfasten the fasteners and uncover the car seat backrest, Open the car seat cover and fasten the internal safety harness inside the car seat. (See section 7), Adjust the headrest to his/her height.




3. Place the child in the car seat. Guide the shoulder belt through the green shoulder belt guide. Guide the car seat belt through both waist belt guides. Fasten the car seat belt. You will hear a characteristic "click".


7. Stowing away the five-point safety harness

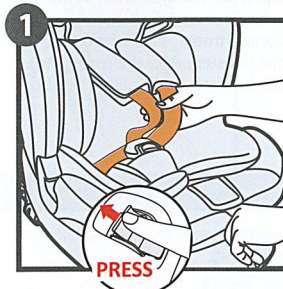

1. Loosen the safety harness fully by pressing the button and pulling the safety harness. Remember: do not pull the shoulder pads.

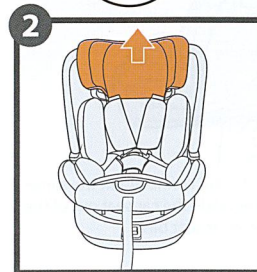

2. Place the headrest in the highest position

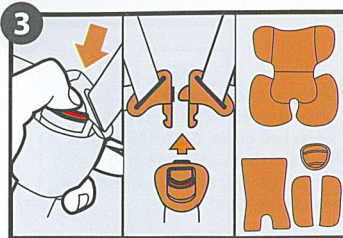


3. Unfasten the buckle, Remove the shoulder pads and buckle pad .




4. Unfasten the fasteners and uncover the backrest of the car seat, Open the storage cover, Put the safety harness into the storage compartment , Place the buckle in the booster (under the cover). Adjust the headrest to the child's height.

8. Remove the child car seat and the fabric cover

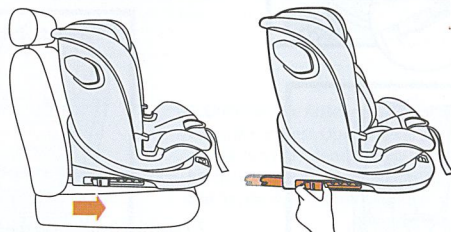


Press the ISOFIX release buttons on both arms of the ISOFIX connector at the same time (the colour of the indicators should turn red), Then slide the car seat out of the ISOFIX guides while slide the ISOFIX arms back into the car seat base

8.2 Removing the cover

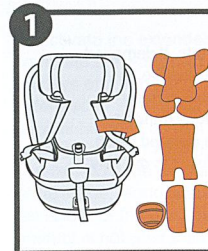

1. Move the headrest to the highest position. Remove the insert, shoulder pads and buckle pad

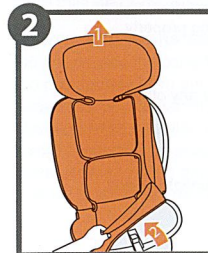

2. Remove the fabric from the car seat by putting

REMARK! To replace the cover please follow the steps in reverse

CARE AND MAINTENANCE

Periodically inspect your child seat for worn or damaged parts. If damaged parts are found, replace the child seat. Keep the child seat clean. Do not lubricate any parts of the child seat. To prolong the life of your nursery product, keep it clean and do not leave it in direct sunlight for extended periods of time. Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from direct sunlight.

CARE AND MAINTENANCE

Food, drink, or other debris may collect inside the harness buckle which can affect proper functioning. Wash in warm water until clean. Be sure you can hear an audible click to make sure the buckle is working properly.

CLEANING THE HARNESS AND SHELL

Sponge clean using warm water and mild soap; do not use any other cleaning agents.

STORAGE

Store in a safe, dry place and away from heat and direct sunlight. Avoid placing heavy objects on top of the seat.



To activate the extended warranty for your COZY N SAFE products, please complete the warranty registration form provided on www.cozynsafe.com within 30 days of purchase or receipt. The initial 12-month warranty will then be extended to 24 months from the date of purchase and is applicable only to the original buyer; it cannot be transferred. Warranty claims are accepted only for products without existing warranty coverage. In case of defects, consumers should return the product to the retailer with a complete and detailed description of the issue, along with the valid purchase receipt. The retailer will then facilitate the return of the product to the manufacturer. Replacement or return of the product is not guaranteed. Maintenance of the product does not extend the warranty period. The manufacturer is not responsible for any damage resulting from misuse of the product.

Below situations can not warranty

Do not provide the complete valid purchasing receipt to the manufacturer.

Do not deviate from the instructions provided in the manual.

Operating or maintaining the product incorrectly may result in defects.

Carelessness can also lead to product defects.

Avoid damaging or erasing the product series number label.

Normal wear during daily use of the product is expected.

Failure to meet warranty requirements may result in denial of the warranty claim.