

CHILD INFORMATION

(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)

NAME:

DATE OF BIRTH (DD/MM/YYYY):

ADDRESS:

ALLERGIES/MEDICAL CONDITIONS:

EMERGENCY CONTACT 2: NAME	EMERGENCY CONTACT 2: NAME
PHONE NUMBER:	PHONE NUMBER:

www.cozynsafe.com


IMPORTER: EURO STOCK TRADERS LTD
UNIT 25 PEDMORE ROAD INDUSTRIAL ESTATE, PEDMORE
ROAD, BRIERLEY HILL, WEST MIDLANDS, DY5 1TJ.UK
TEL: +44 (0)1902 494 905 Email: enq@cozynsafe.com

EU Authorized Representative:
Authorized Representative service
EURO STOCK VENTURE TRADERS LTD
UNIT 1, 3 O'CONNELL SQUARE, EDENDERRY.CO. OFFALY,
R45 YR13 Republic of Ireland
TEL: +44 (0)1902 494 905 Email: enq@cozynsafe.com
Website: www.cozynsafe.com

COZY  SAFE®
Without Compromise...

COZY  SAFE®
Without Compromise...

User Manual

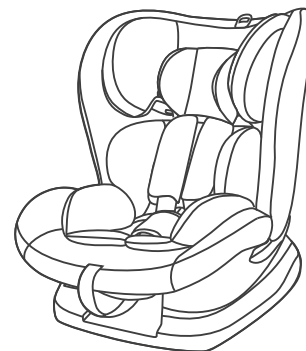

DOME i-Size

Universal belted
40cm-105cm/≤18kg
i-Size Booster seat
100cm-150cm

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE!

The product has been approved according to the strictest European
safety standards (R129/04)

Contents

General Safety Instructions	02-04
Use in the vehicle	05-06
Know your child seat	07
Setting the shoulder belt height	08
Setting the headrest height	09
Using the buckle	10
Adjust the harness.....	11-12
Rearward facing installation(40-105cm)	13
Forward facing installation(76-105cm)	14
Forward facing installation(100-150cm)	15-16
Remove the cover	17
Maintenance	18
Warranty	19

General Safety Instructions

- The rigid items and plastic parts of an Enhanced Child Restraint System shall be installed and positioned so that they cannot become trapped, during everyday use of the vehicle, from becoming trapped by a movable seat or in a vehicle door.
- Any straps securing the restraint to the vehicle should be tighten, any support-leg should be in contact with the vehicle floor, any straps or impact shields restraining the child should be adjusted to fit the child's body, and straps should not be twisted.
- It is important to ensure that any lap strap is worn low down.
- The Enhanced Child Restraint System should be replaced when it has been subjected to violent stresses in an accident.
- It is dangerous to make any alterations or additions to the device without the approval of the Type Approval Authority, and it is also dangerous if the installation instructions are not closely followed provided by the Enhanced Child Restraint System manufacturer.
- Be sure that children are not left unattended in their Enhanced Child Restraint System.

- Ensure that any luggage or other objects that could cause injury in the event of a collision are properly secured .
- Be sure that the Enhanced Child Restraint System shall not be used without the cover.
- Be sure that the Enhanced Child Restraint System cover should not be replaced with any cover other than the one recommended by the manufacturer, because the cover is integral part of the restraint system's performance.
- Refer to the vehicle manufacturer's handbook for the use of an "i-size Enhanced child Restraint System".

WARNING

IMPORTANT-DO NOT USE BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS(Refer to instruction)

ATTENTION:

Notice regarding Universal Belted category Enhanced Child Restraint Systems(40-105cm).
This is a Universal Belted Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Notice regarding i-Size booster seat category Enhanced Child Restraint Systems(100-150cm)
This is a i-Size booster seat Enhanced Child Restraint System.
It is approved according to UN Regulation No.129, for use primarily in " i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Use In The Vehicle

1.Product description:

DIRECTION	GROUP	INSTALLATION METHOD	TYPE
Rearward facing	40-105cm	3 point car belt	Belted
Forward facing	76-105cm	3 point car belt	Belted
Forward facing	100-150cm	3 point car belt	Belted

2.Certification



...as a child safety seat installed in a vehicle

child safety seat	Tested and certified according to ECE R129			
	Stature	Rearward	Forward	Forward
DOME		40-105cm	76-105cm	100-150cm

* ECE= European Standard for Safety Equipment

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment(ECE R129/04).

WARNING



Never use this child restraint system in seating positions where an active frontal airbag is installed.

An active frontal airbag may cause death or seriously injury of your child in an accident.

Please read the instructions carefully and keep safely for future reference .
There is an instructions compartment in the back of the child car seat for storage of the instructions manual.



You can use your child car seat as follows:



Know your child seat

01- Headrest Adjustable Switch

02- Headrest

03- Shoulder Strap Guide

04- Backrest

05- Chest Pad

06- Comfortable Cushion
(Suitable for 40-87cm)

07- Shoulder Strap


08- Buckle

09- Crotch Pad


10- Adjuster

11- Harness Adjuster Strap

12- Lap Belt Guide

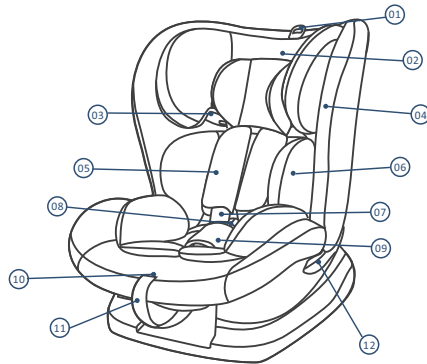


Setting the shoulder belt height

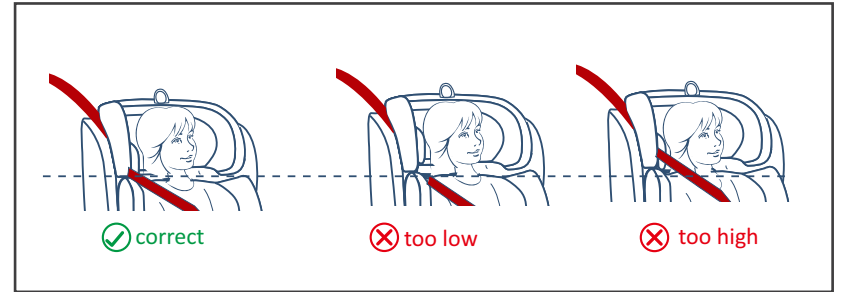

Check whether the shoulder belt is set to the correct height for your child.

The shoulder belt should be threaded through the belt slots that are at or just above the child's shoulder height.


Setting The Headrest Height

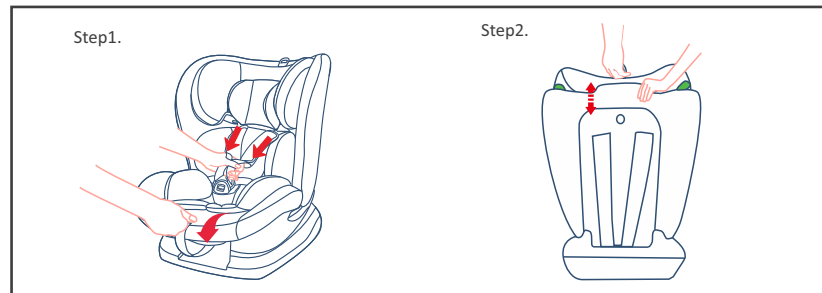

Step1. Loosen the harness .Press the adjuster button. To release the harness, press the adjuster button with one hand and use other hand to pull the shoulder straps outward.

Step2. Pull the headrest adjustment lever up or down to adjust the height of the harness and headrest to match the child's height.

Using The Buckle

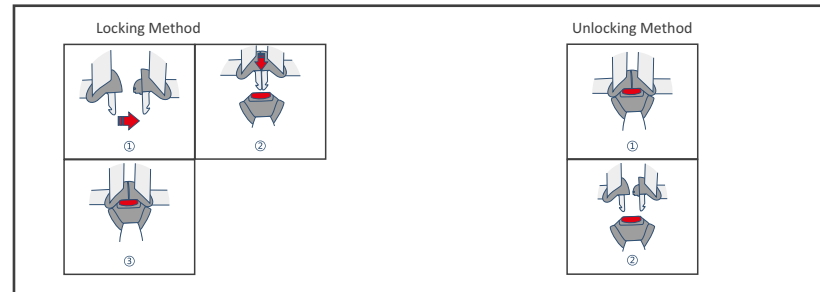

Locking Method :


Align the left and right buckle tongues then insert them into the buckle until you hear a“Click”.

Unlocking Method:


Press the red release button on the buckle downwards, the two metal tongues will pop out.

Adjust The Harness

Loosening the shoulder harness

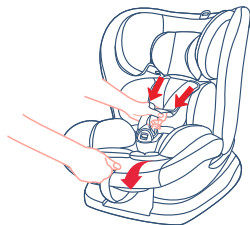

Tightening the harness

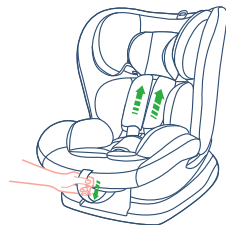


Loosening the shoulder harness

Press the adjuster button under the cover and at the same time pull both shoulder straps forward.

Tightening the harness


Pull the adjuster strap until the harness is fully tightened.

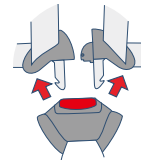

Release the buckle.

Put the child into the safety car seat, align the left and right buckle tongues then insert them into the buckle until you hear a "click".

Forward-Facing Installation(40-105cm)

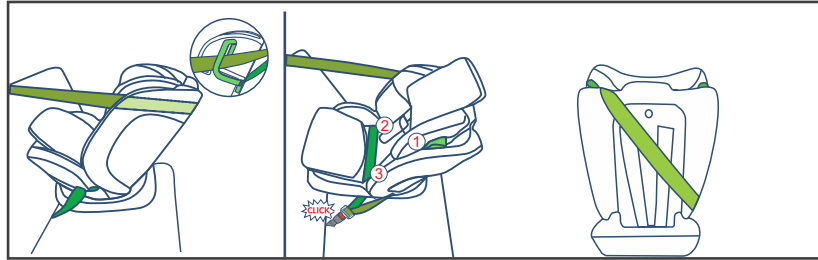

Pull the child seat slightly away from the vehicle seat . Gather approximately 80 cm of the diagonal seat belt and lap belt together.


Guide both the diagonal and lap section of the vehicle safety belt through the belt loops on the seat shell, and buckle up. You will hear an audible CLICK! Feed any slack in the belt back into the retractor.

Secure your child with 5-point harness.

Caution! Make sure that the vehicle seat belt is not twisted, and the child seat is securely fastened. If it is not, retighten the vehicle seat belt again.

The Comfortable cushion is only suitable for children who are 76-87cm tall.

Forward-Facing Installation(76-105cm)

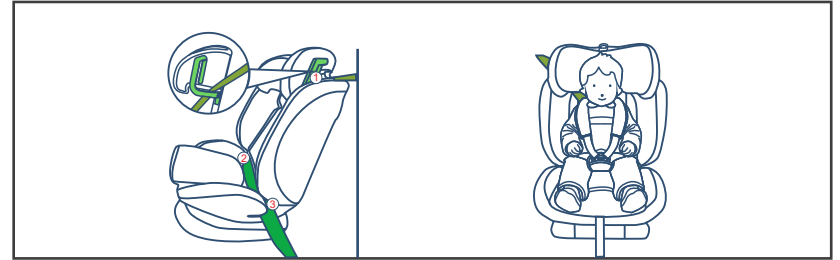

Pull the child seat slightly away from the vehicle seat . Gather approximately 80 cm of the diagonal seat belt and lap belt together.

Guide both the diagonal and lap section of the vehicle safety belt through the belt loops on the seat shell, and buckle up. You will hear an audible CLICK! Feed any slack in the belt back into the retractor.


Secure your child with 5-point harness.

Caution! Make sure that the vehicle seat belt is not twisted, and the child seat is securely fastened. If it is not, retighten the vehicle seat belt again.

The Comfortable cushion is only suitable for children who are 76-87cm tall.


Forward-Facing Installation(100-150cm)

Removing 5-Point Harness and Storage the Accessory Part

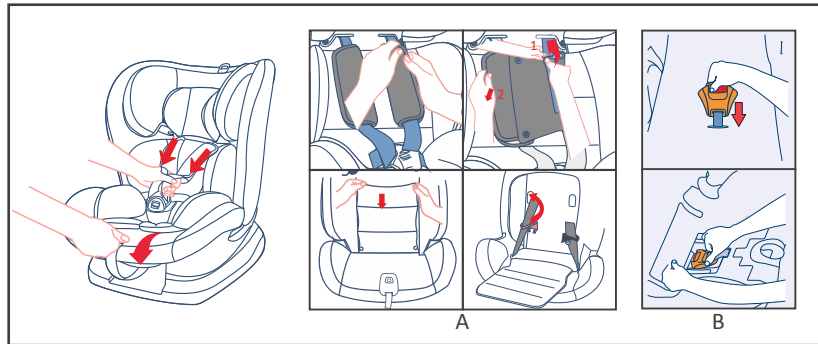

A. Open the shoulder pad. Disassemble the metal yoke. Disassemble the backrest fabric cover. Hide the buckle tongue into the hidden slot position.

B. To store the 5-point safety harness away it needs to be fully loosened first. Press the red release button and undo the harness. Lift the cover under the cushion and store the buckle parts in the compartment.

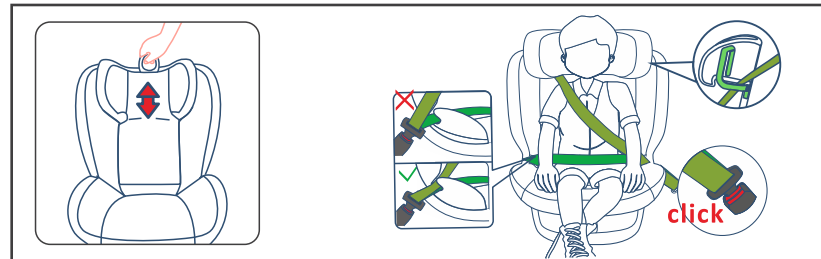

Securing the child


Put the child into the child car seat and follow routine.

Use the Headrest adjustable switch to adjust the height of the headrest according to the child's height.

The shoulder straps should be level with or just above the child's shoulders.

Fasten car seat belt and make sure, it is tight enough.

Remove The Cover

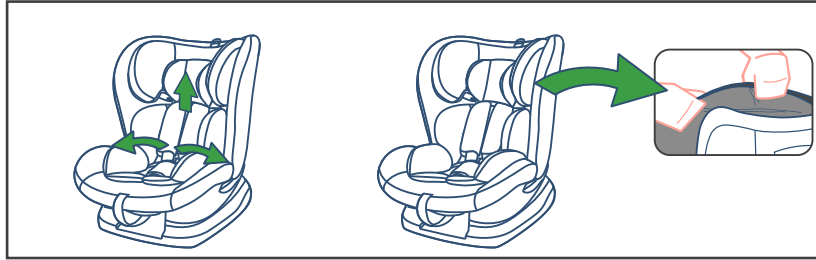

Adjust the headrest up to most highest position, take away the comfortable cushion. Then release the buckle to remove the chest pad.

Remove the headrest cover and seat cover carefully.

Maintenance

1. Washing

- The covers and the shoulder pads can be removed for washing under 30°C clean water;
- Clean the shell using a damp cloth.
- Clean the buckle using a damp cloth.
- Remove off the harness system before washing by soap water.

Warranty

Warranty

To activate the extended warranty for your COZY N SAFE products, please complete the warranty registration form provided on www.cozynsafe.com within 30 days of purchase or receipt. The initial 12month warranty will then be extended to 24 months from the date of purchase and is applicable only to the original buyer; it cannot be transferred. Warranty claims are accepted only for products without existing warranty coverage. In case of defects, consumers should return the product to the retailer with a complete and detailed description of the the product to the retailer with a complete and detailed description of the issue, along with the valid purchase receipt. The retailer will then facilitate the return of the product to the manufacturer. Replacement or return of the product is not guaranteed. Maintenance of the product does not not guaranteed. Maintenance of the product does not extend the warranty period. The manufacturer is not responsible for any damage resulting from misuse of the product.

Below situations can not warranty

Do not provide the complete valid purchasing receipt to the manufacturer.

Do not deviate from the instructions provided in the manual.

Operating or maintaining the product incorrectly may result in defects.

Carelessness can also lead to product defects.

Avoid damaging or erasing the product series number label.

Normal wear during daily use of the product is expected.

Failure to meet warranty requirements may result in denial of the warranty claim.