

# EDINBURGH REGAL CAR SEAT 0-36KG INSTRUCTION MANUAL

For Group 0+ / I / II / III (0-36kg) installed with adult 3-point belt only.

- 1. This is a "Universal" child restraint system, it is approved to Regulation NO.44,04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
  - 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
  - 3. This child restraint has been classified as "universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
  - 4. If in doubt, consult either child restraint manufacturer or the retailers.  
Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No.16 or other equivalent standards.
- **IMPORTANT-DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9KG(Refer to instructions )**
  - **IMPORTANT-DO NOT use the product in seating positions where an active frontal airbag installed.**

Distributed by:


Baby Factory (NZ) Ltd  
58 Stonedon Dr East Tamaki Auckland  
[www.babyfactory.co.nz](http://www.babyfactory.co.nz)

## 1. PRODUCT OVERVIEW



- 1 Adjusting ring
- 2 Headrest
- 3 Comfortable cushion
- 4 Chest pad
- 5 Buckle
- 6 Crotch pad
- 7 Adjuster (under the cover)
- 8 Harness adjuster strap

- 9 Guide hook
- 10 Harness connector

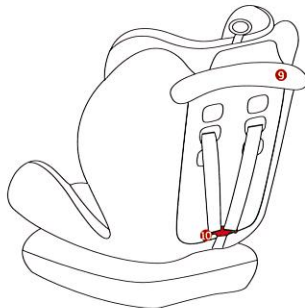

## 2. FEATURE


- This product is called Restraining devices for child occupants of power-driven vehicles, commonly known as the child seat. Product appearance streamlined bionic design, elegant appearance. It uses precision blow molding and injection molding process. It has high strength, compact and stable structure. Cover sets of choice of fire-retardant environmentally friendly fabrics. It is soft, anti-bacterial, and has a variety of colors optional.
- This product strengthens the side protection of the child's head and protects the child when a traffic accident occurs.
- The headrest can be adjusted to different positions.

### 3 SAFETY WARNING

- For your child's safety, please read these instructions carefully before use and keep them for future reference. Failure to follow the instructions contained in this manual could result in serious injury to your child.
- This child seat can only be used with the harness for children less than 18kg in weight (group 0+, 0-13kg; group 1, 9-18kg).
- This child seat can not be used with the harness for children between 15kg to 36kg in weight (group 2 - 3, 15-36kg).
- This child seat can be installed rearward-facing and forward-facing. Important - Do not using forward-facing before the child's weight exceeds 9kg.
- Make sure you read the car manufacturer's handbook.
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint.
- This instruction manual can be retained in the special space of the child seat for its life period.
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car.
- Do not leave your child unattended in the seat at any time.
- Do not place rear-facing child seat on front seat with airbag. Death or serious injury can occur.
- The child seat should be changed when it has been subject to violent stresses in an accident.
- For the reason of safety, the child seat must be fixed inside the vehicle even if you do not put your child inside the child seat.
- Always make sure that any straps holding the seat restraint to the vehicle shall be tight, any straps restraining the child should be adjusted to the child's body, and check that the straps shall not be twisted.
- Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
- Ensuring that any straps is worn low down, so that the pelvis is firmly engaged, shall be stressed. To prevent from the risk of fall, your child should always be fastened.
- It is dangerous to make any alteration or additions to the device without the approval of the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.
- This child seat is designed for children from birth up to 36kg. Never overload the child seat more than one child or with other loads.
- The child restraint must not be used without the cover.
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
- Before you adjust any movable or adjustable parts of your child seat (except headrest), you must remove your baby from the child seat.
- The child seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.

## 4 Usage

### 4.1 Installing position of the child seat in vehicle

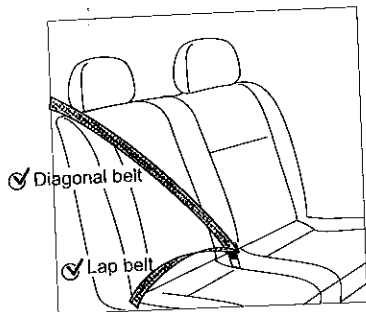

- When installed with vehicle 3-point belt, this type of child safety seat is suitable for the car equipped with the 3-point belts and approved by ECE R16. It is not suitable for the car which is only equipped with 2 point safety belts.


### 4.2 Checking the shoulder strap height



- Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.


## 4 Usage

### 4.3 Usage of buckle

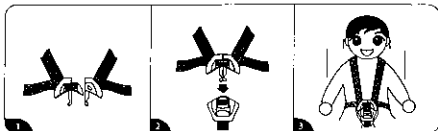

- Firstly ,adjust the shoulder straps height ,please proceed as follows:
- Step1. Put the two metal sections of the buckle connector together.
- Step2. Slot the two buckle connectors into the slot in the buckle until they"click"place.
- Step3. Check the harness is correctly locked by pulling the shoulder straps upwards.
- To release the harness ,you can press the red button of the buckle downwards, the two metal sections will be pop up .

### 4.4 Adjust and use the harness

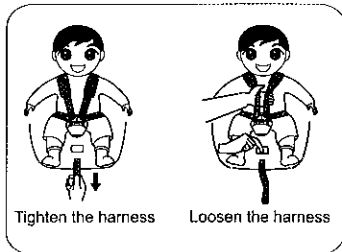


- Loosen the harness  
The harness is slackened by pressing the adjuster cover on the front of the seat.  
Press down the adjuster cover as you grip the two shoulder straps with your another hand. Pull the shoulder straps towards you to loosen the harness.
- Tighten the harness  
Pull the shoulder straps upwards to remove the slack from the lap sections of the harness then pull the adjuster strap until the harness is fully tightened.  
The harness should be adjusted as tightly as possible without causing discomfort to your child.  
A loose harness can be dangerous.  
Check the harness adjuster and tighten each time the child is placed in the seat

## 4 Usage

### 4.5 Adjust the headrest and shoulder strap height


#### 4.5.1 Adjust the shoulder strap height

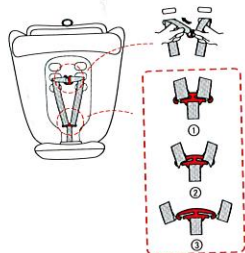

- Step 1: Turn the child seat to the back and pull the harness connector out from the shoulder strap as shown on the left; In the order of ①②③, exit the two shoulder straps from the harness connector on the back of the child seat.

#### 4.5.2 Adjust the headrest height

- Step 2: As shown in picture, pull the adjusting ring to adjust the headrest up and down, and hold it to the correct position.

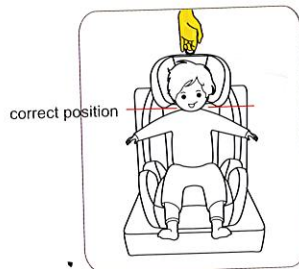

## 4 Usage

### 4.6 Remove the chest pad, cushion, crotch pad and hide the harness, buckle (Change to group 2,3)



- Step 1: Remove the chest pad and cushion.

Exit the two shoulder straps from the harness connector on the back of the child seat (see 4.5.1). Pull the shoulder straps out of the slot on the front of the child seat so that you can remove chest pad and cushion.




- Step 2: Hide the harness and buckle.

Set the cover up on the seam of the backrest and the base, and put the shoulder straps through the cover and backrest (see ②③), take off the two metal sections of buckle from the shoulder straps, then the shoulder straps must be re-connected to the harness connector. Then the shoulder straps are stored behind fabric cover of backrest. And the buckle was stored into the hole on the seat (crotch strap position).

## 4 Usage


### 4.7 Adjust the child seat to different incline positions

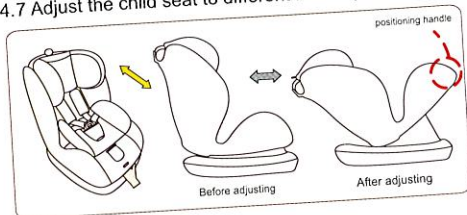

- The child seat can be adjusted 3 different positions - position 1, position 2 and position 3. If installed rearward-facing (group 0+), only the position 3 can be used. If installed forward-facing (group 1), position 1, position 2 can be used. If installed forward-facing (group 2 or group 3), only the position 1 can be used. Pull the positioning handle under the front of the seat upwards, and then pull or push the seat forwards or backwards. Release the positioning handle in the desired position and push until you hear a "click".

## 5 Installation

### 5.1 installed rearward-facing using 3-point belt (group 0+, 0-13kg)

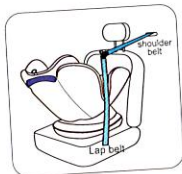

- Step1: Place the child seat on the car seat rearward-facing and make sure that the front of the child seat is firmly pressed against the car seat backrest. Take off the cushion and thread the lap belt through the same side belt guidance.



- Step2: Thread the shoulder belt through the top belt guidance.



## 5 Installation



- Step3: Thread the lap belt through the other side belt guidance of the child seat. Then fasten the tongue into vehicle's seat buckle and hear "click". Double check the seat buckle is locked correctly and pull the seat belt to ensure it's tight. Finally replace the cushion onto the child seat.



- Step4: Place your child into safety seat. Check the height of the shoulder straps on the correct position and fasten the buckle. (see 4.3,4.4,4.5)

### 5.2 Installed forward-facing using 3-point belt. (group 1, 9-18kg)

**IMPORTANT:** After the child 9 months old, please remove the cushion.



- Step 1: Place the child seat on the car seat forward-facing and make sure that the front of the child seat is firmly pressed against the car seat backrest. Clip the lap belt into the same side belt guide groove of the child seat.



- Step 2: Take the diagonal belt and lap belt through the child's seat as shown in picture. Make sure that they are under the harness.


## 5 Installation



- Step 3: Clip the lap belt and diagonal belt into the other side belt guide hook 1 of the child seat. Then fasten the tongue plate of vehicle's 3-point seat belt into the seat belt buckle, hear "click". Seat your child into safety seat. Check the height of the shoulder straps on the correct position and fasten the buckle (see 4.3, 4.4, 4.5). Check that the harness has not become twisted and also the cover should not impede the movement of harness in anyway.


5.3 installed forward-facing using 3-point belt. (group 2, 3, 15-36kg)

⚠ Attention: For Group 2, 3, you can use 3 point belt only. You can remove the comfortable cushion, chest pad and crotch pad; you can also hide five point harness system and the buckle. (See 4.6)

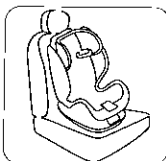

- Step 1: Place the child seat on the car seat forward-facing and make sure that the front of the child seat is firmly pressed against the car seat backrest.

## 5 Installation

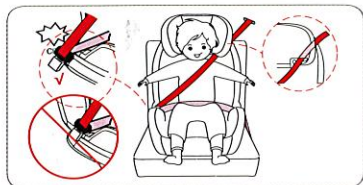

- Step 2: Seat your child into safety seat. Check the height of the shoulder straps on the correct position (see 4.5). Follow the path showing in the picture, pull the diagonal belt and lap belt round the child and insert into the car seat belt buckle, until you hear "click". Check whether the car seat belt buckle is correctly locked by pulling the seat belt upwards.

## 6 Maintenance and cleaning

### 6.1 Daily maintenance

- In daily use, check periodically the child seat. The child seat should be replaced after an accident.
- Please keep this child seat in dry and ventilated place to avoid damp moldy.
- If the child seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambiance.
- If food or drink drop accidentally on the buckle, disassemble the seat belt from the child seat and rinse it gently by warm water. Leave it dry under ambiance .
- For cleaning the entire child seat fabric cover, please refer to the 6.2 washing instruction.

### 6.2 Washing instruction

- Never use any solvent, chemical detergent or lubricant on any part of your child seat.



Hand wash,  
water  
temperature  
below 30°C



Do not bleach



Dry clean, any  
solvent except  
trichloroethylene.



Do not tumble dry




Do not iron

### 6.3 Remove and assemble the fabric cover

- First remove the cushion, chest pad and crotch pad. (see 4.6) .
- Undo buckle of the base and remove the cover of headrest, base and backrest.
- To assemble the fabric cover of the child seat, repeat the above prescribed procedure in reverse order.

## 7 The main technical parameters

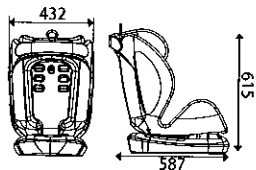

Distance from front to back of the seat: 587mm

Distance from left to right of the seat: 432mm

Height of the seat: 615mm

Weight of the seat: 9.3 kg