


• BEST AROUND YOU •

AY571

The child restraint system

Height: 76-150 CM Weight: 9-36 KG

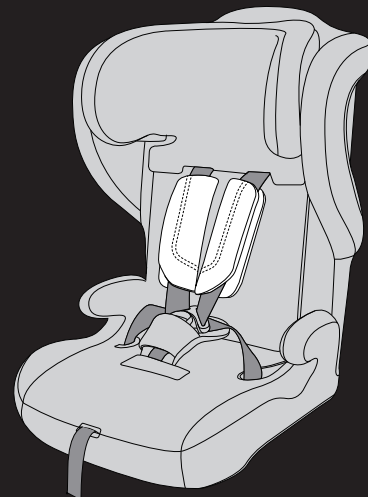

01 PRODUCT OVERVIEW ----- 01-02

02 SAFETY WARNING ----- 03-04

03 USAGE

- 3.1 Install position of the child seat in vehicle ----- 05
- 3.2 Adjust the headrest ----- 05
- 3.3 Checking the shoulder strap height ----- 06
- 3.4 Usage of buckle ----- 06
- 3.5 Adjust the length of harness ----- 07
- 3.6 Adjust method of seat angle (Optional) ----- 08
- 3.7 Remove objects in 100-150cm ----- 09
- 3.8 Assemble and disassemble of seat backrest and base ----- 10


04 INSTALLATION

- 4.1 Installed forward-facing with adult 3-point belt (Height: 76-105cm) - 11
- 4.2 Installed forward-facing with adult 3-point belt (Height: 100-150cm) - 12
- 4.3 Installed forward-facing with adult 3-point belt (Height: 140-150cm) - 12-13

05 MAINTENANCE AND CLEAING

- 5.1 Daily maintenance ----- 14
- 5.2 Washing instruction ----- 14

01 PRODUCT OVERVIEW

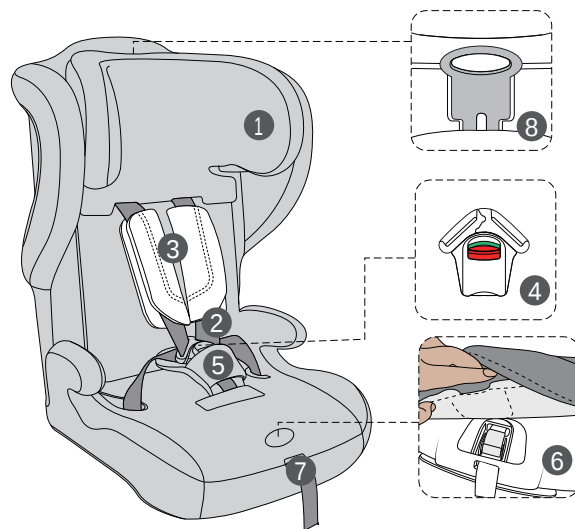

- ① Headrest
- ② Shoulder strap
- ③ Shoulder pads
- ④ Buckle
- ⑤ Crotch pad
- ⑥ Adjuster button
- ⑦ Harness adjuster strap
- ⑧ Headrest pull ring

02 SAFETY WARNING

Safety warning

- This product can be forward-facing used by 5-point safety system for children with a height of 76–105cm (Weight: 9–18kg), using adult three-point belt to fix the child restraint system;
- This product can also be forward-facing for children with a height of 100–150cm (Weight: 15–36kg), using adult three-point belt to fix the child restraint system;
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint;
- Please keep for future reference, a storage compartment for the instructions is located on the back bag of the headrest cloth cover;
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car;
- Do not use rearward facing child seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur;
- For the reason of safety, the child seat must be fixed inside the vehicle using adult three-point belt even if you do not put your child inside the child seat;
- The rigid items and plastic parts of an Enhanced Child Restraint System shall be located and installed so that they are not liable to become trapped by a movable seat or in a door of the vehicle during everyday use of the vehicle;
- Any straps holding the restraint to the vehicle should be tight ;
- Any straps restraining the child should be adjusted to the child's body ;
- Straps should not be twisted ;
- Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed ;
- The device should be replaced when it has been subject to violent stresses in an accident ;
- Any luggage or other object liable to cause injuries in the event of a collision shall be properly secured ;
- It's dangerous to make any alterations or additions to the device without the approval of the Type Approval Authority, also dangerous not to follow closely the installation instructions provided by the manufacturer ;
- When the seat is not provided with a textile cover, the seat should be kept away from sunlight, otherwise it may be too hot for the child's skin ;

- Don't leave your child in the device unattended;
- The ECRS shall not be used without the cover ;
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance ;
- The instructions shall be retained on the device for its life period or in the vehicle handhook in the case of built-in restraints ;
- The user shall also be referred to the vehicle manufacturer's handbook ;
- Never use a second-hand product , as you can never be certain what happened to it.

“ Universal Belted ” NOTICE

This is Universal Belted Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

“ i - Size booster seat ” NOTICE

This is a i - Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in " i - Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.


“Universal booster cushion” NOTICE

This is a Universal booster cushion Enhanced Child Restraint System. It is approved according to UN Regulation No.129, for use in i-Size compatible and universal vehicle seating positions as indicated by vehicle manufacturer in the vehicle user's manual.

If in doubt, consult the Enhanced Child Restraint System manufacturer or the retailer.


03 USAGE

3.1 Install position of the child seat in vehicle

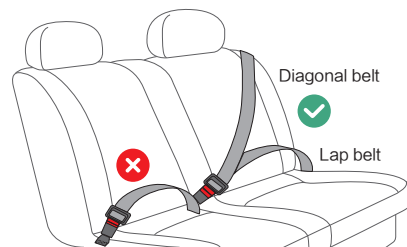



- ✓ Proper installation
- ✗ Improper installation

Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ ECE Regulation No.16 or other equivalent standards.

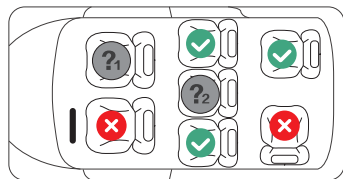

- ?1 Not to use rearward-facing in seating positions where an active frontal airbag is installed.
- ?2 Only use on this seat if a lap and diagonal seat belt is fitted.

3.2 Adjust the headrest

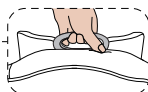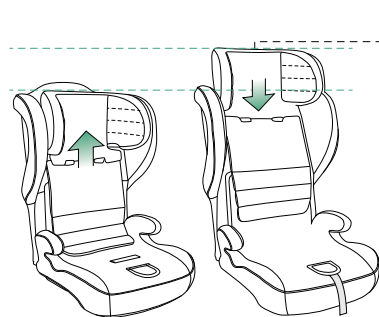

As shown in the picture, you can adjust the headrest up and down by pulling on the headrest pull strap, and adjust the headrest to a position suitable for the child's head.

3.3 Checking the shoulder strap height



too low



too high




slightly higher

Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

3.4 Usage of buckle

- Get the left and the right pieces of buckle together.
- Insert the two pieces into the slot of the buckle. At the same time, hearing "click" means the buckle gets stuck, pull the pieces of the buckle and check whether the buckle is locked correctly.

* If you want to release the safety belts, it needs to press the red button, then the pieces pop up.

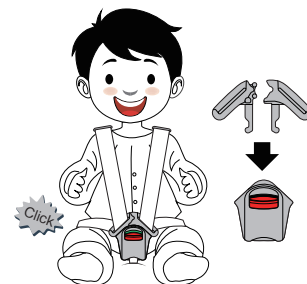

Buckle (sketch map)


3.5 Adjust the length of harness



Release the shoulder straps:
Press the adjuster button with one hand and pull out both shoulder straps with the other hand simultaneously.



Note:
Hold both shoulder straps at the same time and do not hold the shoulder covers.

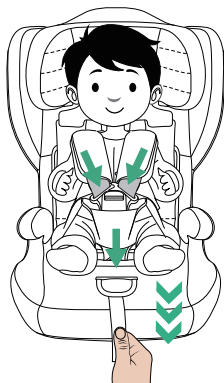

Tighten the shoulder strap:
Pull the shoulder strap upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness adjuster strap is fully tightened.




* The shoulder strap should be adjusted as tightly as possible without causing discomfort to your child. A loose shoulder strap can be dangerous.

* Check the shoulder strap adjuster and tighten each time when the child is placed in the seat.

3.6 Adjust method of seat angle (Optional)

Seat angle adjustment only requires opening the base support at the bottom of the seat;



Method to open the base support:
Pull off the T-shaped base support at the bottom of the seat, then open it outward by about 180° . When you hear "click", it will be installed in place. Finally, place the child safety seat on the car seat to achieve seat angle tilt;

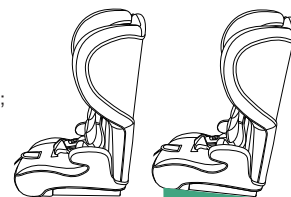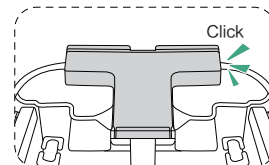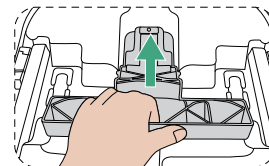


Upright

Inclined


Method to retract the base support:
Rotate the T-shaped base support at the bottom of the seat inward by about 180° , then clip it into the groove, hear the "click" to install it in place, and finally place the child safety seat on the car seat to achieve the seat upright position.

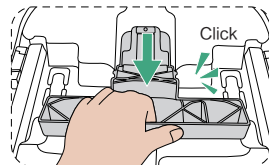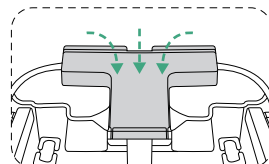


3.7 Remove objects in 100–150cm

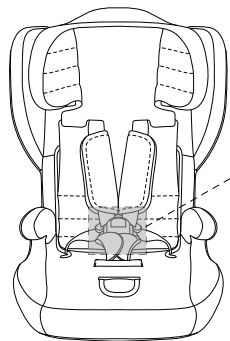



When the height of a child is > 100cm, the buckle, crotch pad, shoulder straps and covers on the seat need to be removed before use!

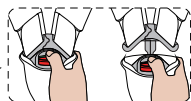

Step 1:
First, release the buckle and pull it out of the crotch pad;

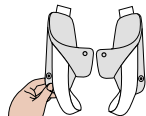


Step 2:
Open the shoulder covers on both sides, please remove them and store them properly;

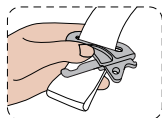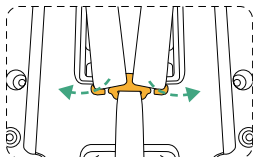


Step 3:
Unfasten the safety belt from the octagonal hook plate behind the backrest, then you can pull out the safety belt.

Step 4:
Remove the buckle inserts on both sides from the seat belt to fully extract the seat belt from the child seat;

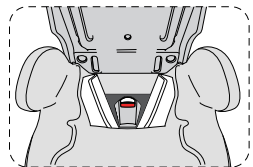


Step 5:
Place the buckle into the groove of the base, tidy up the white EPE and seat cover, as shown in the picture on the right.

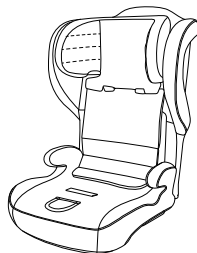


3.8 Assemble and disassemble of seat backrest and base

Assemble:

Insert the two hooks which circled on the backrest (see Figure 1) into the grooves of the base (see Figure 2)

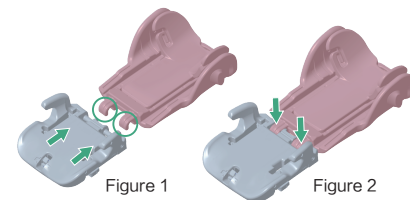


Use force to move the backrest forward to assemble it successfully (see Figure 3).

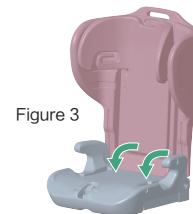


Disassemble:

Push the backrest back and hear a "click" sound, indicating the backrest is disassembled.


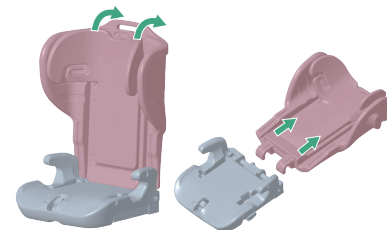


04 INSTALLATION

4.1 Installed forward-facing with adult 3-point belt (Height: 76–105cm)

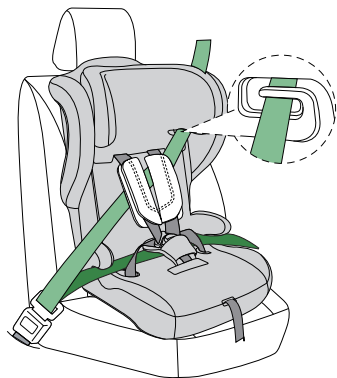

Step 1:
Unfasten the buckle and place the shoulder straps on both sides of the armrest:

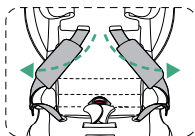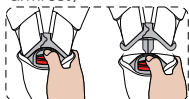

Step 2:

Pull out the adult 3-point belt, thread the shoulder strap through the headrest belt guide groove. The shoulder belt should pass above the armrest, the lap belt should pass under the armrest, then insert buckle into the slot to here a "click" sound.



Step 3:
Place the child in the safety seat, then lock the buckle and tidy up the shoulder straps and covers.



* When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system.

If in doubt, pls contact the manufacturer of the child restraint system.

4.2 Installed forward-facing with adult 3-point belt (Height: 100–150cm) Using backrest and base

Shoulder belt Lap belt


Pull the adult 3-point belt, thread shoulder belt through the headrest belt guide groove. The shoulder strap should be passed around the child, and placed above the child safety seat armrest. The lap belt should be passed under the child safety seat armrest. Finally, insert buckle into the slot and hear a "click" sound



4.3 Installed forward-facing with adult 3-point belt (Height: 140–150cm) Use base


Step 1:


First, release the buckle and pull it out of the crotch pad. Then open the shoulder covers on both sides, please remove them and store them properly;

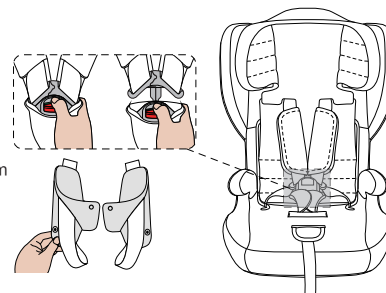


Step 2:

Lift the headrest cloth cover, undo the four buttons on the body cloth cover, and then open the cloth cover;

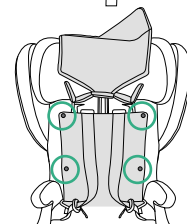


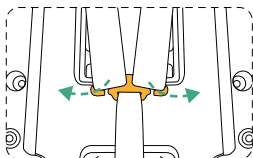

Step 3:
Unfasten the safety belt from the octagonal hook plate behind the backrest, then you can pull out the safety belt.

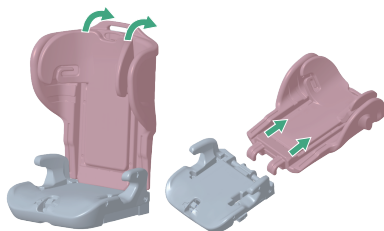

Step 4:
Push the seat back backwards to separate the backrest from the base, and hear "click" sound;

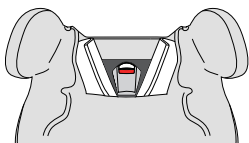

Step 5:
Put the buckle into the groove of the base, and tidy up the white EPE and seat cloth cover;



Step 6:
Place the base on the vehicle seat, put the child on the base. Pass the shoulder strap around the child, and place it above the armrest, pass the lap belt under the armrest, and finally insert buckle into the slot until hear a "click" sound.

05 MAINTENANCE AND CLEANING

5.1 Daily maintenance

- In daily use, check periodically the child seat. The child seat should be replaced after an accident.
- Please keep this child seat in dry and ventilated place to avoid damp moldy.
- If the child seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambience.
- If food or drink drop accidentally on the buckle, disassemble the seat belt from the child seat and rinse it gently by warm water. Leave it dry under ambience .
- For cleaning the entire child seat fabric cover, please refer to the 6.2 washing instruction.

5.2 Washing instruction

* Never use any solvent, chemical detergent or lubricant on any part of your child seat.



Hand wash
water temperature
below 30°C



Do not
bleach



Dry clean, any
solvent except
trichloroethylene.



Do not
tumble dry



Do not iron