


# BABYCO ADVENTURE TRAVEL SYSTEM STROLLER

## Instruction Booklet

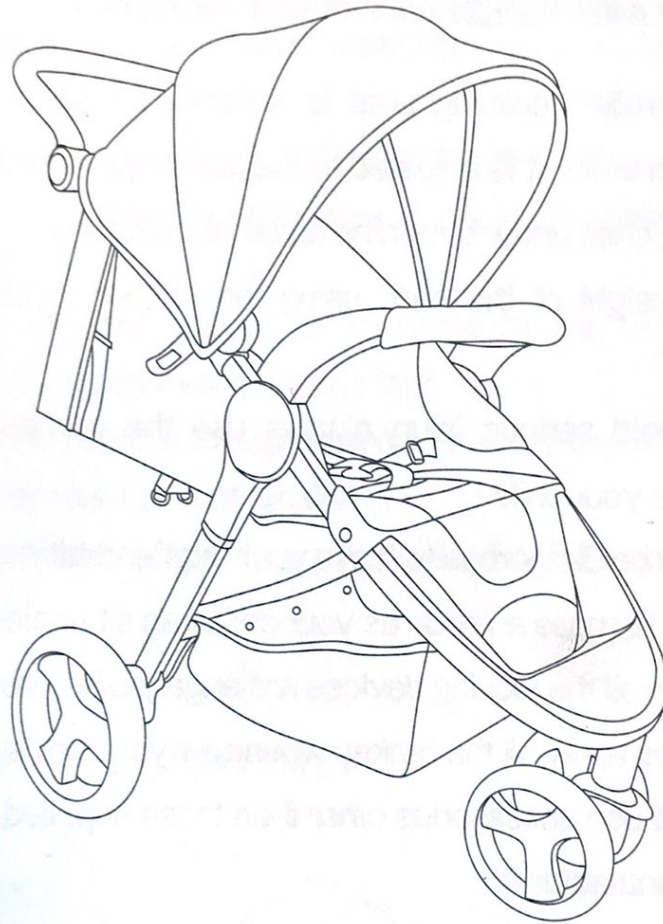

**Keep this booklet in a safe place for future reference**

**Note: Colour and features of product may differ  
from the diagrams shown**

**Distributed by: Babyfactory NZ Ltd 58 Stonedon Dr,  
East Tamaki, Auckland 2013, New Zealand  
[WWW.Babyfactory.co.nz](http://WWW.Babyfactory.co.nz)**

## **⚠ WARNING!**


Attention, users and guardians, in order to make a correct use of the stroller, please read the manual carefully before use it and keep it properly for future reference. Failing to use the stroller in accordance with this manual might result in your baby's safety.

- The stroller reclining seat is suitable for child from 0 to 36 months when it is adjusted to the lowest position, it is unsuitable for the child under 6 months on other positions!
- The weight of the child using the stroller should not exceed 15kgs !
- To avoid serious injury, always use the harness provided to secure your child !
- It may be dangerous to leave your unattended!
- Use a harness as soon as your child can sit unaided!
- Ensure all the locking devices are engaged before using!
- Always apply all the brakes whenever you park stroller!  
Do not use accessories other than those supplied and approved by manufacturer!
- Do not hang bags or goods from the handle as this may cause the stroller to become unstable!
- Keep away from fire!
- Do not place additional mattress of thickness exceed 10mm inside the seat!  
This stroller is designed for one child only!
- Do not use the stroller on stairs or escalators when child is in it!

1


- Do not use the stroller while running or skating!
- Do not release locking devices to avoid mistake folding when child is in it!
- Ensure that all the locking devices are engaged before use!
- Do not lift the stroller by the bumper bar or tray (if supplied) !  
Promptly stop using the stroller when the parts are broken or worn out!
- Do not place more than 3kgs (6.61 lb) in the basket!
- To avoid the risk of suffocation, keep all plastic materials out of reach of children!
- A pocket on the rear canopy is approved for the carriage of 0.2kg (0.441 lb) goods evenly distributed!
- Please read the manual for car seat or carry cot if you would like to use them as a part of stroller!
- Color and features of product may differ from the diagrams shown!

### **DIAGRAMS OF PROHIBITION:**

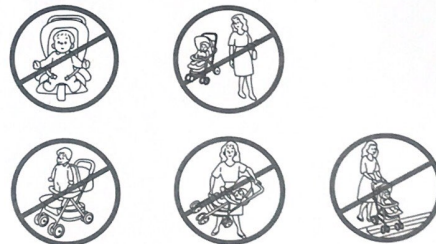

2

## PART LIST

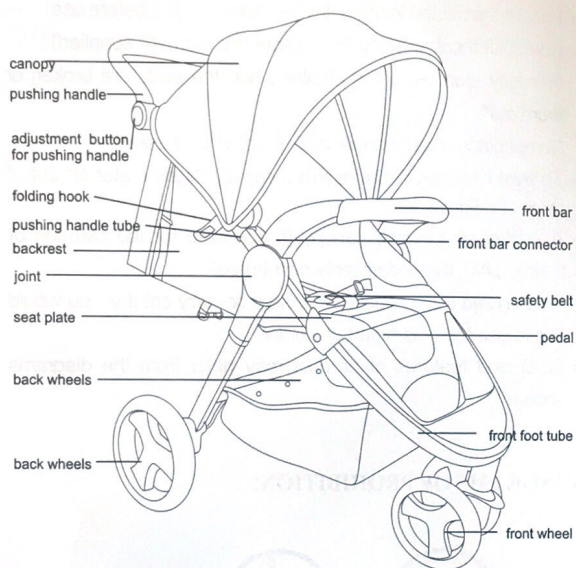

3

## Product Features

Model: SH3601

Standard number of the product: EN1888-1:2018  
EN1888-2:2018

Main materials: aluminum pipes, metal, plastic and fabric.  
Aluminum alloy stroller frame makes it portable and easy.  
The front of the seat is adjustable vertically or horizontally, making your baby more comfortable.  
The canopy is equipped with a window, easy for the mother to take care of the baby at any time.  
Five-point seat belt makes it safer for your baby to ride in the stroller.  
Removable front dinner plate enables the mother to take out the baby more conveniently.  
offers an easier use for the mom.  
Shock absorption front and back wheels offer a more comfortable ride to your baby.  
Free adjustment backrest meets the baby's different sitting and lying needs.  
Double braking of the rear foot controls the braking more conveniently  
Supper large basket for storing articles.

Unfolded size: 97\*62\*108cm


Folded size: 72\*62\*28cm

Net weight: 7.8Kg

4



## PART LIST

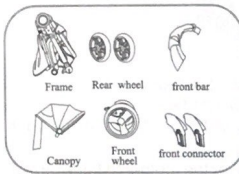


The parts include:  
1 stroller frame;  
1 canopy;  
2 back wheels;  
1 front wheel;  
1 pc front bar  
2 pc front connector


### NOTE:

Open carton and poly bag, take out all parts (please put the poly bag away in time).


## UNFOLDING THE STROLLER

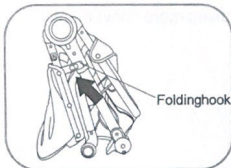

As shown in the left Fig., open the packing bag and take out the stroller frame; open the stroller folding hook to detach it from its fastener with your hands while lift the stroller frame to unfold it until the handle tube is "clicking" in line with the front foot tube to complete the stroller unfolding.

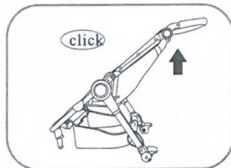


## MOUNTING THE WHEELS

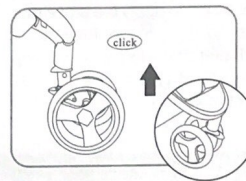

As shown by the arrow in the Fig, insert the "front wheel assembly" into the "central axle of the front wheel" to the bottom until it "clicks" to lock the front wheel and cannot be pulled out to complete the front wheel installation.


### Note:

it is prohibited to reverse the up and down direction when installing.

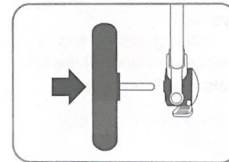


Insert the rear wheel into the rear wheel plastics system as the arrow shows until hear click.

## ASSEMBLE THE CANOPY

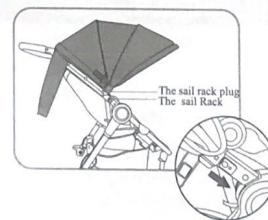


As shown in the left Fig, forcedly insert the "plug" on top of the canopy into the bottom of the socket on both sides of the stroller frame until it "clicks" into position before connect the edge of the canopy in align with the seat fabric to complete the canopy installation.

## THE REAR WHEEL BRAKING

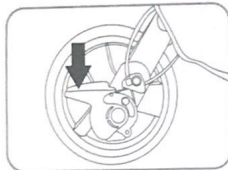

Step down the right side braking board in the rear wheel to apply the brake (the stroller is hard to move forward or backward) and lift the left side brake up to release (the stroller is free to move forward or backward).

## SWIVEL WHEEL OPERATION

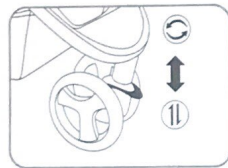


1. Press the "rotating positioning bar" downward to fix the front wheel in straight movement;
2. Lift the "rotating positioning bar" upward to release the fixing of the front wheel to rotate it in 360 degrees.



### ATTENTION:

Before moving backwards the swivel wheels must be released!!! Failure to follow the rules of swivel wheel operation may cause mechanical damage to the wheel system, which will not be covered by the guarantee.


## DISMANTLING THE WHEELS

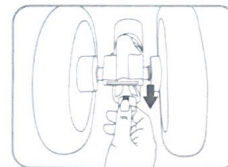

### Removing the front wheel

As shown in the Fig, press inwards the "front wheel quick releasing knob" while pull down it to remove the front wheel.


7

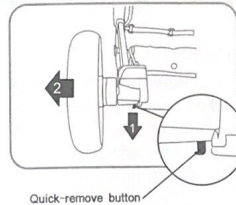

### DISMANTLING THE REAR WHEELS


Pull the rear wheel releasing metal and take out the wheel.

## CANOPY ADJUSTMENT

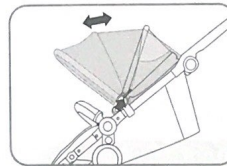

Slide the canopy up and down the frame.


## DISMANTLE THE CANOPY

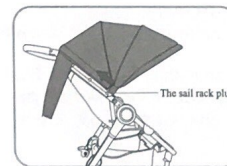


As shown in the Fig, hardly pull out the canopy plug directly in the direction of the arrow before pull the joint of the canopy and the fabric to remove the canopy.

8

### Pedal adjustment

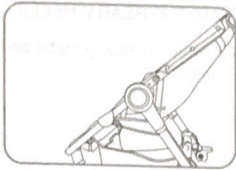


1. Zip up the footrest first.
2. Push the pedal from the pedal bottom to make it rise up before turn the "pedal supporting iron piece" to support the pedal at the highest position for your baby to lie down on the seat.

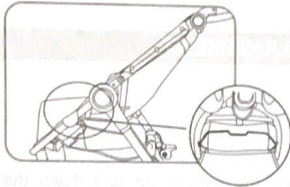


3. Reverse the pedal supporting iron piece" to release the pedal supporting before press downward the pedal to the lowest position for your baby to sit on the seat.

### Installing the armrest

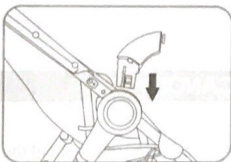


As shown in the left figure, insert the armrest connector into the mounting groove. when the "click" sound is heard on the bottom part. That's mean finish.

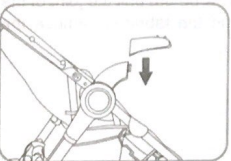


Front bar u-shaped on both sides. Put on the armrest connector. insert it to the end to hear the "Click" sound. That's completed.

### Removing the armrest

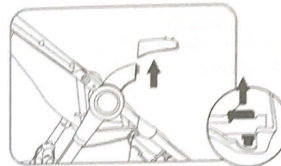

1. Pull the release button and lift it up to remove the bar.

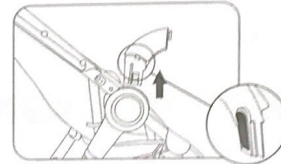


2. Press the button and pull up. To take out.

### Adjusting the backrest



1. As shown in the Fig, hold the knob of the "backrest adjuster" while pull the adjuster downwards to make it lie down.
2. As shown in the Fig., hold the two "plastic rings" separately with each hand while pull them apart to make the backrest to rise straightly.


### HANDLE ADJUSTMENT

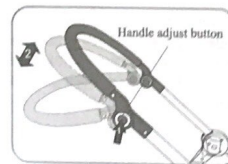

- Press the button inside the hander bar to adjust its height



### LOCK HARNESS

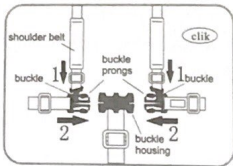


Insert the shoulder belt buckle into buckle prong, then insert the prong into buckle housing until hear "clicks".

### ⚠ WARNING!


Tighten straps snugly around your child!

### RELEASE HARNESS

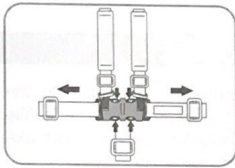


Squeeze the buckle prong in two sides to release the buckle.

### HARNESS ADJUSTMENT

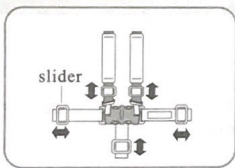


Tighten or loosen the shoulder straps, slide the slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.


### FOLDING STROLLER

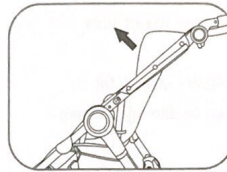


1. Firstly pull the backrest to the front while the front wheel is not be in a directed mode;

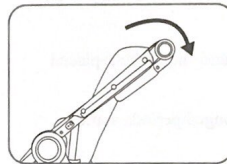

2. Press inwards the "adjustment knob for pushing handle" to adjust the handle to the lowest position;

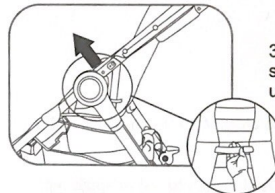

3. Pull the stroller folding belt in the seat and lift the frame to automatically unlock and fold the stroller;

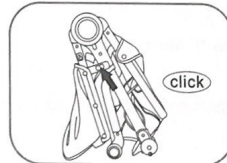

4. Fold the stroller as much as possible until the folding hook is locked onto the stroller folding fastener.

## MAINTENANCE

- This stroller requires regular maintenance by the user.
- Regular lubrication of moving parts will extend the life of your stroller and make opening and folding easier.
- Check your stroller regularly. If any parts, like bolts, screws, fabric pieces or stitching are found to be loose, broken or damaged, always repair or replace them.
- Regularly inspect the locking devices, brakes, wheels, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order. These should be free to move at all times.
- Brakes, wheels and tyres are subject to wear and should be replaced if necessary.
- Do not leave the stroller in sunlight for prolonged periods - some fabrics may fade.
- Your stroller should be serviced and reconditioned before using it for a second baby, or within 18 months, whichever is the sooner.
- Where damage or dysfunction occurs, stop using the stroller.

## CLEANING

- Plastic and metal parts may be sponged clean with warm water and a mild detergent.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- Storing a damp stroller will encourage mildew to form.
- Dry thoroughly before storing.
- After exposure to damp conditions, dry off with a soft cloth, open fully and allow to the air.