

Bubba Blue®

Australia

CO - SLEEPER



**ASSEMBLY INSTRUCTIONS
USE AND SAFETY INFORMATION**

SAFETY

READ AND UNDERSTAND THE FOLLOWING BEFORE ASSEMBLY OR USE:



WARNING: Strings can cause strangulation! **DO NOT** place items with a string around a child's neck, such as hood strings or pacifier cords.

DO NOT suspend strings over a bassinet or cradle or attach strings to toys!

To avoid suffocation, keep all plastic bags and packaging away from babies, young children and pets.

If you are not confident assembling components safely or physically unable, assistance may be available from the point of purchase.

This product is intended for children under 8.1 kg and only suitable for a child who cannot sit up or roll over unaided or push up by hands and knees.

NEVER LEAVE A CHILD UNATTENDED in the co-sleeper!
DO NOT allow children to climb on the co-sleeper.

DO NOT use the co-sleeper with more than one child inside.
DO NOT adjust or move the co-sleeper with a child inside.

NEVER use this product if any parts are broken, torn or missing.


Before use in co-sleeper mode (fixed to a bed) make sure the connection belts are hooked and tensioned properly. The co-sleeper must be secured to the parent's mattress with no gaps between the mattress and the co-sleeper.

Care must be taken that **NO** parts are loose, as the child could trap parts of their body or clothing which could put the child at risk of strangulation.
DO NOT place the co-sleeper close to a wall to prevent entrapment.

Keep medication, strings, elastic, small toys or small items such as coins or small batteries out of reach of children from any position in the co-sleeper.
DO NOT hang items such as mobiles from the co-sleeper or mosquito net.
Keep the co-sleeper away from open fires and radiant heaters.

BEFORE USING THE ASSEMBLED PRODUCT, READ "USE AND CARE" INSTRUCTIONS CONTAINED WITHIN THIS DOCUMENT. DO NOT THROW THIS INSTRUCTIONS, LEAVE IT FOR YOUR FUTURE REFERENCE!

PARTS CHECKLIST

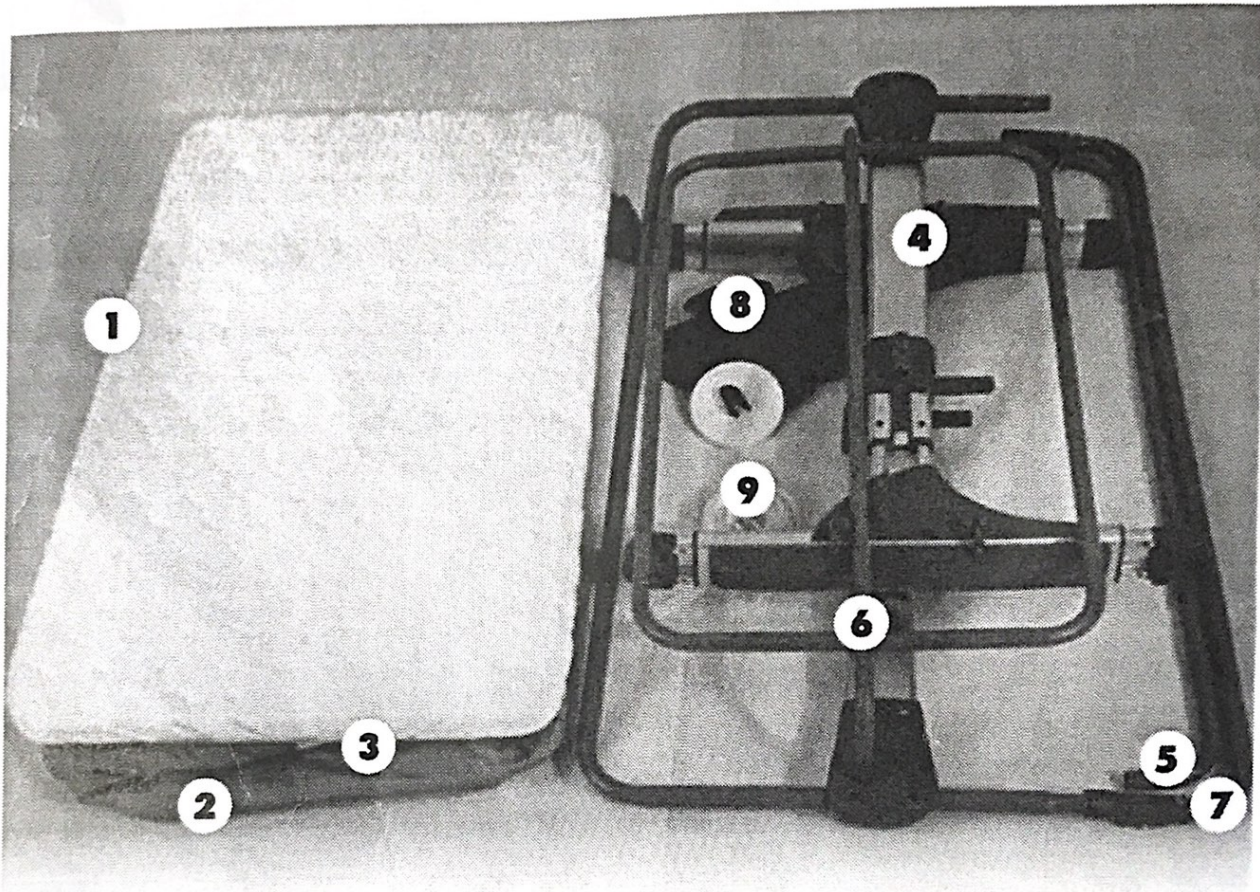

1. mattress

2. bed

3. bed board

4. main frame

5. support bar

6. bed support

6. bed support

7. handrail tube

8. safety strap

9. bed straps x 2


10. mosquito net (not shown)

11. carry bag (not shown)


***12 MONTH WARRANTY**

ASSEMBLY


Open the main frame **4** by rotating the legs in opposite directions away from top rail.

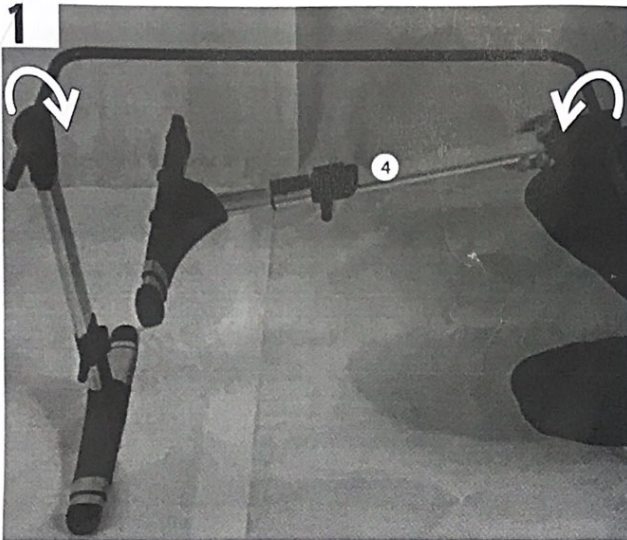

Stand frame on its feet and push support bar **5** into holes at bottom of frame until a "click" is heard and silver button pops out. Slide bed support **6** completely into plastic brackets of legs.

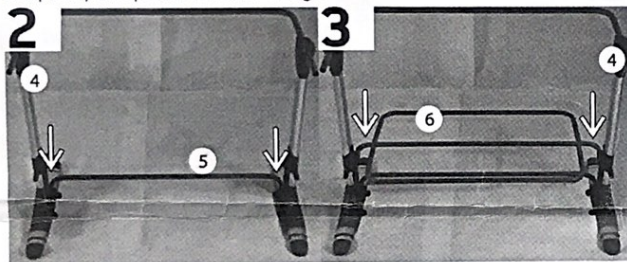

Push holes in top edge of bed **2** over front ends of top rail until they meet the plastic handle. Wrap top of fabric bed **2** up and over the top rail of the frame **4**. Connect zip fastener at side of bed and close it completely around top rail.

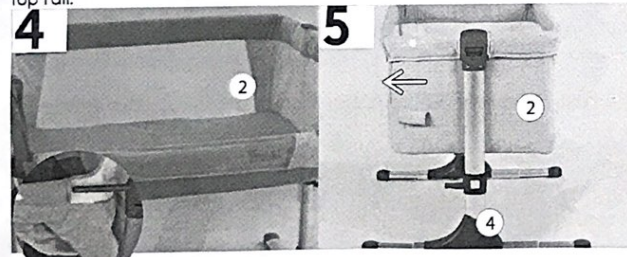


Push handrail tube **7** completely through front edge of bed **2**, ensuring that triggers are facing downwards. Push exposed ends of handrail into top rail of frame until a "click" is heard. Close zip fasteners at each front corner all the way up, over and inside the bed. The top of the bed will now be quite tight over the top rails.




Push strap **9** from inside of bed out through small slots in the bottom edges.



Place bed board **3** into bottom of bed. Bring straps **9** under bed support **6** and back into bed through small slots at bottom edge of the bed as shown.

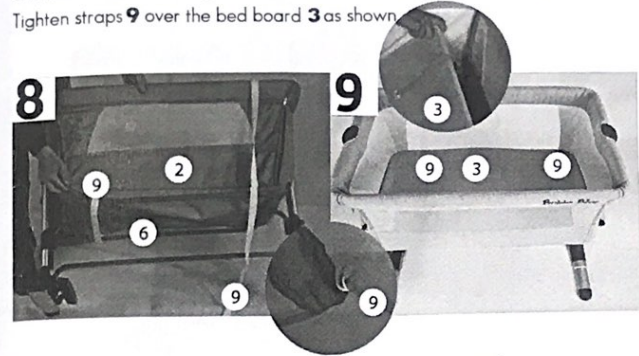


Place mattress **1** into bed. Assembly of the bed is now complete.

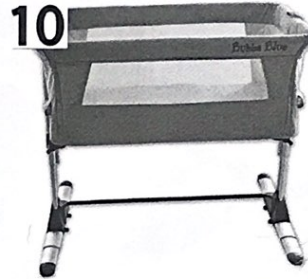


USE and CARE


Always make sure that feet are extended to their maximum before use and ensure that the Co-Sleeper is stable. Must be used on a horizontal surface only. Adjust to any of four levels by squeezing up on the handles at each end of the frame as shown at the same time, always keeping the mattress horizontal.

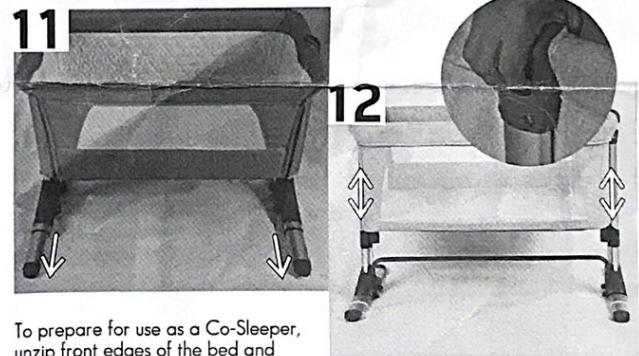

To prepare for use as a Co-Sleeper, unzip front edges of the bed and locate release triggers of the top rail **7**, indicated by arrows printed on the sides of the bed. Squeeze the triggers and pull the front panel of the bed outwards. Push top rail **7** on to brackets on legs.

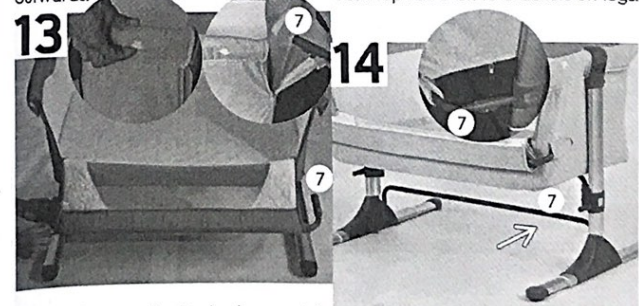


Locate clips attached to bed support **6** and clip mating component of safety strap **8** to it. Locate plastic disc on safety strap **8**. Lift the mattress of the bed to which the Co-Sleeper will be attached and lay safety strap **8** under it.

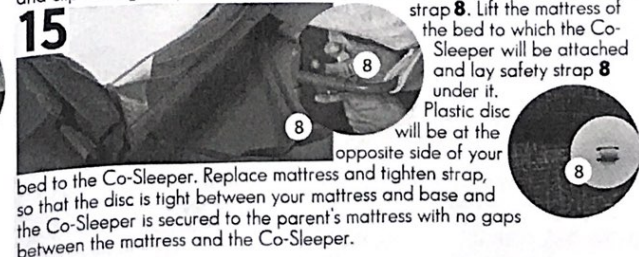

Plastic disc will be at the opposite side of your bed to the Co-Sleeper. Replace mattress and tighten strap, so that the disc is tight between your mattress and base and the Co-Sleeper is secured to the parent's mattress with no gaps between the mattress and the Co-Sleeper.


FITTING THE MOSQUITO NET:

16

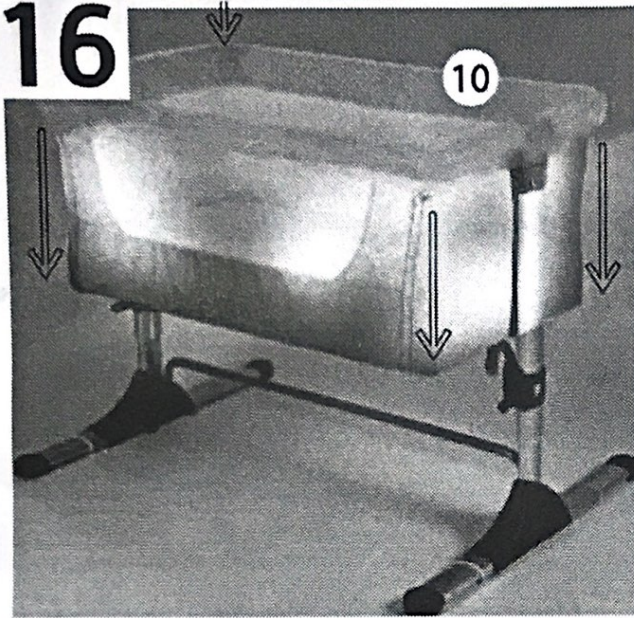

Pull the elastic edges of the mosquito net **10** over the entire bed on all 4 sides. The mosquito net **MUST BE** fully secured on the bassinet and **MUST** stay securely in that position.

When not in use, store safety strap **8** in the pocket under the bed.

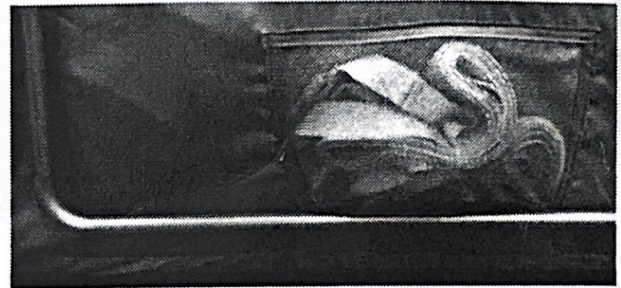

I NEVER LEAVE A CHILD UNATTENDED IN THE CO-SLEEPER !

Never use in co-sleeper mode without safety straps in place and correctly adjusted with disc tight against the parent's bed, and no gaps between co-sleeper and parent's bed. Co-Sleeper **MUST ALWAYS** be horizontal when in use.

If a sheet is used with the pad, use only the one provided by the manufacturer or one specifically designed to fit the dimension of the mattress.

Periodically check that all fittings and fasteners are firm and in a serviceable condition. Any loose fasteners must be tightened using the correct tool. Any damaged parts should be replaced with new authorised parts. Any replacement mattress must comply with BS7177 and BS1877, and must not exceed an uncompressed thickness of 25mm.

Take care when handling or moving the stand. Careless handling can cause damage. Ensure co-sleeper is stable before use.

All surfaces can be cleaned with a damp cloth and mild detergent. Dry with a soft cloth. Never clean with abrasives or ammonia or bleach.

Bubba Blue®

55 - 57 Lakewood Boulevard
Braeside, Victoria, 3195
tel 03 9580 6055