SIGNATURE



INSTRUCTION MANUAL Avalon i-Size EST-10



SUITABILITY: 40-87 CM



We'd love to see your pics! Share them using #imcozynsafe







Contents

PARTS LIST	01
PRODUCT INFORMATION	02
WARNINGS	03
BASE INSTALLATION	05
FIXING THE CAR SEAT FROM THE BASE	07
ADJUSTING FOR BODY SIZE	09
SECURING YOUR CHILD WITH THE HARNESS SYSTEM	10
INFANT CARRIER REMOVAL	11
REMOVING THE BASE FROM THE VEHICLE	12
CAR SAFETY	13
PROTECTING YOUR CAR	13
PRODUCT CLEANING AND CARE	14
PRODUCT LIFESPAN	14
DISPOSAL	15
WARRANTY	15

Parts List

- 1 Infant Carrier Indicator
- 2 Carrier Release Button
- 3 Base
- 4 Carrier Rotation Button
- 5 ISOFIX Connector
- 6 SOFIX Adjustment Button
- 7 Support Leg
- 8 Support Leg adjustment Button

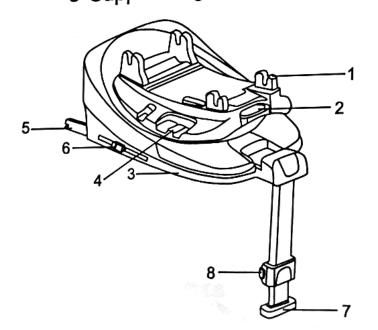

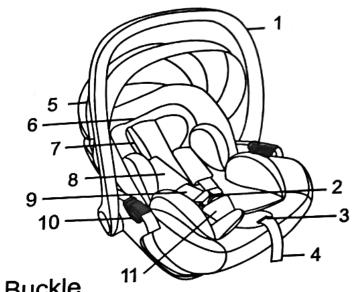

- 1. Handle
- 2. Harness Buckle
- 3. Harness Adjustment Button
- 4. Harness Adjuster
- 5. Lie Flat Adjustment Lever
- 6. Removable Insert
- 7. Adjustable Headrest
- 8. Chest pad
- 9. Handle Adjustment Button
- 10. Seat Belt Guide
- 11. Crotch Pad

Product Information

WARNING! The Avalon i-Size car seat is an approved i-Size restraint system under ECE R129 regulations for children measuring between 40 and 87 cm in height and weighing up to 13 kg. It is suitable for use in car seats that are compatible with "i-Size," as indicated by the vehicle manufacturer in the owner's manual.

When combined with the Avalon i-Size Infant Carrier, this child restraint system is approved for transporting children from birth, with a height range of 40 to 87 cm and a maximum weight of 13 kg. The seat must only be used in a rearward-facing position while the vehicle is in motion. Any modifications or alterations to the base or infant carrier will void this approval. Only the manufacturer is authorised to make such changes.

NOTE: For instructions on how to install the Avalon i-Size Infant Carrier, please refer to the installation manual provided with the infant carrier.

NEVER use this device in a front seat fitted with an active airbag. IT IS EXTREMELY DANGEROUS. Likewise,

NEVER use the i-Size base in a front seat equipped with an active airbag. THIS IS VERY DANGEROUS.

DANGER!



DO NOT use the infant carrier on a passenger seat fitted with an active airbag.

Airbag deployment against the infant carrier could cause serious injury or even be fatal to the child. Always refer to the vehicle's instruction manual for guidance.

When using car seats, consult the vehicle's manual and maintenance booklet to ensure compatibility with ISOFIX retention systems.

Warnings

IMPORTANT! PLEASE READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE This instruction manual should be kept with the child restraint system throughout its entire

IMPORTANT: This child restraint system must always be used in a rearward-facing position. WARNING! Never hold a baby on your lap while travelling in a vehicle. The forces in a collision are too strong to control. Never use a single vehicle safety belt to secure both yourself and a child.

WARNING! Never purchase a second-hand base.

WARNING! If you are unsure or need more information about the i-Size base for specific vehicles, contact the manufacturer of the restraint or your retailer.

WARNING! Never leave a child unattended in the car, even for short periods. Temperatures inside the vehicle can change rapidly and may become dangerous for the child.

WARNING! Do not use the base if it has any defects, is missing parts, or has been involved in an accident. It may have hidden but serious structural damage.

WARNING! Do not place items such as towels or cushions under the base, as this could affect the performance of the child restraint system in the event of an accident.

WARNING! Always check the vehicle's manual and maintenance booklet to ensure compatibility with ISOFIX restraint systems.

WARNING! Do not allow children to adjust or play with the i-Size base.

WARNING! Only use the installation methods specified in this manual. Using alternative methods could result in the base detaching from the seat.

Warnings

WARNING! Do not install the i-Size base on seats facing the wrong direction.

WARNING! Ensure the i-Size base is not obstructed by the door or a foldable seat.

WARNING! Do not modify, dismantle, or add anything to the base or infant carrier.

WARNING! Always secure your child using the safety harness.

WARNING! After an accident, both the base and the infant carrier must be replaced, along with the vehicle's seat belts. Even if they appear undamaged, they may no longer provide proper protection.

WARNING! Always ensure the infant car harness is correctly tightened to offer maximum protection for your child.

WARNING! Safety is only guaranteed if both the base and the infant carrier are installed according to these instructions.

WARNING! Secure any luggage or loose objects that could injure the child in the event of a collision.

Notice:


Notice regarding i-Size category Enhanced Child Restraint Systems (40-87 cm) This is an i-Size Enhanced Child Restraint System, approved according to UN Regulation No. 129, for use in i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle user manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.


Base Installation

Refer to the venicle's manual to locate the local way metal bars located between the backrest IMPORTANT! The ISOFIX anchor points are two metal bars located between the backrest IMPURIANT! The ISOCIA allohol points are two motal bars located between the backres and seat cushion of the car seats. If you're unsure, consult your car's instruction manual

IMPORTANT! Do not place any objects in the footwell in front of the child seat.

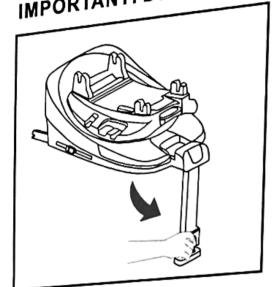


Always extend the support leg fully until it is positioned vertically.

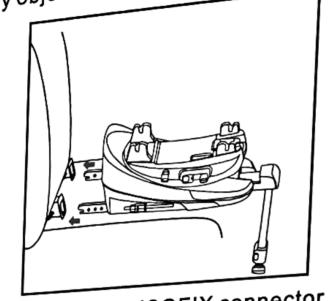

Release the ISOFIX connector locks.

Each clamp can be adjusted independently.


Press both buttons simultaneously and pull the ISOFIX connectors from the base until they are fully extended to their limit.

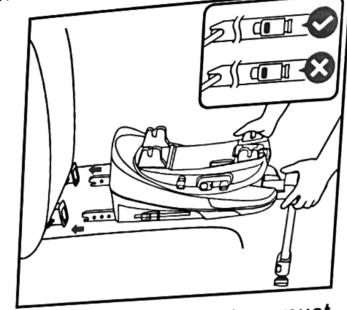


The ISOFIX connectors must securely latch onto the car seat's ISOFIX anchor points with an audible "click." Ensure the base is firmly in place by trying to pull it away from the ISOFIX connection guides.

The GREEN safety indicator should be clearly visible on both ISOFIX release buttons to confirm correct installation.

Base Installation

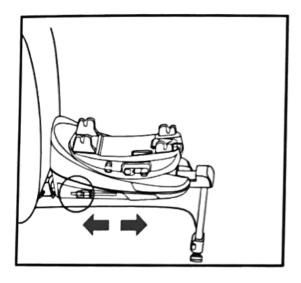


Push the base towards the backrest until it is fully aligned with it.

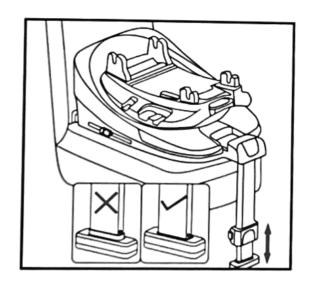

Ensure the support leg is securely positioned vertically. Press the adjustment button to extend the support leg until it makes contact with the vehicle floor. The support leg indicator on the foot will turn GREEN to confirm proper installation.

Fixing the Infant Carrier to the Base

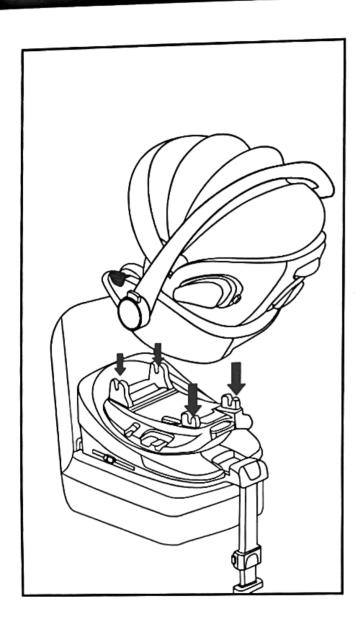

IMPORTANT! Ensure the base surface is free of any loose objects, and secure the child using the integrated harness system to ensure proper installation of the base in the vehicle.


- Ensure that both locking bars (6) are securely engaged with the ISOFIX anchor points (A) of the car seat.
- Position the infant carrier onto the base, ensuring the front is facing towards the backrest of the seat.

Fixing the Infant Carrier to the Base



-Check that the base indicator is GREEN. If the indicator is not GREEN, the infant carrier is not properly locked. If needed, repeat the procedure.

Adjusting for Body Size

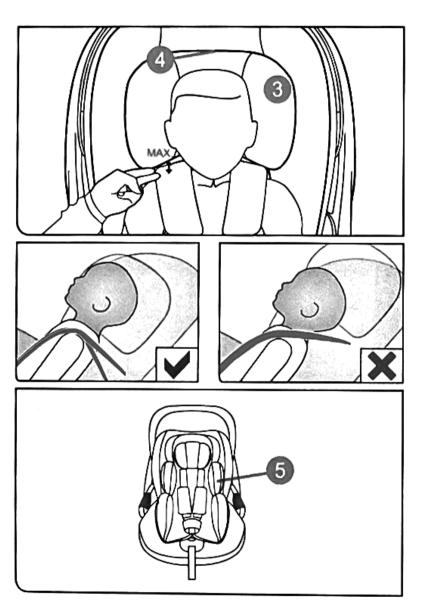

NOTE: The newborn insert provides added protection for your child and should be used until they reach 60 cm in height.


NOTE: The headrest (3) offers optimal protection and should be adjusted to the correct height. There are 8 available height positions. Adjust the headrest so that the distance between your child's shoulders and the headrest is no more than 2 cm (approximately the width of two fingers).

Check the Height of the Harness Straps: Position the harness straps at or just below your child's shoulders for rear-facing use. To adjust the headrest, pull the adjustment Handle (4) upwards to unlock it, then adjust the height as needed.

NOTE: The shoulder straps are securely attached to the headrest and do not require separate adjustment.

Removing the Newborn insert: The newborn insert (5) can be removed once the baby reaches 61 cm (approximately 3 months) to provide more room. To remove the insert, open and remove the shoulder pads, then take out the newborn insert. Reattach the shoulder pads to the shoulder straps once the inlay is removed.

Securing the child with the harness system

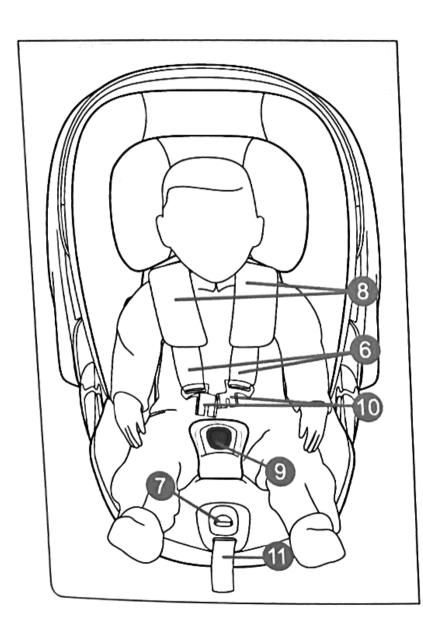

NOTE: Ensure the headrest is securely locked in place before using the car seat.

NOTE: Make sure the car seat is free from toys and hard objects. The shoulder belts (6) are securely attached to the headrest and should not be adjusted separately. Loosen the Harness belts (6) by pressing the adjustment button on the central Harness adjuster (7) and simultaneously pulling both Harness Belts upwards.


NOTE: Always pull the Harness Belts (6), not the chest pads (8).

Press the Harness Buckle Button (9) by firmly pressing the red button.

NOTE: Ensure the Harness belts (6) are not twisted. Place your child in the car seat, ensuring the Harness belts (6) are positioned directly over their shoulders. Join both Harness Connector (10) together and insert them into the Harness Buckle (9) until you hear an audible "CLICK." Gently pull the central Harness adjuster (11) to tighten the Harness belts (6) until they fit snugly around your child's body.


NOTE: For optimum protection, the Harness belts (6) should fit as closely as possible to your child's body.

Infant Carrier Removal

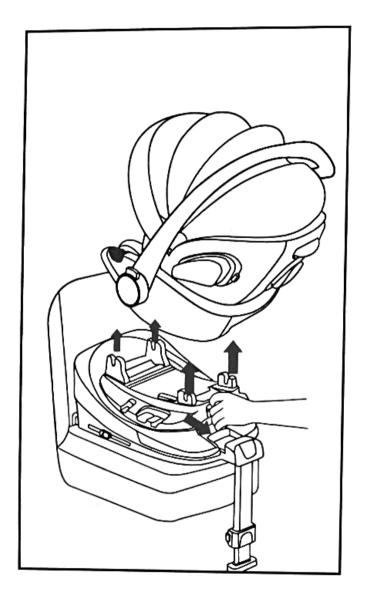

Pull the release button to unlock the infant carrier, then lift the carrier using the handlebar. The base indicator will turn red.

Removing the Base from the Vehicle

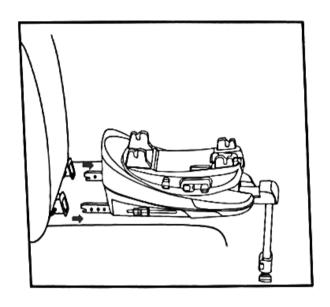

- Simultaneously press the buttons to unlock both ISOFIX connectors and extract them from the vehicle's ISOFIX connection guides.
- Remove the base from the ISOFIX anchor points.
- Return the connectors to their original position.
- Press the adjustment button to return the support leg to its original position, then fold it to save space.

Car Safety

WARNING! In the event of sharp braking or an accident, loose or unsafe objects could cause injury to other passengers. Always ensure: Seat backrests are locked (e.g., trigger the tipper rear seats into place). All car passengers wear safety belts. The seat is always securely attached to the car seat, even when not in use.

WARNING! The infant carrier and the base must always be fixed correctly in the vehicle, even when not in use. In the event of emergency braking or an accident, an unsecured seat can injure other passengers or yourself.

Car Safety

In order to ensure the best possible safety for all passengers, make sure:

- When installing the infant carrier in the front passenger seat, adjust the seat to the rearmost position.
- All objects that can cause injury in the event of an accident are adequately secured.
- The car safety belt buckle does not completely reach the end of the belt. If in doubt, contact your dealer or car seat manufacturer.

Protecting your Car

When using the i-Size Base, it's important to note that traces of use and/or discoloration may appear on certain vehicle seats made with delicate materials such as velvet or leather. Cozy N Safe cannot be held responsible for any damage or marking of the vehicle seat upholstery.

In this regard, please refer to our cleaning instructions. It is essential that these instructions are followed before the base is used for the first time.

Product Cleaning and Care

Plastic parts can be cleaned with a mild detergent and warm water.

WARNING! Please do not use chemical cleaners or bleach detergents (ammonia, petrol, solvents, etc.) under any circumstances. All critical parts of the base must be regularly checked to ensure they are not damaged. All mechanical components must function correctly. It is essential to ensure that the base is not obstructed between rigid objects such as vehicle doors or seat guides, as this could cause damage. This type of product requires careful and regular maintenance by the user. Protect the product from atmospheric agents, water, rain, and snow. If necessary, immediately dry all metal parts to prevent rust formation. DO NOT store the product if it is wet. DO NOT leave it in humid environments. Mold can form when a product is left in humid environments without sufficient air circulation to dry the surface.

Product Cleaning and Care

What to do after an accident:

WARNING! An accident can cause damage to the child restraint system that is not clearly visible. The base must be replaced even if it appears intact after an accident. If in doubt, contact your dealer or manufacturer.

Product Lifespan

This product has been designed to perform its intended functions with ordinary use for a product life of approximately 6 years. Gradual wear of plastic, for example caused by exposure to sunlight (UV), can lead to a slight deterioration of product properties. Since very high temperature fluctuations and other unpredictable stresses are common in vehicles, the following points must be observed:

- If the vehicle is directly exposed to strong sunlight for extended periods, the base must be removed from the vehicle or covered with a light cloth.
- Regularly check all plastic and metal parts of the base for any damage or changes in shape or colour.

If you notice any changes in the base, it must be disposed of or checked and replaced by the manufacturer if necessary.

Disposal

To protect the environment, we ask the user to separate and dispose of the waste arising at the beginning (packaging) and at the end (parts of the product) of the base's life. Waste disposal is organized differently according to local authorities. To ensure that the product is disposed of in accordance with regulations, contact your local waste disposal agency or local authority. Always observe the waste disposal regulations of your country, you'd like to be revised!

WARRANTY

To activate the extended warranty for your COZY N SAFE products, please complete the warranty registration form provided on www.cozynsafe.com within 30 days of purchase or receipt. The initial 12-month warranty will then be extended to 24 months from the date of purchase and is applicable only to the original buyer; it cannot be transferred. Warranty claims are accepted only for products without existing warranty coverage. In case of defects, consumers should return the product to the retailer with a complete and detailed description of the issue, along with the valid purchase receipt. The retailer will then facilitate the return of the product to the manufacturer. Replacement or return of the product is not guaranteed. Maintenance of the product does not extend the warranty period. The manufacturer is not responsible for any damage resulting from misuse of the product. Below are situations that cannot be warranted:

Do not provide the complete valid purchasing receipt to the manufacturer. Do not deviate from the instructions provided in the manual. Operating or maintaining the product incorrectly may result in defects. Carelessness can also lead to product defects. Avoid damaging or erasing the product series number label. Normal wear during daily use of the product is expected. Failure to meet warranty requirements may result in denial of the warranty claim.





CHILD INFORMATION (KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY) NAME:	
DATE OF BIRTH (DD/MM/YYYY):	
ADDRESS:	•••••
ALLERGIES/MEDICAL CONDITIONS:	
EMERGENCY CONTACT 1: NAME:	
PHONE NUMBER:	
EMERGENCY CONTACT 2: NAME:	
PHONE NUMBER:	•••••

www.cozynsafe.com

Cozy N Safe

UNIT 25 PEDMORE Road Industrial Estate, PEDMORE Road, BRIERLEY HILL, WEST MIDLANDS, DY5 1TJ Tel:+44 (0) 1902 494 905 Email:enq@cozynsafe.com EU Authorized Representative: Authorized Representative service, EURO STOCK VENTURE TRADERS LTD UNIT 1,3 O'CONNELL SQUARE, EDENDERRY CO.OFFALY,R45 YR13, Republic of Ireland